

Manuals.plus /

› WONNIE /

› WONNIE 12.5" Portable DVD Player User Manual

## WONNIE W-103

# WONNIE 12.5" Portable DVD Player User Manual

Model: W-103

Brand: WONNIE

## 1. INTRODUCTION

---

This manual provides essential information for the proper use and maintenance of your WONNIE 12.5" Portable DVD Player. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. This portable DVD player features a 10.5" swivel screen, a rechargeable battery, and supports various media formats, making it suitable for entertainment at home or on the go.

## 2. WHAT'S IN THE BOX

---

Carefully unpack your new portable DVD player and ensure all items listed below are present and in good condition. If any items are missing or damaged, please contact customer support.

- 1 x DVD Player
- 1 x Car Headrest Holder
- 1 x Remote Control
- 1 x AC Power Adaptor
- 1 x Car Charger

# PACKING LIST



DVD Player

- DC IN
- POWER ON/OFF
- AV IN
- AV OUT
- EARPHONE
- SD/MMC CARD
- USB



Car charger



3.5mm RCA Cable



AC Adaptor



User Manual



Remote Control



Car Headrest Mount Holder

Image: The packing list showing the DVD player, car headrest holder, remote control, AC power adaptor, car charger, and user manual.

## 3. PRODUCT FEATURES AND OVERVIEW

The WONNIE Portable DVD Player is designed for versatile entertainment, featuring a high-resolution screen and multiple connectivity options.

### 3.1 High-Resolution Swivel Screen

The device features a 12.5-inch player with a 10.5-inch 1024x600 high-resolution LCD screen. The screen can rotate 270 degrees and flip 180 degrees, allowing for flexible viewing angles and comfortable use in various environments.



## 270° & 180° SWIVEL SCREEN

Adjust your most comfortable angle to watch the video



Image: Demonstrates the 270-degree rotation and 180-degree flip capability of the screen for optimal viewing comfort.

### 3.2 Power Options and Battery Life

Equipped with a high-capacity rechargeable Lithium Polymer battery, the player offers up to 5 hours of continuous video playback. For extended use, it includes an AC power adaptor for home charging and a car charger for use in vehicles.

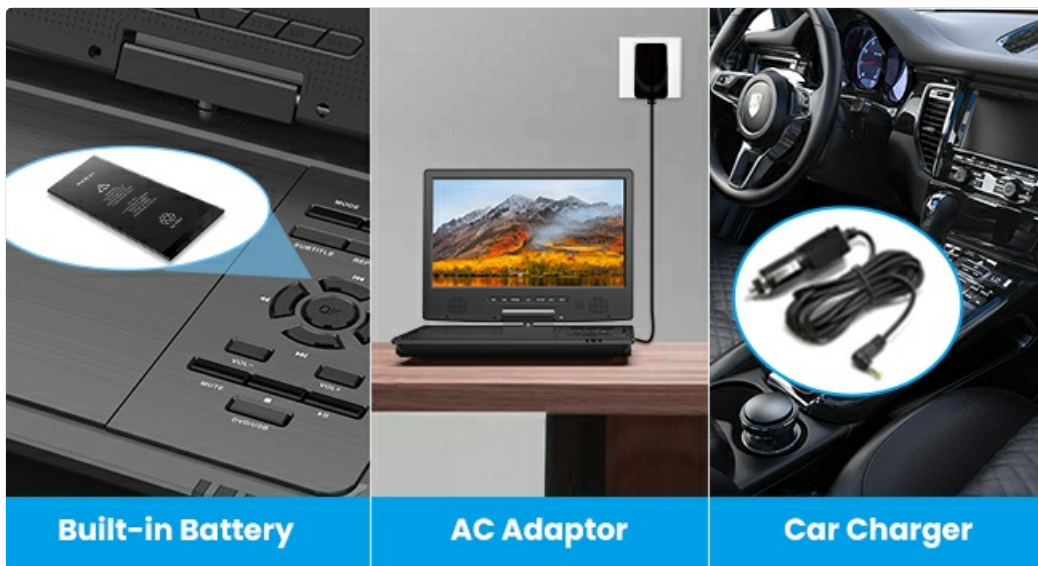


Image: Illustrates the three power methods: the internal rechargeable battery, the AC power adaptor for wall outlets, and the car charger for vehicle use.

### 3.3 Controls and Interface

The player features a unique button design located under the screen and on the panel for direct control. A remote control is also included for convenient operation from a distance.

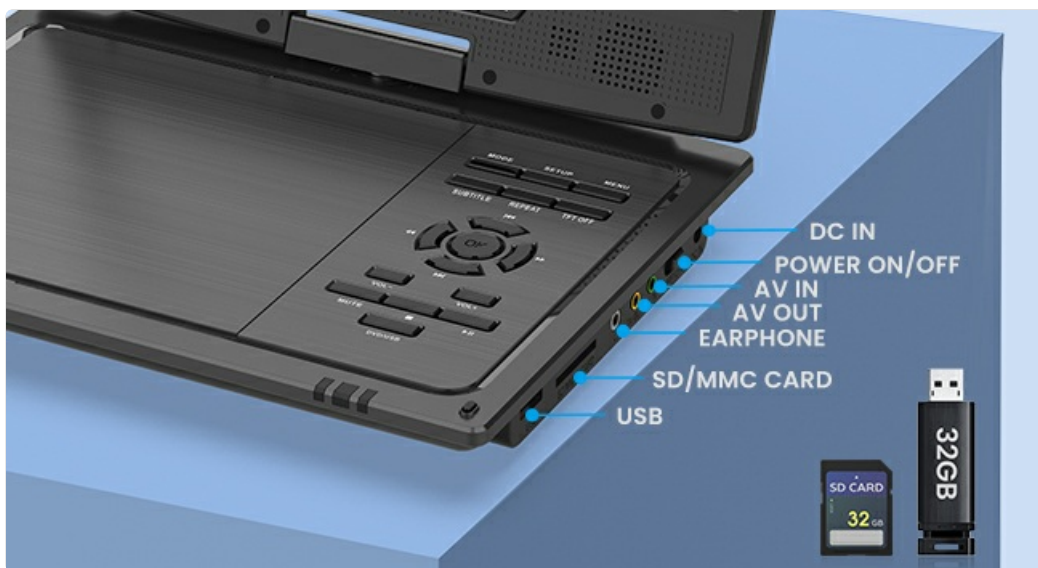


Image: A detailed view of the player's side, highlighting ports such as DC IN, Power ON/OFF, AV IN, AV OUT, Earphone jack, SD/MMC Card slot, and USB port.

### 3.4 Media Compatibility

The player is region-free and supports a wide range of disc formats including DVD, DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW, CD-RW, VCD, and SVCD. It does not support Blu-ray discs. Additionally, it features USB and SD card slots (up to 32GB, FAT32 format, 720x576 pixels) for playing digital media files such as JPG, JPEG (images), MP3, WMA (audio), and AVI, MPEG 1, MPEG 2, MPG (video).

# SUPPORT MULTIPLE DVD FORMATS



Image: Visual representation of the various disc formats (SVCD, VCR, DVD-RW, CD, HDCD, EVD, DVD, CD-R, DVD-R) and digital media (SD card, USB) supported by the player.

## 3.5 Audio Features

Integrated dual high-power stereo speakers provide clear and loud audio. A 3.5mm earphone jack is also available for private listening.

## 3.6 Last Memory Function

The break-point memory function allows the player to resume playback from where it was last stopped, even after powering off.



Image: Shows the player resuming a video from the exact point it was turned off, demonstrating the last memory function.

## 4. SETUP

---

### 4.1 Initial Charging

1. Connect the AC power adaptor to the DC IN port on the player.
2. Plug the adaptor into a standard wall outlet.
3. Allow the player to charge fully before first use (approximately 5 hours for a full charge). The charging indicator light will typically change color or turn off when charging is complete.

### 4.2 Car Installation (Optional)

Use the included car headrest holder to securely mount the DVD player in your vehicle. Connect the car charger to the DC IN port and your car's cigarette lighter socket for power during travel.



Image: The portable DVD player installed on a car headrest, demonstrating its use for entertaining passengers during road trips, with an inset showing the unique button design.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On/Off

Press the POWER ON/OFF button located on the device or the remote control to turn the player on or off.

### 5.2 Playing a DVD/CD

1. Open the disc cover.
2. Carefully place a DVD or CD onto the spindle, ensuring it clicks into place.
3. Close the disc cover.
4. The player will automatically detect and begin playing the disc. Use the control buttons on the player or remote for playback functions (Play, Pause, Stop, Skip, Volume).

### 5.3 Using USB/SD Card

1. Insert a USB flash drive into the USB port or an SD/MMC card into the SD/MMC CARD slot.

2. The player should automatically switch to USB/SD mode or prompt you to select the source.
3. Navigate through your files using the directional buttons and select the desired media (images, audio, or video) to play.

## 5.4 Connecting to an External Display (TV/Projector)

The player supports AV In/Out functionality. Use the included 3.5mm RCA cable to connect the player to a TV or projector.

1. Connect one end of the 3.5mm RCA cable to the AV OUT port on the DVD player.
2. Connect the other end (red, white, yellow plugs) to the corresponding AV IN ports on your TV or projector.
3. Select the correct AV input source on your TV/projector.
4. The player's screen will turn off by default when connected to an external display to ensure optimal playback quality on the larger screen.



Image: A family watching a movie on a large television, with the portable DVD player connected via RCA cable, demonstrating the sync screen to TV feature.

## SYNC SCREEN TO PROJECTOR



Image: The portable DVD player connected to a projector via RCA cables, displaying a scenic mountain view on a large screen.

## 5.5 Connecting to Another DVD Player

You can sync the screen to another DVD player (AV cable not included for this setup).

1. Connect an AV cable (not included) from the AV OUT port of the primary player to the AV IN port of the secondary player.
2. Ensure both players are powered on and set to the correct input/output modes.

## SYNC SCREEN TO ANOTHER DVD PLAYER

(NOTE: The AV Cable NOT Included)



Image: Two portable DVD players side-by-side, connected by a cable, showing the same movie on both screens, illustrating the sync screen to another DVD player feature.

## 6. MAINTENANCE

### 6.1 Cleaning the Device

- Use a soft, dry cloth to clean the exterior of the player.
- For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use abrasive cleaners or solvents.
- Keep the disc compartment free of dust and debris.

### 6.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.

- If storing the player for an extended period, charge the battery to about 50% and store in a cool, dry place.

### 6.3 Disc Handling

- Always handle discs by their edges to avoid fingerprints and scratches.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your WONNIE Portable DVD Player, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Player does not power on.	Low battery or power connection issue.	Ensure the player is fully charged or connected to a power source (AC adaptor or car charger). Check power cables for damage.
Disc does not play or skips.	Disc is dirty, scratched, or incompatible format.	Clean the disc. Try a different disc. Ensure the disc format is supported (not Blu-ray).
No sound.	Volume too low, mute activated, or headphone issue.	Increase volume. Check if mute is on. If using headphones, ensure they are properly plugged in and functional.
No picture on external TV/projector.	Incorrect cable connection or TV input.	Ensure AV cable is securely connected to AV OUT on player and AV IN on TV/projector. Select the correct AV input source on your TV/projector.
USB/SD card not recognized.	Incompatible format, corrupted files, or card size exceeds limit.	Ensure USB/SD card is formatted to FAT32 and does not exceed 32GB. Check if media files are supported (JPG, MP3, AVI, MPEG). Try reinserting or using a different card/drive.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	W-103
Screen Size	10.5 Inches (12.5" player size)
Display Type	LCD
Screen Resolution	1024x600
Swivel Angle	270° Rotation, 180° Flip
Battery Type	Lithium Polymer (included)
Battery Life	Up to 5 hours
Supported Disc Formats	DVD, DVD+R, DVD-R, DVD+RW, DVD-RW, CD, CD+R, CD-R, CD+RW, CD-RW, VCD, SVCD (Region-free, No Blu-ray)
Supported Digital Media	USB, SD/MMC Card (max 32GB FAT32, 720x576 pixels)
Supported File Formats	<b>Images:</b> JPG, JPEG <b>Audio:</b> MP3, WMA <b>Video:</b> AVI, MPEG 1, MPEG 2, MPG
Audio Output	Dual Stereo Speakers, 3.5mm Earphone Jack
Video Output	AV Out (RCA cable included)
Product Dimensions	12 x 3.5 x 8 inches
Item Weight	3.21 pounds
Color	Black

## 9. WARRANTY AND SUPPORT

WONNIE provides a new replacement or refund for any reason within 365 days of purchase. Professional technical support is available to assist with any questions or concerns you may have.

For assistance, please contact WONNIE customer service through the "Get Product Support" option on Amazon or via the after-sales email provided with your product. We aim to reply within 24 hours.

Please retain your proof of purchase for warranty claims.