

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer Smart Wi-Fi Plug User Manual - Model S19954

Energizer S19954

Energizer Smart Wi-Fi Plug User Manual

Model: S19954

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Energizer Smart Wi-Fi Plug (Model S19954). This device allows you to control connected appliances remotely, set schedules, monitor power consumption, and integrate with smart home assistants like Amazon Alexa and Google Home.



Image: The Energizer Smart Wi-Fi Plug, showing the product packaging and two individual smart plugs.

IMPORTANT SAFETY INFORMATION

- Read all instructions carefully before use.
- Do not disassemble or modify the device.
- Ensure the plug is used within its specified electrical ratings.

- Keep out of reach of children.
- Do not use in wet or damp conditions.
- Avoid connecting high-power appliances that exceed the plug's maximum load.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Energizer Smart Wi-Fi Plug(s) (Quantity may vary based on purchase)
- User Manual (This document)

PRODUCT FEATURES

The Energizer Smart Wi-Fi Plug offers a range of functionalities to enhance your home automation:

- **Remote Control:** Control connected devices from anywhere using the Energizer Smart App.
- **Voice Control:** Compatible with Amazon Alexa, Google Home, and Siri for hands-free operation.
- **Scheduling & Timers:** Set custom schedules and countdown timers for automatic on/off actions.
- **Power Monitoring:** Track energy consumption of connected appliances.
- **No Hub Required:** Connects directly to your 2.4 GHz Wi-Fi network.
- **Group Control:** Manage multiple smart plugs simultaneously.



Image: A close-up view of the Energizer Smart Plug, highlighting its compact design and power button.

SETUP GUIDE

Follow these steps to set up your Energizer Smart Wi-Fi Plug:

1. Download the Energizer Smart App

1. Search for "Energizer Smart" in the Apple App Store (for iOS devices) or Google Play Store (for Android devices).
2. Download and install the app.
3. Register for a new account or log in if you already have one.

2. Prepare for Connection

- Ensure your Wi-Fi network is 2.4 GHz. The plug does not support 5 GHz networks.
- Place the smart plug within range of your Wi-Fi router.

- Plug the Energizer Smart Wi-Fi Plug into a standard wall outlet. The indicator light should start blinking, indicating it's in pairing mode. If not, press and hold the power button on the plug for 5-10 seconds until it blinks rapidly.

LEICHTE EINRICHTUNG



Image: An illustration demonstrating the simple setup process, connecting the smart plug to a lamp and a wall outlet, emphasizing no hub is needed and 2.4 GHz Wi-Fi.

3. Add Device in App

1. Open the Energizer Smart App.
2. Tap the "+" icon (usually in the top right corner) to add a new device.
3. Select "Electrical Outlet" or "Smart Plug" from the device list.
4. Confirm that the indicator light on the plug is blinking rapidly.
5. Enter your 2.4 GHz Wi-Fi network name and password.
6. Follow the on-screen instructions to complete the pairing process. Once connected, the indicator light will stop blinking and remain solid.
7. You can rename your smart plug within the app for easier identification (e.g., "Living Room Lamp").

App Control

Once successfully paired, you can control your smart plug from anywhere using the Energizer Smart App:

- Tap on the device name in the app to access its control interface.
- Toggle the power button to turn the connected appliance on or off.
- Explore other features like scheduling, timers, and power monitoring within the app.



Image: A smartphone displaying the intuitive Energizer Smart App interface, allowing remote control and management of smart devices.

Voice Control (Alexa, Google Home, Siri)

To enable voice control, you need to link your Energizer Smart account with your preferred smart assistant:

1. **For Amazon Alexa:**
 - Open the Alexa app.


- Go to "Skills & Games" and search for "Energizer Smart".
- Enable the skill and link your Energizer Smart account.
- Discover devices. You can then say, for example, "Alexa, turn on Living Room Lamp."

2. For Google Home:

- Open the Google Home app.
- Tap "+" > "Set up device" > "Works with Google".
- Search for "Energizer Smart" and link your account.
- You can then say, for example, "Hey Google, turn off Kitchen Light."

3. For Siri Shortcuts:

- Within the Energizer Smart App, navigate to the device settings.
- Look for an option to "Add to Siri" or "Siri Shortcuts".
- Create custom voice commands for specific actions.

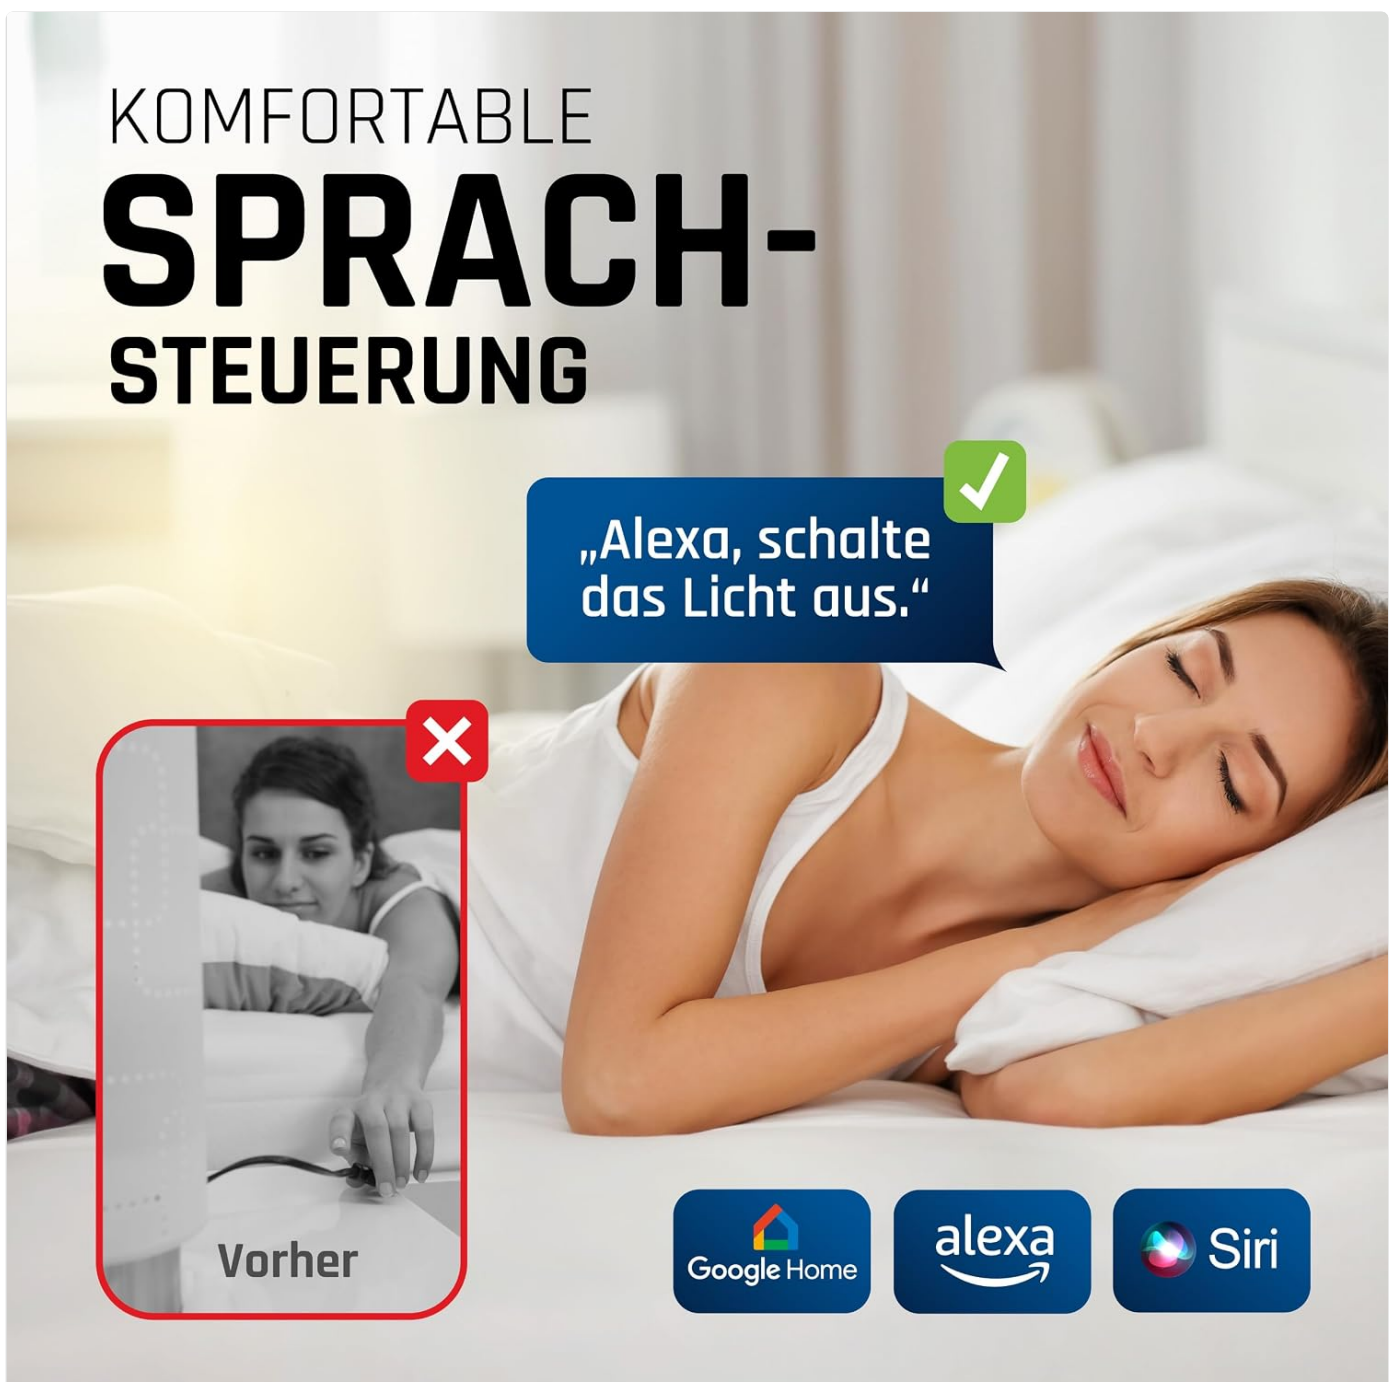

KOMFORTABLE SPRACH- STEUERUNG

„Alexa, schalte
das Licht aus.“

  Vorher

Image: A visual representation of comfortable voice control, showing a person using an Alexa command to turn off a light, eliminating the

need to reach for a physical switch.

Timer and Scheduling

Automate your devices by setting schedules and timers:

- **Schedules:** In the app, select your smart plug and go to the "Schedule" or "Timer" section. You can set specific times for the plug to turn on or off on chosen days of the week.
- **Countdown Timer:** Set a countdown for the plug to turn off after a certain duration.
- **Away Mode:** Some apps offer an "Away Mode" feature that randomly turns devices on and off to simulate occupancy when you are away.



Image: An illustration depicting the timer function and individual scheduling capabilities, showing a lamp turning off at a set time for a child's bedtime routine.

Power Monitoring

The Energizer Smart Wi-Fi Plug can track the energy consumption of connected devices:

- Access the power monitoring feature within the Energizer Smart App for your plug.
- View real-time power usage and historical data to understand energy consumption patterns.

MISST DEN **STROMVERBRAUCH**



Image: A smartphone screen displaying the power consumption monitoring feature within the app, allowing users to track energy usage and costs.

MAINTENANCE

- Clean the smart plug with a dry, soft cloth. Do not use liquid cleaners.
- Ensure the plug is unplugged before cleaning.
- Store in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Solution
Plug not connecting to Wi-Fi	• Ensure your Wi-Fi network is 2.4 GHz. • Check if the Wi-Fi password is entered correctly. • Move the smart plug closer to your Wi-Fi router. • Reset the smart plug by holding the power button for 5-10 seconds until the indicator light blinks rapidly, then try pairing again. • Restart your Wi-Fi router.
Voice control not working	• Ensure your Energizer Smart account is correctly linked to Alexa or Google Home. • Check if the device name in the Energizer Smart App matches the name used in voice commands. • Try rediscovering devices in your Alexa or Google Home app.
Plug is unresponsive	• Check if the plug is receiving power. • Verify your Wi-Fi connection is stable. • Unplug the smart plug from the wall outlet, wait 10 seconds, and plug it back in.

SPECIFICATIONS

Attribute	Detail
Model Number	S19954
Brand	Energizer
Connectivity	2.4 GHz Wi-Fi (IEEE 802.11 b/g/n)
Control Mode	Automatic, Voice Control, App Control
Compatibility	Amazon Alexa, Google Home, Siri
Mounting Type	Surface Mount
Connector Type	Screw
Package Dimensions	16.8 x 14.3 x 8.8 cm
Weight	290 g

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Energizer website or contact their customer service. Details are typically provided on the product packaging or on the manufacturer's official support pages. You can visit the Energizer Store on Amazon for more products and information:[Energizer Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CMTGYZLJ>

More documents and user manuals: <https://manuals.plus/>