

[Manuals.plus](#) /

> [Renimer](#) /

> Renimer i50 Mini Bluetooth 5.3 Wireless Earbuds User Manual

Renimer i50

Renimer i50 Mini Bluetooth 5.3 Wireless Earbuds User Manual

Model: i50

INTRODUCTION

This manual provides detailed instructions for the Renimer i50 Mini Bluetooth 5.3 Wireless Earbuds. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.

PACKAGE CONTENTS

- Wireless Bluetooth Earbuds x 2
- Charging Case x 1
- USB-C Cable x 1
- User's Manual (English, Spanish, etc.) x 1





Image: The Renimer i50 wireless earbuds in their charging case, displaying the LED battery indicator.

SETUP

1. Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and to a power source. The LED display on the charging case will show the charging progress. A full charge for the case typically takes 1.5-2 hours.

2. Powering On/Off

- **Power On:** Open the charging case. The earbuds will automatically power on.

- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

3. Bluetooth Pairing

1. Ensure the earbuds are charged and powered on (open the charging case).
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices. You should see "i50" or "Renimer i50" in the list.
4. Select "i50" to connect. Once paired, the earbuds will automatically connect to your device when the charging case is opened, provided Bluetooth is enabled on your device.

The Renimer i50 earbuds support Bluetooth 5.3 for stable and fast connections with iOS, Android, and Windows systems.

OPERATING INSTRUCTIONS

Touch Controls

The earbuds feature high-precision touch controls on the outer surface (marked with the logo). Refer to the table below for common functions:

Action	Function
Single Tap (Left/Right Earbud)	Play/Pause Music, Answer/End Call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap (Right Earbud)	Volume Up
Triple Tap (Left Earbud)	Volume Down
Long Press (2 seconds)	Activate Voice Assistant, Reject Call

LED Battery Display

The charging case features a smart digital LED display that shows the remaining power percentage (0-100%) for the case, and individual battery indicators for the left and right earbuds.

Single/Twin Mode

The earbuds can be used individually (single mode) or as a pair (twin mode). Simply take one earbud out of the case to use it alone, or both for stereo sound.

MAINTENANCE

To ensure the longevity and optimal performance of your Renimer i50 earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using abrasive materials or harsh chemicals.
- **Water Resistance:** The earbuds are IP7 waterproof, meaning they are protected against immersion in water up to 1 meter for up to 30 minutes. However, they are not designed for swimming or prolonged submersion. Ensure the charging port is dry before charging.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged. Avoid extreme temperatures.

- **Charging:** Use only the provided USB-C cable for charging.

TROUBLESHOOTING

If you encounter issues with your Renimer i50 earbuds, please refer to the following common solutions:

Problem	Solution
Earbuds not pairing	◦ Ensure earbuds are charged and out of the case. ◦ Turn off and on Bluetooth on your device. ◦ Forget "i50" from your device's Bluetooth list and re-pair. ◦ Restart your device.
Only one earbud working	◦ Place both earbuds back into the charging case, close the lid, then open it again. ◦ Ensure both earbuds are charged. ◦ Try re-pairing the earbuds.
No sound or low volume	◦ Check the volume level on both your device and the earbuds. ◦ Ensure earbuds are properly connected to your device. ◦ Clean any debris from the earbud speakers.
Charging case not charging	◦ Ensure the USB-C cable is securely connected to both the case and the power source. ◦ Try a different USB-C cable or power adapter.

SPECIFICATIONS

Feature	Detail
Model Name	i50
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	15 Meters
Audio Driver Size	14.2 Millimeters
Frequency Range	20Hz - 20,000Hz
Impedance	24 Ohm
Control Type	Touch Control
Earbud Battery Life	Up to 8 Hours (single charge)
Charging Case Battery Life	Up to 48 Hours (with case)

Feature	Detail
Charging Time (Case)	1.5-2 Hours
Charging Port	USB-C
Water Resistance Level	IP7 Waterproof
Item Weight	40 Grams (total)
Product Dimensions	1.57 x 0.59 x 1.97 inches
Compatible Devices	iOS, Android (9.0+/5.0+), Windows (Bluetooth 4.0+)

WARRANTY AND SUPPORT

Renimer provides a comprehensive warranty and customer support for its products.

- **Warranty Period:** The product comes with a 365-day warranty service.
- **Returns & Refunds:** 30-day returns and refunds are available.
- **Coverage:** This warranty covers missing product parts, product malfunction, and product damage not caused by misuse.



Image: Graphic detailing Renimer’s 365-day warranty service, covering missing parts, malfunction, and damage.

For any product quality issues or support inquiries, please contact Renimer customer service through the platform of purchase or visit the official Renimer website for contact details. We aim to provide a 100% satisfactory solution within the warranty period.

