

KOMOK JYH-606

KOMOK Electric Pruning Shears User Manual

Model: JYH-606

1. INTRODUCTION

Thank you for choosing the KOMOK Electric Pruning Shears. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new tool. Please read it thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in serious injury or property damage.

- Always wear appropriate personal protective equipment, including safety glasses and gloves, when operating the pruning shears.
- Keep hands and fingers clear of the blades at all times. The blades are extremely sharp and powerful.
- Ensure the safety switch is engaged when the tool is not in use or during maintenance.
- Do not allow children or untrained individuals to operate the pruning shears.
- Avoid operating in wet conditions or near flammable liquids or gases.
- Use only original KOMOK batteries and chargers.
- Store the tool and batteries in a dry, secure location away from direct sunlight and extreme temperatures.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

1 x Electric Pruning Shears

- 1 x Tool Case
- 1 x Pair of Work Gloves
- 1 x Charger (with dual charging leads)
- 2 x Allen Wrenches
- 1 x Oil Bottle (lubricant)
- 2 x 2Ah Lithium Batteries
- 1 x User Manual



Figure 3.1: Included Components. This image displays the electric pruning shears, a carrying case, work gloves, a charger, two Allen wrenches, a small oil bottle, two lithium batteries, and the user manual.

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your KOMOK Electric Pruning Shears:



Figure 4.1: Pruning Shears Components. Key parts include the movable blade, fixed blade, lubricant oil port, ergonomic non-slip handle, lanyard hole, power switch, trigger, battery removal button, battery indicator, and the 2Ah Lithium Battery.

5. SETUP

5.1 Charging the Batteries

1. Connect the charger to a power outlet.
2. Insert the two 2Ah lithium batteries into the charger's dual charging leads.
3. The charging indicator light on the charger will typically be red during charging and turn green when fully charged.
4. A single battery typically charges in 2-3 hours. When charging both batteries simultaneously, allow sufficient time for a full charge.



Figure 5.1: Battery Charging. The image highlights the 21V 2000mAh lithium batteries and indicates a charging time of 2-3 hours per battery.

5.2 Installing the Battery

1. Ensure the pruning shears are turned off and the safety switch is engaged.
2. Align the fully charged battery with the battery slot at the base of the pruning shears handle.
3. Slide the battery firmly into place until it clicks, indicating it is securely locked.



Figure 5.2: Battery Installation. This image illustrates the process of inserting the battery into the tool, followed by activating the safety switch and preparing for operation.

6. OPERATING INSTRUCTIONS

6.1 Starting the Pruning Shears

1. After installing the battery, locate the power switch (usually on the side or top of the handle). Turn it ON. The LED indicator will turn green, and the shears will beep twice.
2. To activate the blades, quickly pull the trigger twice. The blades will open, indicating the tool is ready for use.

6.2 Pruning Procedure

1. Position the branch to be cut between the open blades. Ensure the branch diameter does not exceed the maximum cutting capacity of 30mm (1.2 inches).
2. Firmly grasp the handle and pull the trigger to close the blades and make the cut. Release the trigger to open the blades for the next cut.
3. For optimal performance and to prevent blade damage, avoid forcing the shears through branches that are too thick or hard.
4. The tool features a sleep mode that activates after 60 seconds of inactivity to conserve battery and enhance safety. To resume operation, pull the trigger twice.



Figure 6.1: Cutting Action. The image demonstrates the shears in use, cutting a branch, and emphasizes the brushless motor technology for efficient operation.

6.3 Ergonomics and Handling

The design of the KOMOK Electric Pruning Shears is intended for comfortable one-handed operation, reducing strain during prolonged use.

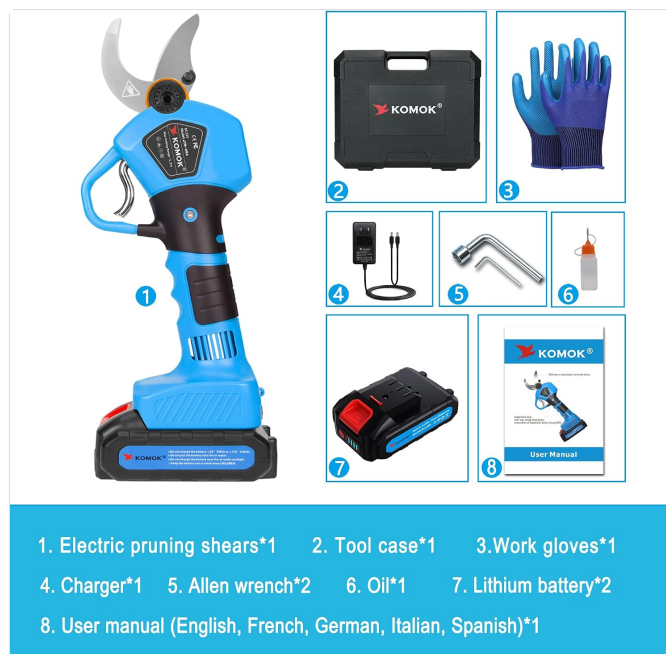


Figure 6.2: One-Handed Operation. This image highlights the ergonomic design, showing how the tool can be comfortably operated with one hand, reducing user fatigue.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pruning shears.

7.1 Blade Cleaning and Lubrication

1. After each use, ensure the tool is turned off and the battery is removed.
2. Clean the blades using a small scrub brush and a small amount of liquid soap to remove sap and debris.
3. Apply a few drops of the provided lubricant oil (or canola/mineral oil) to the blades and pivot points. This helps prevent rust and ensures smooth operation.

7.2 Blade Replacement

The SK5 high carbon steel blades are durable but may require replacement over time due to wear or damage. Use the provided Allen wrenches for this procedure. Refer to the detailed instructions in the included user manual for specific steps on blade replacement.

8. TROUBLESHOOTING

If you encounter issues with your KOMOK Electric Pruning Shears, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Shears do not turn on.	Battery not installed correctly or discharged. Safety switch off.	Ensure battery is fully charged and securely installed. Turn on the power switch. Pull the trigger twice quickly to activate.
Blades do not cut or cut slowly.	Blades are dull or dirty. Branch is too thick. Battery low.	Clean and lubricate blades. Ensure branch is within 30mm capacity. Recharge battery.
Charger light remains red after extended charging.	Faulty battery or charger.	Try charging a different battery if available. Contact customer support if issue persists.
Tool enters sleep mode frequently.	Inactivity.	This is a normal safety feature. Pull the trigger twice quickly to resume operation.

9. SPECIFICATIONS

Feature	Specification
Brand	KOMOK
Model Number	JYH-606
Cutting Diameter	Up to 30mm (1.2 inches)
Blade Material	SK5 High Carbon Steel
Motor Type	Brushless Motor
Wattage	600 watts
Battery Type	21V 2Ah Lithium Metal
Charging Time	2-3 hours per battery
Working Hours	8-10 hours (with 2 batteries)
Item Weight	Approximately 1.54 pounds (700 grams) with one battery
Product Dimensions	11.02"L x 4.49"W
Handle Material	Alloy Steel

10. WARRANTY INFORMATION

KOMOK provides a limited warranty for its products:

- **Pruning Shears:** 18-month warranty from the date of purchase.
- **Batteries:** 6-month warranty from the date of purchase.

This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, abuse, unauthorized modification, or normal wear and tear. Please retain your proof of purchase for warranty claims.

11. SUPPORT

For further assistance, technical support, or warranty claims, please contact KOMOK customer service through the retailer where the product was purchased or visit the official KOMOK brand store online.

Online Store: [KOMOK Store on Amazon](#)

© 2025 KOMOK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question