

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Volkano](#) /

› [Volkano Sleek Series True Wireless Earphones VK-1153-WT User Manual](#)

Volkano VK-1153-WT

Volkano Sleek Series True Wireless Earphones User Manual

Model: VK-1153-WT

INTRODUCTION

Thank you for choosing the Volkano Sleek Series True Wireless Earphones. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it carefully before use and retain it for future reference.

Safety Information:

- Do not expose the earphones or charging case to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the earphones or charging case.
- Keep out of reach of children.
- Dispose of the device responsibly according to local regulations.

PRODUCT OVERVIEW

What's in the Box

- Volkano Sleek Series TWS Earphones (Left and Right)
- Charging Case
- USB-C Charging Cable
- Instruction Manual (This document)

Component Identification



Figure 1: Closed Charging Case with Volkano Logo

This image shows the compact charging case in its closed state, featuring the Volkano brand logo on the top surface. The case protects and charges the earphones when not in use.



Figure 2: Earphones in Open Charging Case

This image displays the left and right earphones securely placed within the open charging case. The 'L' and 'R' indicators for left and right earbuds are visible, along with charging contacts.

SETUP

1. Charging the Earphones and Case

Before first use, fully charge the earphones and the charging case. This ensures optimal battery performance.

1. Insert the earphones into their respective slots in the charging case. Ensure they are seated correctly to make contact with the charging pins.

2. Connect the supplied USB-C charging cable to the charging port on the case and the other end to a 5V DC / 1A USB power adapter (not included).
3. The indicator light on the charging case will illuminate to show charging status. A full charge typically takes approximately 2 hours.
4. Once fully charged, disconnect the charging cable.

The charging case provides additional charges for the earphones, extending total listening time up to 16 hours.

2. Bluetooth Pairing

Follow these steps to pair your Volkano Sleek Series Earphones with your Bluetooth-enabled device:

1. Ensure the earphones are charged.
2. Open the charging case. The earphones will automatically power on and enter pairing mode. The indicator light on one earphone will flash, indicating it is ready to pair.
3. On your device (smartphone, tablet, laptop), navigate to the Bluetooth settings.
4. Enable Bluetooth and search for available devices.
5. Select "Volkano Sleek Series" from the list of found devices.
6. Once connected, a voice prompt will confirm successful pairing, and the earphone indicator lights will turn off or flash slowly.
7. If pairing fails, turn off the earphones, disable Bluetooth on your device, and repeat the steps.

The earphones will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

OPERATING INSTRUCTIONS

The Volkano Sleek Series Earphones feature touch controls for easy operation.

Power On/Off

- **Power On:** Open the charging case, and the earphones will power on automatically. Alternatively, press and hold the touch sensor on both earphones for 3 seconds.
- **Power Off:** Place the earphones back into the charging case and close the lid. They will power off automatically. Alternatively, press and hold the touch sensor on both earphones for 5 seconds.

Music Playback

- **Play/Pause:** Tap the touch sensor on either earphone once.
- **Next Track:** Double-tap the touch sensor on the right earphone.
- **Previous Track:** Double-tap the touch sensor on the left earphone.
- **Volume Up:** Triple-tap the touch sensor on the right earphone.
- **Volume Down:** Triple-tap the touch sensor on the left earphone.

Call Management

- **Answer/End Call:** Tap the touch sensor on either earphone once.
- **Reject Call:** Press and hold the touch sensor on either earphone for 2 seconds.

Voice Assistant

- **Activate Voice Assistant (Siri/Google Assistant):** Press and hold the touch sensor on either earphone for 3 seconds.

MAINTENANCE

Cleaning

- Use a soft, dry, lint-free cloth to clean the earphones and charging case.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts are clean and free of debris for proper charging.

Storage

- When not in use, store the earphones in their charging case to protect them and keep them charged.
- Store the device in a cool, dry place, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earphones not powering on.	Low battery.	Place earphones in the charging case and charge fully.
Cannot pair with device.	Bluetooth is off on device; earphones not in pairing mode; too far from device.	Ensure Bluetooth is enabled on your device. Open the charging case to put earphones in pairing mode. Keep earphones within 10m of your device. Try restarting both devices.
No sound or intermittent sound.	Volume too low; earphones not properly connected; interference.	Increase volume on your device and earphones. Re-pair the earphones. Move away from sources of strong electromagnetic interference.
Charging case not charging.	Faulty cable or power adapter; dirty charging port.	Try a different USB-C cable and power adapter. Clean the charging port gently.

SPECIFICATIONS

Model Number	VK-1153-WT
Bluetooth Version	5.3
Bluetooth Distance	Up to 10 meters
Driver Size	13mm
Sensitivity	117dB ± 3
Frequency Response	20Hz – 20kHz
Impedance	32Ω
Earbud Battery	30mAh

Charging Case Battery	230mAh
Charging Time	Approx. 2 Hours
Charging Port	USB-C
Charging Input	5V DC / 1A
IPX Level	IPX4 Water Resistant
Playback Time (50% Volume)	5.5 – 6 Hours
Playback Time (100% Volume)	3.5 – 4 Hours
Total Playtime with Case	Up to 16 Hours
Control Type	Touch Control
Voice Assistant Support	Google Assistant, Siri

WARRANTY INFORMATION

Your Volcano Sleek Series True Wireless Earphones are covered by a **1-Year Limited Manufacturer's Warranty** from the date of purchase.

This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

For warranty claims, please retain your proof of purchase. For more details on warranty terms and conditions, please refer to the official Volcano website or contact customer support.

Warranty Extension: You may be eligible to extend your coverage for an additional 12 months, totaling 24 months. Please visit the official Volcano website for registration details.

SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Volcano customer support:

- **Online Support:** Visit the official Volcano website for FAQs, troubleshooting guides, and contact forms.
- **Email Support:** Refer to your product packaging or the Volcano website for specific email contact information.

Please have your product model number (VK-1153-WT) and proof of purchase ready when contacting support.