

Volcano VKX-3000-BK

Volcano X Adder Series Bluetooth Speaker User Manual

Model: VKX-3000-BK

INTRODUCTION

Thank you for purchasing the Volcano X Adder Series Bluetooth Speaker. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your device. Please read it carefully to ensure optimal performance and longevity of your speaker.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or open flames.
- Avoid dropping or subjecting the speaker to severe impacts.
- Keep the speaker away from water and liquids, despite its IPX5 rating, to prevent damage to internal components.
- Do not attempt to disassemble or modify the speaker. This will void the warranty.
- Use only the provided charging cable or a certified equivalent.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

PRODUCT OVERVIEW

The Volcano X Adder Series Bluetooth Speaker is designed for portable audio with robust features.



Image Description: A front-angled view of the Volkano X Adder Series Bluetooth Speaker in black. It features two main speaker grilles with purple LED rings, a central Volkano logo, and a sturdy handle on top. The overall design is rugged and portable.

Package Contents:

- 1 x Volkano X Adder Series Bluetooth Speaker
- 1 x USB Charging Cable
- 1 x Instruction Manual

Key Features:

- Bluetooth 5.0 connectivity
- IPX5 Water Resistance
- Shock Resistance
- True Wireless Stereo (TWS) Pairing
- Built-in Microphone for Hands-free Calling
- 50 Watts Speaker Maximum Output Power

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port.

- The charging indicator light will illuminate during charging.
- Charging time is approximately 5 hours for a full charge.
- Once fully charged, the indicator light may change or turn off.

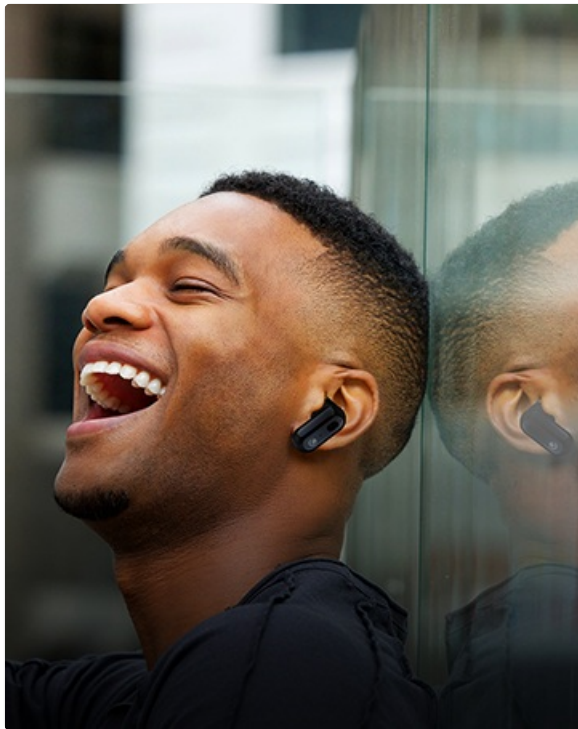


Image Description: A side view of the Volcano X Adder Series speaker, showing its rugged texture and control panel. Text overlays highlight key features: IPX5 Water Resistant, True Wireless Pairing, 24 Watt Peak Power, and a Charge Time of 5 Hours.

2. Powering On/Off

- To power on, press and hold the Power button until you hear an audible prompt or see the indicator lights activate.
- To power off, press and hold the Power button again until the speaker shuts down.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED).
2. On your smartphone or tablet, navigate to the Bluetooth settings.
3. Search for available devices and select "Volcano X Adder" from the list.
4. Once paired, the speaker will provide an audible confirmation, and the LED indicator will become solid.

4. True Wireless Stereo (TWS) Pairing

TWS allows you to connect two Volcano X Adder Series speakers for a stereo sound experience.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker, press and hold the TWS button (refer to speaker controls for exact button). The speaker will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. An audible prompt will confirm successful TWS pairing.
4. Once TWS paired, connect your device to one of the speakers via Bluetooth as described in step 3. Both speakers will then play in stereo.

OPERATING THE SPEAKER

Basic Controls:

- **Play/Pause:** Press the Play/Pause button once to play or pause audio.

- **Volume Up/Next Track:** Press the Volume Up button to increase volume. Press and hold to skip to the next track.
- **Volume Down/Previous Track:** Press the Volume Down button to decrease volume. Press and hold to go to the previous track.
- **Mode Button:** Press to switch between available input modes (e.g., Bluetooth, AUX if applicable).

Hands-free Calling:

When connected to a smartphone via Bluetooth, you can use the speaker for hands-free calls.

- **Answer Call:** Press the Play/Pause button once to answer an incoming call.
- **End Call:** Press the Play/Pause button once to end an active call.
- **Reject Call:** Press and hold the Play/Pause button to reject an incoming call.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, slightly damp cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use, to maintain battery health.

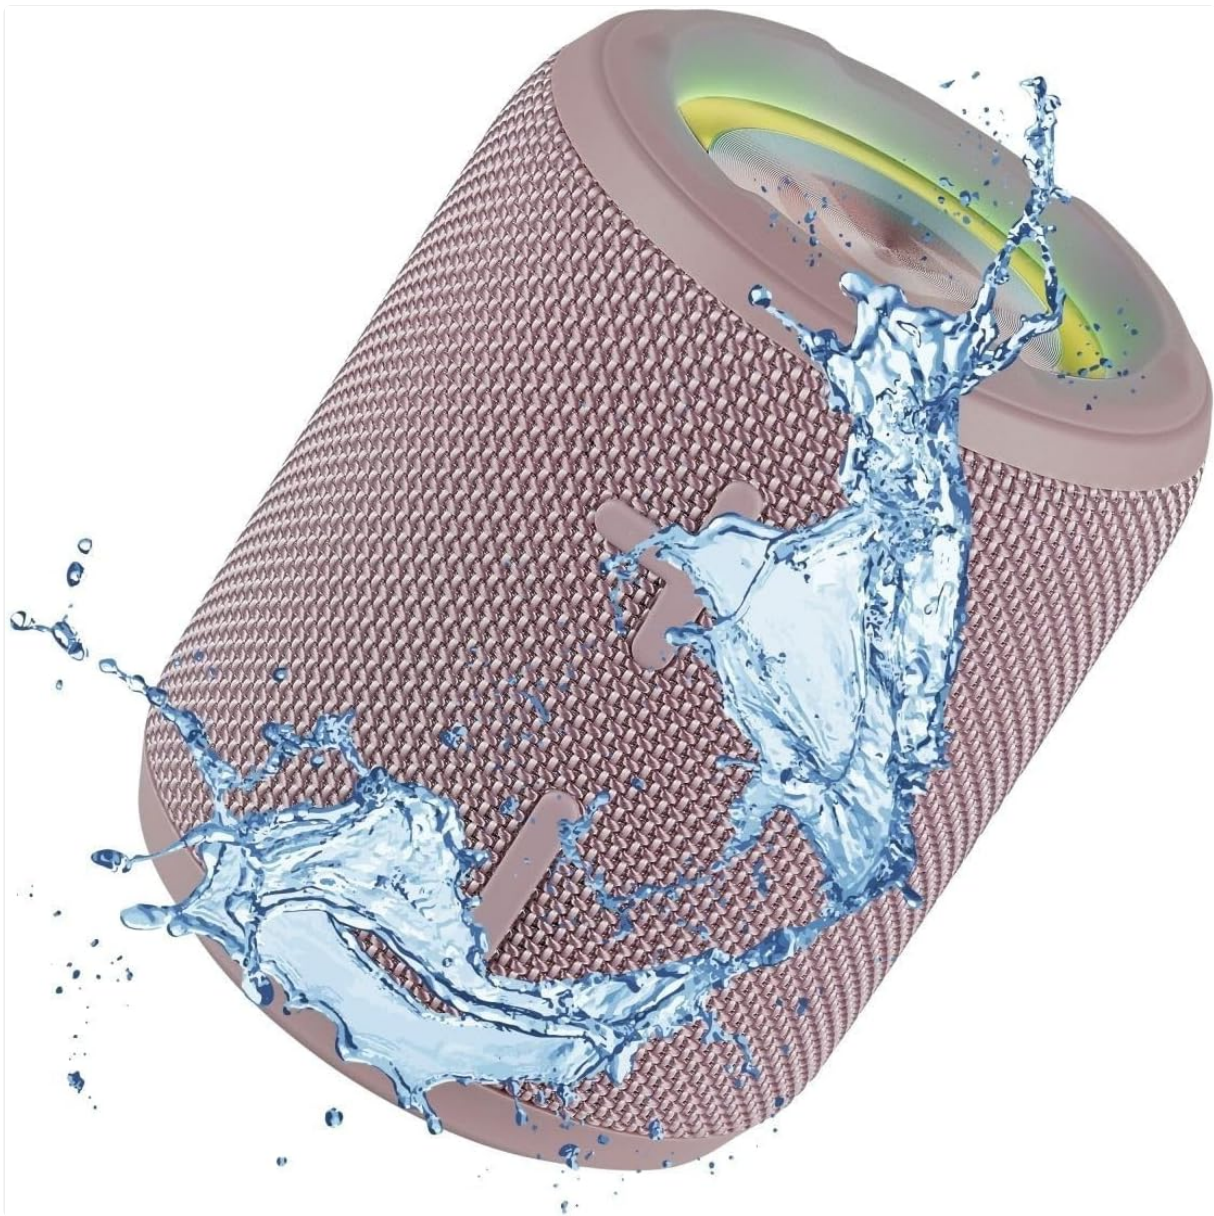


Image Description: A Volcano X Adder Series speaker, possibly in a different color (pink/rose gold), shown with water splashing over its side, illustrating its IPX5 water resistance feature. The speaker has a woven fabric grille and control buttons on the side.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB charging cable.
Cannot pair with Bluetooth device.	<ul style="list-style-type: none">• Ensure the speaker is in pairing mode (flashing LED).• Make sure Bluetooth is enabled on your device.• Move the speaker closer to your device.• Forget "Volcano X Adder" from your device's Bluetooth list and try pairing again.• Restart both the speaker and your device.

Problem	Possible Solution
No sound or low volume.	<ul style="list-style-type: none"> • Increase the volume on both the speaker and your connected device. • Ensure the speaker is properly paired. • Check if the audio source is playing.
TWS pairing fails.	<ul style="list-style-type: none"> • Ensure both speakers are powered on and not connected to any other Bluetooth device. • Place the speakers close to each other. • Repeat the TWS pairing steps carefully.

SPECIFICATIONS

Feature	Detail
Model Name	X Adder Series
Model Number	VKX-3000-BK
Bluetooth Version	5.0
Water Resistance	IPX5
Speaker Max Output Power	50 Watts
Frequency Response	16 KHz
Battery	7.4 V, 4400 mAh
Playtime	4-7 Hours (depending on usage)
Charge Time	5 Hours
Product Dimensions	9.9D x 16W x 15.6H centimetres
Material	Polyvinyl Chloride (PVC)
Connectivity	Bluetooth
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount
Recommended Use	For Smartphones or Tablets



Image Description: A front view of the Volkano X Adder Series Bluetooth Speaker, emphasizing its core specifications: Bluetooth Version 5, a 7.4V 4400mAh battery, and a playtime of 4-7 hours.

WARRANTY AND SUPPORT

Your Volkano X Adder Series Bluetooth Speaker is covered by a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship.

You can extend your coverage by an additional 12 months, for a total of 24 months, by registering your product. Please visit the official Volkano website for product registration details.

For technical support, warranty claims, or any questions regarding your product, please contact Volkano customer support via their official website or the Volkano Page on Amazon.

Your satisfaction is important to us. Please do not hesitate to reach out for assistance.