

[Manuals.plus](#) /

› [Volkano X](#) /

› Volkano X VXS200 Portable Bluetooth Speaker User Manual

Volkano X VKX-3003-GN

Volkano X VXS200 Portable Bluetooth Speaker

Model: VKX-3003-GN

INTRODUCTION

The Volkano X VXS200 Portable Bluetooth Speaker in Green is designed to deliver powerful sound in a compact and lightweight form factor. Ideal for on-the-go use, this speaker features Bluetooth 5.1 connectivity for seamless device pairing and offers up to 6 hours of playtime. Its IPX5 water-resistant rating ensures durability in various environments, including light rain or snow. This manual provides detailed instructions to help you get the most out of your VXS200 speaker.

Key Features:

- Up to 6 hours playtime
- IPX5 water resistant
- 24 Watt Peak power
- True wireless pairing
- Removable Shoulder Strap for portability



Figure 1: Front view of the Volcano X VXS200 Portable Bluetooth Speaker, showcasing its compact design and integrated handle.

SETUP

1. Charging the Speaker

Before first use, fully charge your Volcano X VXS200 speaker. Locate the charging port, typically covered by a rubber flap for water resistance. Connect the provided USB charging cable to the speaker and a compatible USB power source (e.g., wall adapter, computer USB port). The charging indicator light will illuminate, changing color or turning off once fully charged.

2. Bluetooth Pairing

1. Ensure the speaker is fully charged and powered off.
2. Press and hold the Power button on the speaker until you hear an audible prompt or see the Bluetooth indicator light flashing, indicating it's in pairing mode.
3. On your mobile device (smartphone, tablet, laptop), navigate to the Bluetooth settings.
4. Enable Bluetooth and search for available devices.
5. Select "Volcano VXS200" from the list of found devices.
6. Once paired, the speaker will provide an audible confirmation, and the Bluetooth indicator light will become solid.
7. Your speaker is now ready for audio playback.

OPERATING THE SPEAKER

Basic Controls:

- **Power On/Off:** Press and hold the Power button.
- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up:** Press the Volume Up (+) button.
- **Volume Down:** Press the Volume Down (-) button.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.

True Wireless Stereo (TWS) Pairing:

The VXS200 supports True Wireless Stereo (TWS) pairing, allowing you to connect two VXS200 speakers for a stereo sound experience.

1. Ensure both VXS200 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers, press and hold the TWS pairing button (refer to your speaker's button layout if not explicitly marked).
3. The speakers will automatically search for and connect to each other. You will hear an audible confirmation once TWS pairing is successful.
4. Once paired, connect your mobile device to one of the speakers via Bluetooth as described in the "Bluetooth Pairing" section. Both speakers will now play audio in stereo.

Call Handling:

- **Answer Call:** Press the Play/Pause button once when a call comes in.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button when a call comes in.

MAINTENANCE

Cleaning:

To maintain the appearance and functionality of your speaker, wipe it with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the surface or internal components. Ensure the charging port cover is securely closed to maintain water resistance.

Storage:

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, it is recommended to charge the battery periodically (e.g., every 3 months) to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker fully using the provided USB cable.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode (flashing light). Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters). Forget previous pairings on your device and try again.
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both the speaker and your connected device. Ensure the speaker is successfully paired and connected.
TWS pairing fails.	Speakers already connected to other devices; not in TWS pairing mode.	Ensure both speakers are disconnected from any Bluetooth devices. Follow TWS pairing steps carefully.

SPECIFICATIONS

Feature	Detail
Model Number	VKX-3003-GN
Brand	Volkano X
Connectivity Technology	Bluetooth 5.1
Speaker Maximum Output Power	24 Watts Peak
Playtime	Up to 6 hours
Water Resistance Rating	IPX5
Product Dimensions	18D x 5W x 13H centimetres
Colour	Green
Included Components	1 x Volkano X VXS200 Portable Bluetooth Speaker, Green
Recommended Uses	For Smartphones or Tablets

WARRANTY AND SUPPORT

Manufacturer's Warranty:

The Volkano X VXS200 Portable Bluetooth Speaker comes with a **1-Year Limited Warranty** from the manufacturer. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

You may be eligible to extend your coverage. Volkano offers an additional 12-Month extension, for a total of 24 Months coverage, upon product registration. Please visit the official Volkano website for details on how to register your product.

Customer Support:

For any questions, assistance, or support regarding your Volkano X VXS200 speaker, please contact Volkano customer service. Your satisfaction is important. You can typically find contact information (e.g., email, phone, or official social media channels) on the official Volkano website or by messaging them via their official brand page.

Note: All Volkano products are covered by lifetime customer support.