

Denver MPS-316BU

Denver MPS-316BU MP3 Player User Manual

Model: MPS-316BU

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Denver MPS-316BU MP3 Player. Please read this manual thoroughly before operating the device and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from water and other liquids.
- Use only the specified charging accessories.
- Prolonged listening at high volume levels can cause hearing damage. Adjust volume to a safe level.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- Denver MPS-316BU MP3 Player
- Earbuds
- USB Charging Cable (not explicitly listed but implied for charging)

4. PRODUCT OVERVIEW

The Denver MPS-316BU MP3 Player features a compact design with intuitive controls and a clear display for easy navigation.



This image displays the Denver MPS-316BU MP3 player from the front, highlighting its blue casing, integrated screen, and control buttons. The device is shown with wired earbuds connected and a clip attached to its side for portability.

Controls and Ports:

- **Display Screen:** Shows music information, menu options, and battery status.
- **Circular Control Pad:** Includes Play/Pause, Next/Previous track buttons.
- **'M' Button:** Accesses the menu or specific mode options.
- **Return/Back Button:** Navigates back through menus.
- **Headphone Jack:** For connecting wired earbuds or headphones.
- **USB Port:** For charging and data transfer.
- **Fixing Clip:** Located on the side for attaching the player to clothing.



BOUCHONS D'OREILLE
INCLUS



AUX




MP3 & WMA



MODE SHUFFLE




CLIP DE FIXATION

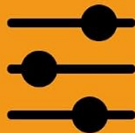

EQUALIZER



AUTONOMIE
DE 10 HEURES

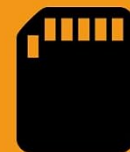

CARTE SD JUSQU'À 16 GO /
16 GO DE MÉMOIRE INTERNE

This diagram provides a visual summary of the MP3 player's main features. It confirms the inclusion of earbuds, AUX connectivity, support for MP3 and WMA audio formats, a shuffle playback mode, a built-in fixing clip, an equalizer function, approximately 10 hours of battery life, and 16GB of internal storage with support for an additional SD card up to 16GB.

5. SETUP

5.1 Charging the Device

1. Connect the USB charging cable to the MP3 player's USB port.
2. Plug the other end of the USB cable into a powered USB port (e.g., computer, USB wall adapter).
3. The battery indicator on the screen will show charging status. A full charge typically takes a few hours.
4. Disconnect the cable once fully charged.

5.2 Loading Music Files

The Denver MPS-316BU supports MP3 and WMA audio formats and has 16GB of internal memory, expandable via an SD card up to 16GB.

1. Connect the MP3 player to your computer using the USB cable.
2. The device will appear as a removable disk drive on your computer.
3. Open the device folder and drag and drop your desired MP3 or WMA audio files into it. You can create folders to organize your music.
4. Safely eject the device from your computer before disconnecting the USB cable.
5. To use an SD card, insert it into the designated slot on the player. You can then transfer files directly to the SD card when connected to a computer, or use a card reader.

6. OPERATING THE DEVICE

6.1 Power On/Off

- **To Power On:** Press and hold the Play/Pause button until the screen lights up.
- **To Power Off:** Press and hold the Play/Pause button until the screen turns off.

6.2 Basic Playback

1. From the main menu, navigate to 'Music' using the navigation buttons.
2. Press the 'M' button to enter the music library.
3. Browse through your songs or folders. Select a song and press the Play/Pause button to start playback.
4. **Play/Pause:** Press the central button on the control pad.
5. **Next Track:** Press the right arrow button.
6. **Previous Track:** Press the left arrow button.
7. **Volume Adjustment:** (Assumed, typically via side buttons or menu) Use the designated volume buttons (if present) or navigate through the menu to adjust volume.

6.3 Menu Navigation and Modes

- **'M' Button:** Press to access the main menu or context-sensitive options during playback.
- **Return Button:** Press to go back to the previous screen or menu.
- **Shuffle Mode:** This player supports shuffle playback. Access this option through the music playback menu to randomize your song order.
- **Equalizer:** The device includes an equalizer function to customize sound profiles. Access this through the settings or playback menu.



The MP3 player is shown in use, clipped securely to the waistband of a child's trousers, demonstrating its portability and hands-free design for active users.



EXERCICE EN TOUTE TRANQUILLITÉ

IDÉAL PENDANT LES SÉANCES D'ENTRAÎNEMENT

An image depicting a woman engaged in outdoor exercise, wearing headphones. This illustrates the MP3 player's design for active lifestyles, allowing users to enjoy music during physical activities.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use.

8. TROUBLESHOOTING

- **Device will not turn on:** Ensure the battery is charged. Connect to a power source and try again.
- **No sound:** Check if headphones are properly connected. Verify volume level is not set to zero or muted. Ensure audio files are not corrupted.
- **Cannot transfer files:** Ensure the USB cable is securely connected to both the player and the computer. Try

a different USB port or cable. Ensure the device is recognized by the computer.

- **Screen is unresponsive:** Try restarting the device by holding the power button. If issues persist, allow the battery to fully discharge and then recharge.

9. SPECIFICATIONS

Brand	Denver
Model Name	MPS316
Product Model Number	5706751071164
Product Dimensions	1.6 x 3.6 x 5.4 cm; 80 g
Internal Storage	16 GB
Expandable Storage	SD card up to 16 GB
Audio Formats	MP3, WMA
Connectivity Technology	Auxiliary (for headphones)
Special Feature	Fixing Clip
Battery Life	Approximately 10 hours
Color	Blue
Manufacturer	Denver Electronics
First Available	December 8, 2023

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Denver Electronics website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question