

[Manuals.plus](#) /

› [Auertech](#) /

› Auertech 12lbs Portable Dryer AU205C User Manual

Auertech AU205C

Auertech 12lbs Portable Dryer AU205C User Manual

1. INTRODUCTION

Welcome to the Auertech 12lbs Portable Dryer AU205C user manual. This document provides essential information for the safe and efficient operation, installation, and maintenance of your new portable dryer. Please read all instructions carefully before using the appliance and retain this manual for future reference.

1.1 Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Ensure the dryer is properly grounded. Do not dry items that have been soiled with flammable substances. Keep the area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt. Do not allow children to play on or in the appliance.

2. PRODUCT OVERVIEW

The Auertech AU205C is a compact and efficient portable dryer designed for small living spaces, apartments, RVs, and dorms. It features a stainless steel tub, multiple drying modes, and an intuitive LCD control panel.

2.1 Key Features

- **Compact Design:** Space-saving dimensions suitable for various environments.
- **10 lbs Capacity:** Capable of drying up to 10 pounds of wet clothes (recommended 5.5 lbs for quick drying).
- **850W Rated Power:** Efficient drying with temperatures up to 149°F.
- **5 Drying Modes:** Versatile programs for different fabric types.
- **LCD Control Panel:** Provides precise settings and real-time drying progress.
- **Stainless Steel Tub:** Durable and minimizes clothing tangling and wrinkles with bi-directional rotation.
- **Multi-stage Filtration System:** Captures lint and pet hair effectively.
- **Low Noise Operation:** Designed for a quiet environment.

2.2 Components

Familiarize yourself with the main components of your dryer:



① **Premium Class Door**



② **Stainless Steel Drum**



③ **Magnetic Door Lock**



④ **Air Outlet**

Image: Close-up views of the dryer's key components, including the premium glass door, the interior stainless steel drum, the magnetic door lock mechanism, and the air outlet.



Image: Front view of the Auertech 12lbs Portable Dryer, showcasing its compact design, large circular door, and the LCD control panel located at the bottom.

3. SETUP AND INSTALLATION

3.1 Placement

Choose a stable, level surface for the dryer. Ensure adequate ventilation around the unit. The dryer can be placed freestanding, stacked (with a compatible washer, bracket kit not included), wall-mounted, or rack-mounted.



**Fit in more
places**

***Doesn't come with bracket kit !**



Image: Visual representation of various installation options for the portable dryer, including freestanding on a counter, stacked on top of a washing machine, wall-mounted, and placed on a rack.

3.2 Dimensions and Electrical Requirements

Refer to the following specifications for proper installation:



Voltage: 120V **Frequency: 60Hz**
Rated input: 850W **Net weight: 32 lbs**

Image: Diagram showing the dimensions of the Auertech Portable Dryer (19 inches wide, 15.8 inches deep, 22 inches high) and its electrical specifications (Voltage: 120V, Frequency: 60Hz, Rated input: 850W, Net weight: 32 lbs).

- **Product Dimensions:** 19 x 15.5 x 22 inches
- **Net Weight:** 32 lbs
- **Voltage:** 120V
- **Frequency:** 60Hz
- **Rated Input:** 850W

3.3 Exhaust Connection

Connect the provided exhaust connector to the dryer's air outlet. Ensure the exhaust hose is properly vented to the outside or into a suitable lint trap to prevent moisture buildup and ensure efficient drying.

4. OPERATING INSTRUCTIONS

The Auertech AU205C dryer features an LCD control panel for easy operation and selection of drying modes.

4.1 Loading the Dryer

1. Open the dryer door.
2. Load clothes into the stainless steel tub. For optimal drying, do not overload the dryer. The maximum capacity is 10 lbs of wet clothes, but for quicker drying, it is recommended to load less than 5.5 lbs at one time.
3. Close the door securely. The magnetic door lock will engage.

4.2 Using the LCD Control Panel

The LCD display allows for precise settings and adjustments. It shows real-time drying progress, temperature, and remaining time.



Image: The Auertech Portable Dryer displaying its auto-adjust drying time feature, indicating that the drum spins in both directions for even drying and anti-wrinkle results, supported by an intelligent temperature sensor.

4.3 Drying Modes and Settings

The dryer offers five drying modes and two temperature options. Select the appropriate mode based on your clothing type:

- **Standard Dry:** General drying for most fabrics.
- **Delicate Dry:** Lower temperature for sensitive items.
- **Air Dry:** No heat, for freshening or very delicate items.
- **Timed Dry:** Manually set drying duration.
- **Anti-Wrinkle:** Helps reduce wrinkles by tumbling without heat at the end of a cycle.

The dryer intelligently senses temperature and humidity to optimize the drying process and reduce energy consumption. The stainless steel tub rotates in both directions to minimize tangling and wrinkles.

Three Layer Filtration System



Image: A list of key features of the Auertech Portable Dryer, including anti-wrinkle function, powerful drying, PTC heater, overheat protection, smart humidity sensor, and smart temperature sensor.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

5.1 Cleaning the Lint Filter

The dryer features a multi-stage filtration system to capture lint and pet hair. Clean the lint filter after every load to maintain drying efficiency and prevent fire hazards.

1. Open the dryer door.
2. Locate the lint filter inside the drum.
3. Remove the filter and gently pull off any accumulated lint.
4. Reinsert the clean filter securely.



Air dry

VS



Auertech dryer




Visible wrinkle

VS



Anti-wrinkle

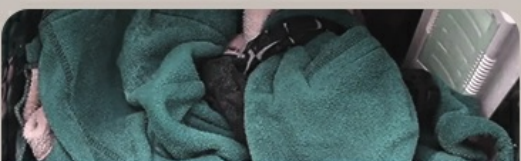

Stiff

VS



Fluffy and soft

Image: Diagram illustrating the three-layer filtration system of the Auertech Portable Dryer, showing the air outlet, lint filter, and filter mesh components.

5.2 Exterior Cleaning

Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

If you encounter issues with your dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not start	Power cord unplugged; Door not closed; Circuit breaker tripped	Ensure power cord is securely plugged in; Close door firmly; Reset circuit breaker
Clothes not drying properly	Lint filter clogged; Overloaded dryer; Incorrect drying mode selected; Exhaust vent blocked	Clean lint filter; Reduce load size; Select appropriate drying mode; Check and clear exhaust vent
Excessive noise	Dryer not level; Foreign objects in drum	Ensure dryer is on a level surface; Check drum for loose items
Dryer stops unexpectedly	Overheat protection activated; Power interruption	Allow dryer to cool down; Check power supply

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Auertech 12lbs Portable Dryer AU205C:

Specification	Value
Brand Name	Auertech
Model Info	AU205C
Item Weight	32 pounds
Product Dimensions	19 x 15.5 x 22 inches
Capacity	10 Pounds (wet clothes)
Form Factor	Front Load
Color	White
Access Location	Front Load
Material Type	Stainless Steel
Included Components	Exhaust connector, Manual, Cloth dryer
Batteries Required?	No
Date First Available	November 8, 2023

8. WARRANTY AND SUPPORT

For warranty information or technical assistance, please refer to the warranty card included with your product or visit the official Auertech website. You may also contact Auertech customer support directly for further assistance with troubleshooting or parts replacement.

Auertech Customer Support: Please refer to your purchase documentation or the manufacturer's website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CMV4D9BX>

More documents and user manuals: <https://manuals.plus/>