

## Grundig GDKP2464BBSC

# Grundig GDKP2464BBSC T-Shaped Cookerhood Extractor Fan User Manual

Model: GDKP2464BBSC

## 1. IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before installing or using your Grundig GDKP2464BBSC cookerhood. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- **Electrical Safety:** Ensure the electrical installation complies with all local regulations. The appliance must be properly earthed. Do not operate with a damaged power cord or plug.
- **Installation:** Installation must be carried out by a qualified person in accordance with all relevant standards. Maintain the minimum distance between the hob and the cookerhood as specified in the installation instructions.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Fire Hazard:** Do not flambé under the cookerhood. Do not leave frying pans unattended during use as overheated oil can ignite. Clean grease filters regularly to prevent grease build-up, which is a fire hazard.
- **Ventilation:** Ensure adequate ventilation in the room when the cookerhood is used simultaneously with gas or other fuel-burning appliances.

## 2. PRODUCT OVERVIEW


The Grundig GDKP2464BBSC is a T-shaped cookerhood designed to efficiently remove smoke, steam, and odors from your kitchen. It features electronic touch controls, multiple power levels, and integrated lighting.




**Figure 2.1:** Front view of the Grundig GDKP2464BBSC T-Shaped Cookerhood. This image shows the overall design of the stainless steel cookerhood, including the main body, the black control panel, and the integrated lights.

## 2.1 Components

- **Main Body:** The stainless steel housing of the cookerhood.
- **Control Panel:** Electronic touch controls for operating the fan and lights.
- **Grease Filters:** Removable metal filters designed to trap grease particles.
- **Lighting:** Integrated lights to illuminate the cooking area.
- **Motor/Fan:** Internal motor and fan assembly for air extraction.

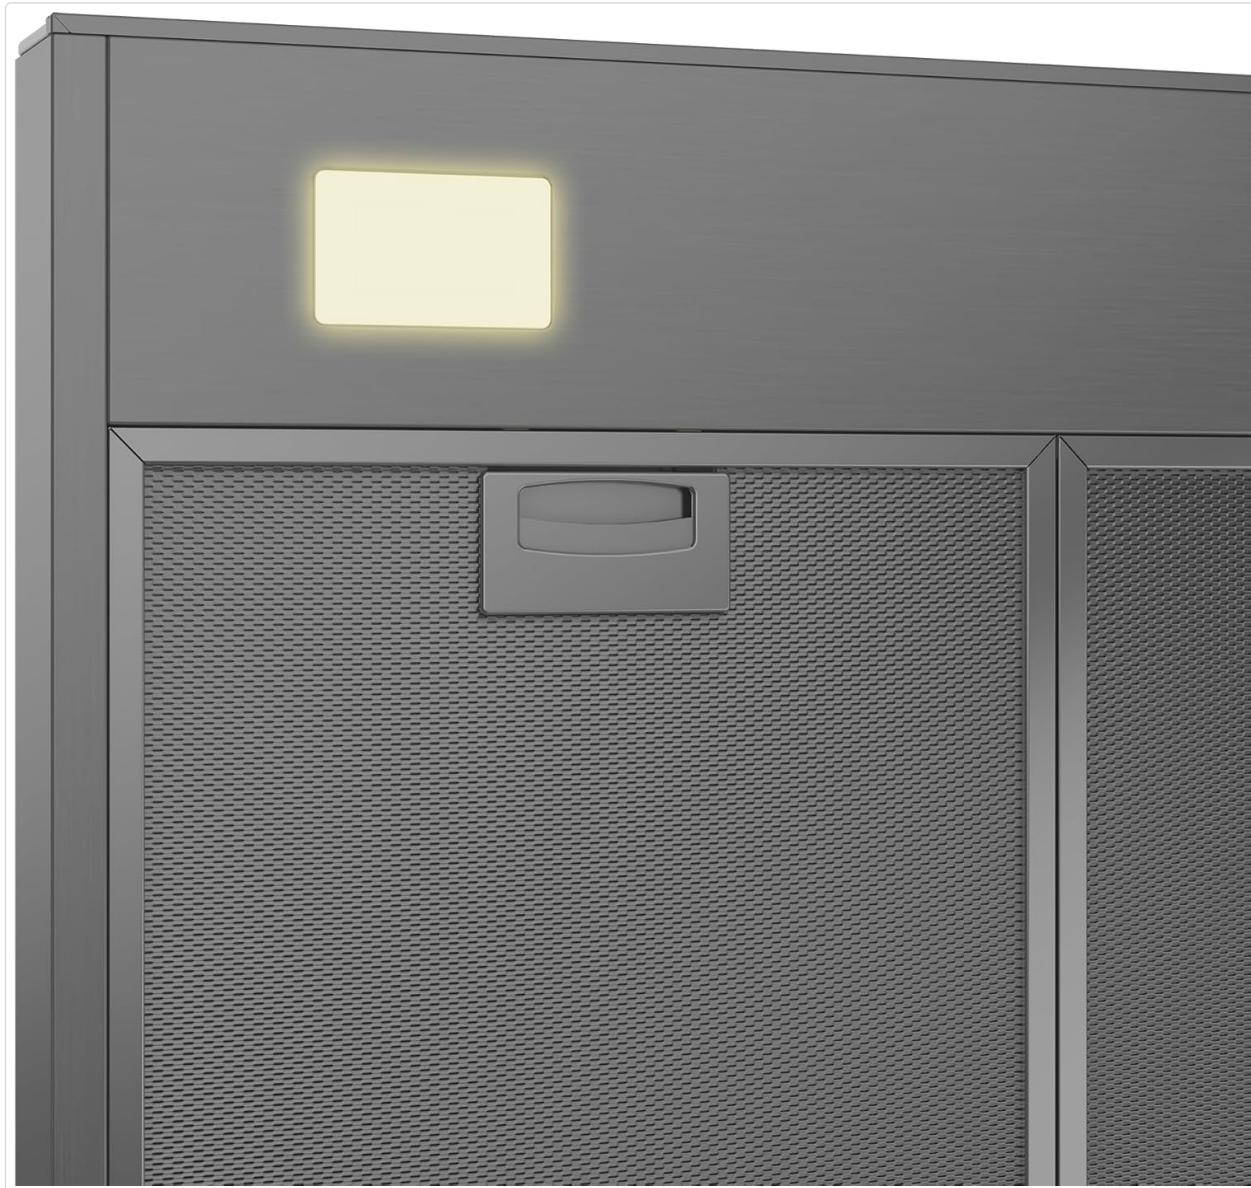

**Figure 2.2:** Close-up view of the control panel and integrated lights. This image highlights the touch controls for fan speed (1, 2, 3), power on/off, and light control, along with the two illuminated lights.

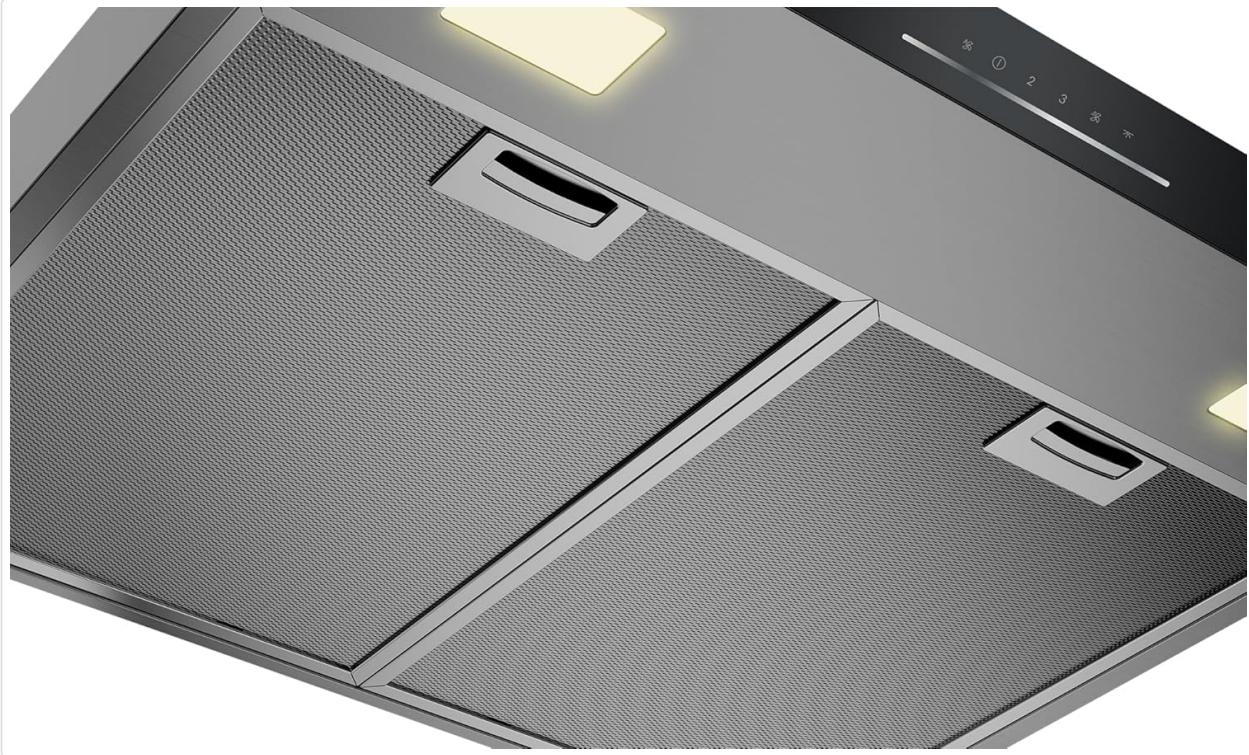

**Figure 2.3:** Underside view showing the grease filters and integrated lights. This image provides a clear view of the two metal grease filters and the two lights that illuminate the cooking surface below.

## 3. SETUP AND INSTALLATION

For safety and optimal performance, the installation of this cookerhood should be performed by a qualified technician. Refer to the separate installation guide provided with your appliance for detailed instructions, diagrams, and mounting templates.

### 3.1 Unpacking

- Carefully remove the cookerhood from its packaging.
- Inspect the appliance for any signs of damage. Do not install if damaged.
- Retain packaging materials for potential future transport or return.

### 3.2 Mounting and Electrical Connection

The cookerhood can be installed in either extraction mode (ducted to the outside) or recirculation mode (using charcoal filters, sold separately, to filter air before returning it to the kitchen). Ensure proper ducting is in place for extraction mode.

- Mount the cookerhood securely to the wall or ceiling structure according to the installation guide.
- Connect the electrical supply to a properly earthed outlet.
- For recirculation mode, install the optional charcoal filters as per their instructions.

## 4. OPERATING INSTRUCTIONS

The Grundig GDKP2464BBSC cookerhood features intuitive electronic touch controls located on the front panel.

## 4.1 Control Panel Functions

- **Power On/Off Button ( )**: Touch to turn the cookerhood on or off.
- **Fan Speed Buttons (1, 2, 3)**: Touch to select the desired extraction speed. Speed 1 is for light cooking, Speed 2 for normal cooking, and Speed 3 for heavy cooking or strong odors.
- **Intensive Speed Button (\*)**: Activates the maximum extraction power (often referred to as Speed 4 or Boost). This speed typically runs for a set period (e.g., 5-10 minutes) before reverting to a lower speed.
- **Light Button (★)**: Touch to turn the integrated lights on or off.
- **Timer Button ( )**: Activates the timer function. The cookerhood will continue to operate for a set period (e.g., 15 minutes) and then automatically switch off.

## 4.2 General Use

- Turn on the cookerhood a few minutes before you start cooking to create an airflow.
- Select a fan speed appropriate for the amount of steam and odors being produced.
- Use the lights to illuminate your cooking surface for better visibility.
- Allow the cookerhood to run for a few minutes after cooking to clear any remaining fumes.

## 5. MAINTENANCE

---

Regular maintenance ensures the efficient operation and longevity of your cookerhood. Always disconnect the appliance from the power supply before performing any maintenance or cleaning.

### 5.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft cloth dampened with mild detergent and water.
- Do not use abrasive cleaners, corrosive detergents, or harsh scouring pads, as these can damage the stainless steel finish.
- Dry thoroughly with a clean, soft cloth.

### 5.2 Cleaning Grease Filters

The metal grease filters should be cleaned regularly (approximately every 2-4 weeks, depending on usage) to maintain optimal performance and prevent fire hazards.



**Figure 5.1:** Close-up view of a single metal grease filter. This image shows the mesh structure of the filter, designed to trap grease particles from cooking fumes.

1. Switch off the cookerhood and disconnect it from the power supply.
2. Locate the release catches on the grease filters (refer to Figure 2.3).
3. Press the catch and pull the filter downwards to remove it.
4. Wash the filters by hand in hot soapy water or in a dishwasher (ensure they are placed to avoid damage from other items).
5. Rinse thoroughly and allow them to dry completely before re-installing.
6. To re-install, align the filter with its slot and push it upwards until the catch clicks into place.

### 5.3 Replacing Charcoal Filters (for Recirculation Mode)

If your cookerhood is used in recirculation mode, charcoal filters (not included) must be replaced periodically (typically every 3-6 months, depending on usage). Refer to the charcoal filter's specific instructions for replacement.

## 6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Cookerhood does not turn on.	No power supply.	Check if the power cord is properly plugged in and the circuit breaker has not tripped.
Poor extraction performance.	Grease filters are clogged.	Clean or replace the grease filters (see Section 5.2).
	Charcoal filters are saturated (recirculation mode).	Replace charcoal filters (see Section 5.3).
	Ducting is blocked or improperly installed.	Check ducting for obstructions or kinks. Ensure proper installation.
Lights are not working.	Light bulb/LED is faulty.	Contact customer service for light replacement. Do not attempt to replace yourself.
Excessive noise during operation.	Loose components or improper installation.	Ensure all mounting screws are tight. Check for any loose parts. If noise persists, contact service.

If the problem persists after checking these points, please contact Grundig customer support.

## 7. SPECIFICATIONS

Feature	Specification
Brand	Grundig
Model Number	GDKP 2464 BBSC

Feature	Specification
Colour	Stainless Steel
Type	T-Shaped Cookerhood Extractor Fan
Size	60 cm
Extraction Capacity	Up to 710 m³/h
Control Type	Electronic Touch Controls
Power Levels	4 (including intensive)
Lighting	Integrated
Item Weight	10.5 kg
Package Dimensions	66.5 x 60 x 43 cm
ASIN	B0CMV9DWFS

## 8. WARRANTY AND SUPPORT

Your Grundig GDKP2464BBSC cookerhood comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including the warranty period and coverage details.

### 8.1 Customer Support

If you require technical assistance, spare parts, or have any questions regarding your appliance, please contact Grundig customer support. Have your model number (GDKP2464BBSC) and serial number ready when contacting support.

- Visit the official Grundig website for contact information specific to your region.
- Refer to your purchase documentation for retailer-specific support options.