



[Manuals.plus](#) /

> [Moulinex](#) /

> Moulinex Tefal OBH EasyFry Grill XXL Air Fryer Basket EY801 EZ801 Instruction Manual

Moulinex EY801 EZ801 AG8018 AG801D

Moulinex Tefal OBH EasyFry Grill XXL Air Fryer Basket Instruction Manual

Model Compatibility: EY801, EZ801, AG8018, AG801D Series

1. PRODUCT OVERVIEW

This document provides instructions for the original Moulinex, Tefal, and OBH Nordica replacement basket, bowl, or container designed for the EasyFry Grill XXL air fryer models. This component is essential for the proper functioning of your air fryer, holding food during the cooking process.



Image 1: Top-down view of the Moulinex Tefal OBH EasyFry Grill XXL Air Fryer Basket.

2. COMPATIBILITY

This replacement basket is compatible with the following Moulinex, Tefal, and OBH Nordica EasyFry Grill XXL air fryer models:

- **OBH Nordica:** AG8018, AG801D (including sub-variants like AG8018S0/87A, AG801DS0/87A)
- **Tefal:** EY8018, EY801D (including sub-variants like EY801815/87A, EY801827/87A, EY801828/87A, EY801850/87A, EY801860/87A, EY8018MX/87A, EY801D15/87A, EY801D27/87A, EY801D50/87A, EY801D60/87A, EY801DMX/87A)
- **Moulinex:** EZ8018, EZ801D (including sub-variants like EZ801810/87A, EZ801856/87A, EZ801D10/87A)

To ensure compatibility, always verify the model number on the identification plate of your appliance, typically located on the underside of the unit.



Image 2: Side view of the air fryer basket, showing its exterior structure.

3. SETUP AND INSTALLATION

Follow these steps to correctly install the replacement basket into your air fryer:

1. **Unpack:** Carefully remove the new basket from its packaging. Inspect it for any damage.
2. **Clean:** Before first use, wash the basket with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Insert:** Slide the clean, dry basket into the main body of the air fryer. Ensure it clicks securely into place and is fully seated. Do not force it.
4. **Verify:** Gently pull on the handle to confirm the basket is locked in position before adding food or operating the appliance.

4. OPERATING INSTRUCTIONS

The basket serves as the cooking chamber for your air fryer. Proper use ensures optimal cooking results and longevity of the product.

- **Food Placement:** Place food items evenly within the basket. Avoid overcrowding to allow for proper air circulation and even cooking.
- **Maximum Fill Line:** Do not exceed the maximum fill line indicated on the basket (if present) to prevent interference with the heating element and ensure safe operation.
- **Shaking/Tossing:** For best results, especially with smaller items, periodically remove the basket and gently shake or toss the food to ensure even browning. Always use heat-resistant gloves when handling a hot basket.
- **Refer to Main Manual:** For specific cooking times, temperatures, and recipes, always refer to the instruction manual provided with your Moulinex, Tefal, or OBH Nordica EasyFry Grill XXL air fryer appliance.

5. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will extend the life of your air fryer basket.



Image 3: Interior view of the air fryer basket, showing the non-stick surface.

- **After Each Use:** Allow the basket to cool completely before cleaning.
- **Hand Washing:** Wash the basket with warm water, a mild dish soap, and a non-abrasive sponge or cloth. For stubborn food residue, soak the basket in warm, soapy water for 10-15 minutes before cleaning.
- **Dishwasher:** Consult your main air fryer manual for specific dishwasher compatibility of the basket. If dishwasher safe, place it on the top rack.
- **Avoid Abrasives:** Do not use metal scouring pads, abrasive cleaners, or harsh chemicals, as these can damage the non-stick coating.
- **Drying:** Ensure the basket is completely dry before storing or reinserting into the air fryer to prevent water spots or potential damage.

6. TROUBLESHOOTING

If you encounter issues with your replacement basket, consider the following:

- **Basket Does Not Fit:**
 - Ensure you have the correct model number for your air fryer. Refer to Section 2: Compatibility.
 - Check for any obstructions inside the air fryer unit or on the basket itself.
 - Ensure the basket is aligned correctly before attempting to slide it in. Do not force it.
- **Food Sticking to Basket:**
 - Ensure the basket was properly cleaned and dried before use.
 - Lightly spray or brush the basket with cooking oil before adding food, especially for items prone to sticking.
 - Avoid using metal utensils that can scratch and damage the non-stick coating.
- **Difficulty Cleaning Stubborn Residue:**
 - Soak the basket in hot, soapy water for an extended period (e.g., 30 minutes to an hour) to loosen baked-on food.
 - Use a soft brush or sponge specifically designed for non-stick surfaces.

7. SPECIFICATIONS

- **Brand:** Moulinex, Tefal, OBH Nordica (Original Replacement Part)
- **Color:** Black
- **Dimensions (approximate):** 32 x 30 x 24 cm (Length x Width x Height)
- **Weight (approximate):** 900 grams
- **Material:** Durable, non-stick coated material (as per original manufacturer specifications)

8. IMPORTANT SAFETY INFORMATION

- Always ensure the air fryer is unplugged and cool before installing, removing, or cleaning the basket.
- Use heat-resistant gloves or oven mitts when handling the hot basket during or immediately after cooking.
- Do not use the basket if it is visibly damaged, bent, or has a compromised non-stick coating.
- This basket is designed for use only with the specified Moulinex, Tefal, and OBH Nordica EasyFry Grill XXL air fryer models. Using it with incompatible appliances may cause damage or injury.

- Keep out of reach of children.