

Energizer B0CMVT2BX1

Energizer Smart Outdoor 1080P Security Camera User Manual

Model: B0CMVT2BX1

1. INTRODUCTION

Thank you for choosing the Energizer Smart Outdoor 1080P Security Camera. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance and security. Please read these instructions carefully before use and retain them for future reference.

2. PRODUCT OVERVIEW

2.1 Package Contents

- Energizer Smart Outdoor 1080P Security Camera
- Power Adapter (10 ft Type-C cable)
- Mounting Hardware (screws, wall anchors)
- User Manual

2.2 Camera Components



The image above illustrates the key components of your Energizer Smart Outdoor Security Camera. Familiarize yourself with these parts for proper setup and operation.


- **Camera Lens:** Captures 1080p HD video.
- **Speaker:** Enables two-way audio communication.
- **Micro SD Card Slot:** For local video storage (supports up to 128GB, card not included).
- **Reset Button:** Used to reset the camera to factory settings.
- **Power Port:** Connects to the included power adapter.

3. SETUP

3.1 Step 1: Download the Energizer Connect App

Download the Energizer Connect app from the Apple App Store or Google Play Store. Search for "Energizer Connect" and install the application on your smartphone or tablet.

3.2 Step 2: Powering the Camera

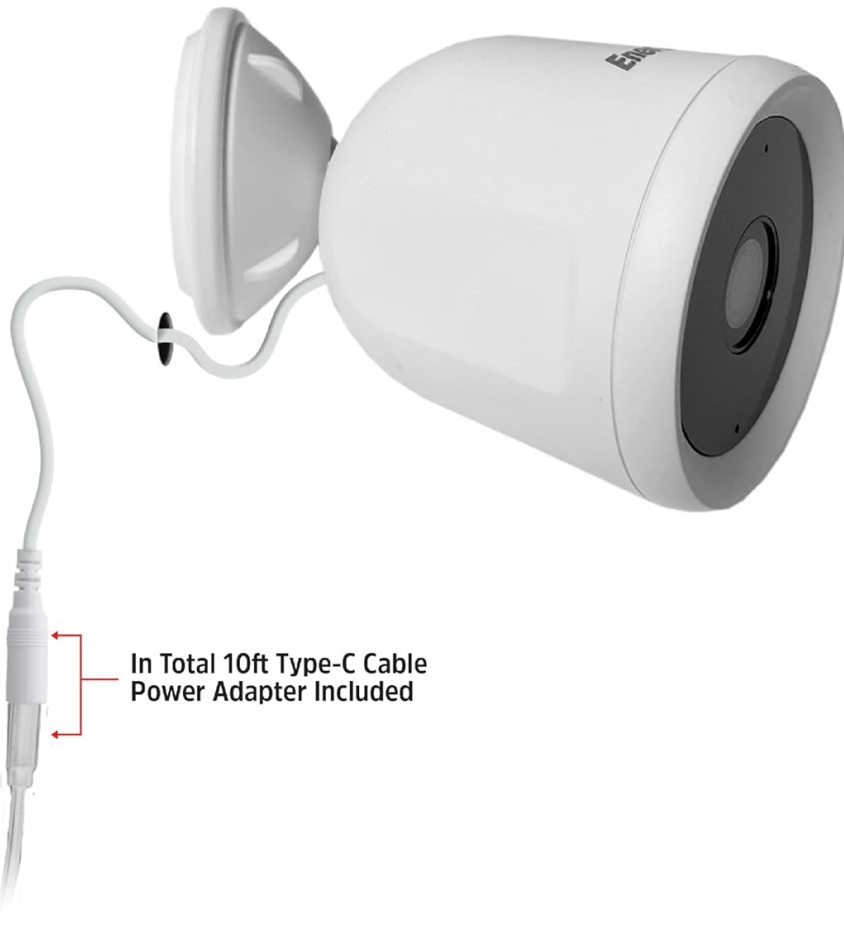

In Total 10ft Type-C Cable
Power Adapter Included

 **INSTANT**
MOTION ALERTS
TO YOUR SMARTPHONE



INSTANT
MOTION ALERTS



LIVE
VIDEO
VIEWING



REMOTE
ACCESS



TWO-WAY
CONVERSATION



RECORD
VIDEO & AUDIO
microSD card not included



NIGHT
VISION



CLOUD STORAGE
Free 30 Day Trial
Optional subscription plans available



NO HUB
REQUIRED



WiFi

Connect the included 10 ft power adapter to the camera's power port and plug it into a standard electrical outlet. The camera will power on and indicate readiness for pairing (refer to app instructions for specific light indicators).

3.3 Step 3: Mounting the Camera



Choose a suitable outdoor location for mounting. The camera is IP65 weather-resistant. Use the provided mounting hardware to securely attach the camera to a wall or ceiling. Ensure the camera has a clear field of view and is within range of your Wi-Fi network.

3.4 Step 4: Connecting to Wi-Fi

1. Open the Energizer Connect app and create an account or log in.
2. Tap the "+" icon to add a new device.
3. Select your camera model from the list of devices.
4. Follow the on-screen instructions in the app to connect your camera to your 2.4GHz Wi-Fi network.
Note: This camera does not support 5GHz Wi-Fi networks.
5. Once connected, you can name your camera and begin using its features.

4. OPERATING THE CAMERA

4.1 Live Video Viewing




Access the Energizer Connect app to view a live 1080p HD stream from your camera at any time. The live feed provides a 100-degree field of view, allowing you to monitor your outdoor area in real-time.

4.2 Two-Way Audio



Utilize the built-in microphone and speaker for two-way communication. From the live view in the app, tap the microphone icon to speak through the camera and the speaker icon to listen to audio from the camera's location.

4.3 Motion Detection and Alerts

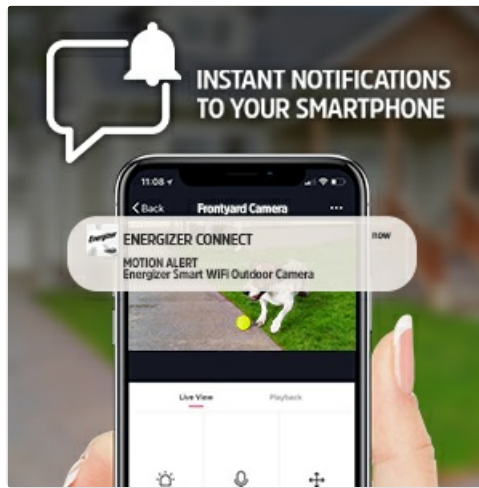

The camera is equipped with motion detection capabilities. When motion is detected, you will receive instant alerts on your smartphone or connected device, allowing you to quickly check the live feed.

4.4 Activity Zone Selection



Within the Energizer Connect app, you can define specific "Activity Zones" in your camera's field of view. This allows you to receive motion alerts only for activity within these designated areas, reducing unnecessary notifications.

4.5 Night Vision



The camera automatically switches to night vision mode in low-light conditions, providing clear black-and-white video footage to ensure continuous monitoring even in the dark.

4.6 Storage Options

- **Cloud Storage:** A complimentary 30-day cloud storage trial is included. Optional subscription plans are available for extended cloud storage.
- **Micro SD Card:** Insert a Micro SD card (up to 128GB, not included) into the designated slot for local recording and playback.

5. SMART HOME INTEGRATION

The Energizer Smart Outdoor Camera seamlessly integrates with popular smart home platforms.

5.1 Amazon Alexa

To connect with Amazon Alexa, enable the Energizer Connect skill in the Alexa app and link your Energizer Connect account. You can then use voice commands to view your camera feed on compatible Alexa-enabled devices.

5.2 Google Assistant

To connect with Google Assistant, link your Energizer Connect account through the Google Home app. Use voice commands to access your camera's live stream on compatible Google Assistant devices.

6. MAINTENANCE

6.1 Cleaning

Periodically clean the camera lens and housing with a soft, damp cloth to remove dust and debris. Avoid using harsh chemicals or abrasive cleaners, as these can damage the camera's finish or lens.

6.2 Firmware Updates

The camera's firmware may receive updates to improve performance and add new features. Ensure your camera is connected to Wi-Fi, and the Energizer Connect app will notify you of available updates. Follow

the in-app instructions to perform updates.

7. TROUBLESHOOTING

- **Camera Offline:**
 1. Check if the camera is properly powered.
 2. Verify your Wi-Fi network is active and the camera is within range.
 3. Restart the camera by unplugging and re-plugging the power adapter.
 4. If issues persist, try resetting the camera using the reset button and re-pairing it with the app.
- **No Motion Alerts:**
 1. Ensure motion detection is enabled in the app settings.
 2. Check your phone's notification settings for the Energizer Connect app.
 3. Verify that activity zones are correctly configured.
- **Poor Video Quality:**
 1. Check your Wi-Fi signal strength at the camera's location.
 2. Ensure the camera lens is clean and free from obstructions.
- **Two-Way Audio Not Working:**
 1. Ensure your phone's volume is up and the microphone is enabled in the app.
 2. Check the camera's speaker and microphone for any physical obstructions.

8. SPECIFICATIONS

Feature	Detail
Video Capture Resolution	1080p Full HD
Field Of View	100 Degrees
Connectivity Technology	Wireless (Wi-Fi 2.4GHz)
Power Source	Corded Electric
Special Features	Activity Zone, 2-Way Audio, Night Vision, Remote Access
Indoor/Outdoor Usage	Outdoor (IP65 Weather Resistant)
Compatible Devices	Tablet, Smartphone (Android, iOS)
Storage Options	Cloud Storage (30-day trial), Micro SD Card (up to 128GB)
Control Method	Voice (Alexa, Google Assistant), App
Item Weight	10.5 ounces

9. WARRANTY AND SUPPORT

This Energizer Smart Outdoor 1080P Security Camera typically comes with a 1-year limited warranty. Please refer to the product packaging or the Energizer Connect website for specific warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Energizer Connect customer service:

- **Website:** www.energizerconnect.com/support (Example Link)

- **Email:** support@energizerconnect.com (Example Email)
- **Phone:** 1-800-XXX-XXXX (Please refer to product packaging for the most current contact number)