

FASTWD L231-EEA

FASTWD 10-inch Android 14 Tablet User Manual

Model: L231-EEA

Brand: FASTWD

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your FASTWD 10-inch Android 14 Tablet. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your user experience.

The FASTWD Tablet features the latest Android 14 operating system, offering enhanced performance and user interface customization. It comes equipped with 36GB RAM (12GB physical + 24GB virtual) and 128GB ROM, expandable up to 1TB via Micro SD, providing ample space for applications, media, and documents.

Key features include dual-band 2.4Ghz/5.0Ghz Wi-Fi, Bluetooth 5.0, a 10-inch IPS HD display with 1280x800 resolution, dual stereo speakers, and an 8000mAh battery for extended use.

2. WHAT'S IN THE Box

Upon unboxing your FASTWD Tablet, please verify that all the following items are included:

- FASTWD 10-inch Android 14 Tablet
- Bluetooth Keyboard
- Mouse
- OTG Adapter
- Capacitor Pen (Stylus)
- Charging Unit (Adapter)
- Leather Case
- Data Cable
- Tablet User Manual (this document)



Image: All components included in the FASTWD Tablet package. This includes the tablet, a Bluetooth keyboard, a mouse, an OTG adapter, a capacitor pen, a charging adapter, a leather case, a data cable, and the user manual.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your tablet. Connect the provided charging unit and data cable to the tablet's Type-C port. The battery indicator on the screen will show charging progress.



Image: The tablet connected to a charger, displaying an 8000mAh battery icon, indicating its large battery capacity and charging status.

3.2 Power On/Off

- **To Power On:** Press and hold the power button located on the side of the tablet until the FASTWD logo appears.
- **To Power Off:** Press and hold the power button until the power options menu appears. Select "Power off" and confirm.
- **To Restart:** From the power options menu, select "Restart" and confirm.

3.3 Initial Setup Wizard

Upon first power-on, the Android 14 setup wizard will guide you through essential configurations:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one. This is necessary to access the Google Play Store and other Google services.
4. Set up screen lock (PIN, pattern, or password).
5. Review and accept Google services terms.

3.4 Connecting Accessories (Keyboard & Mouse)

The included keyboard and mouse connect via Bluetooth.

1. Ensure the keyboard and mouse are charged and powered on.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Turn on Bluetooth. The tablet will scan for available devices.
4. Select the keyboard or mouse from the list of available devices. Follow any on-screen prompts to complete pairing.

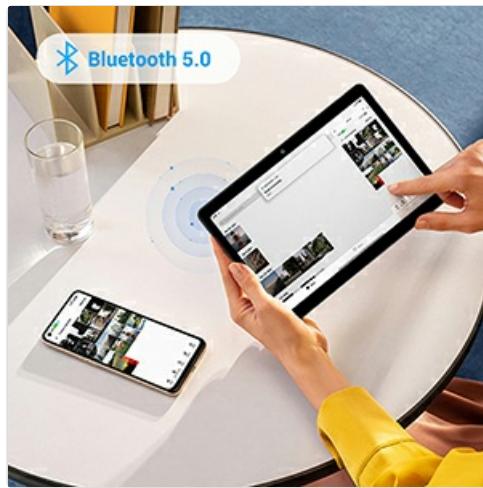


Image: A tablet displaying the Bluetooth 5.0 logo, indicating an active Bluetooth connection, possibly to another device like a smartphone.

3.5 Expanding Storage (Micro SD)

The tablet supports Micro SD cards up to 1TB for expanded storage.

1. Locate the Micro SD card slot on the side of the tablet.
2. Gently insert the Micro SD card into the slot until it clicks into place.
3. The tablet will prompt you to format the card. Follow the on-screen instructions. You can choose to format it as portable storage (for media) or internal storage (for apps and data).



Image: A Micro SD card being inserted into the dedicated slot on the side of the tablet, illustrating the expandable storage feature.

4. OPERATING THE TABLET

4.1 Android 14 Features

Your FASTWD Tablet runs on Android 14, offering a range of features for enhanced usability:

- **Customizable Icons and Widgets:** Personalize your home screen with app icon customization and desktop widgets.
- **Split Screen:** Use two apps simultaneously side-by-side for improved multitasking.
- **PC Mode:** Optimize the interface for a desktop-like experience when using the keyboard and mouse.
- **Parental Control:** Manage and restrict content for child users.
- **Password Unlock:** Secure your device with various unlock methods.
- **Dark Theme & Night Lighting Mode:** Reduce eye strain and save battery in low-light conditions.

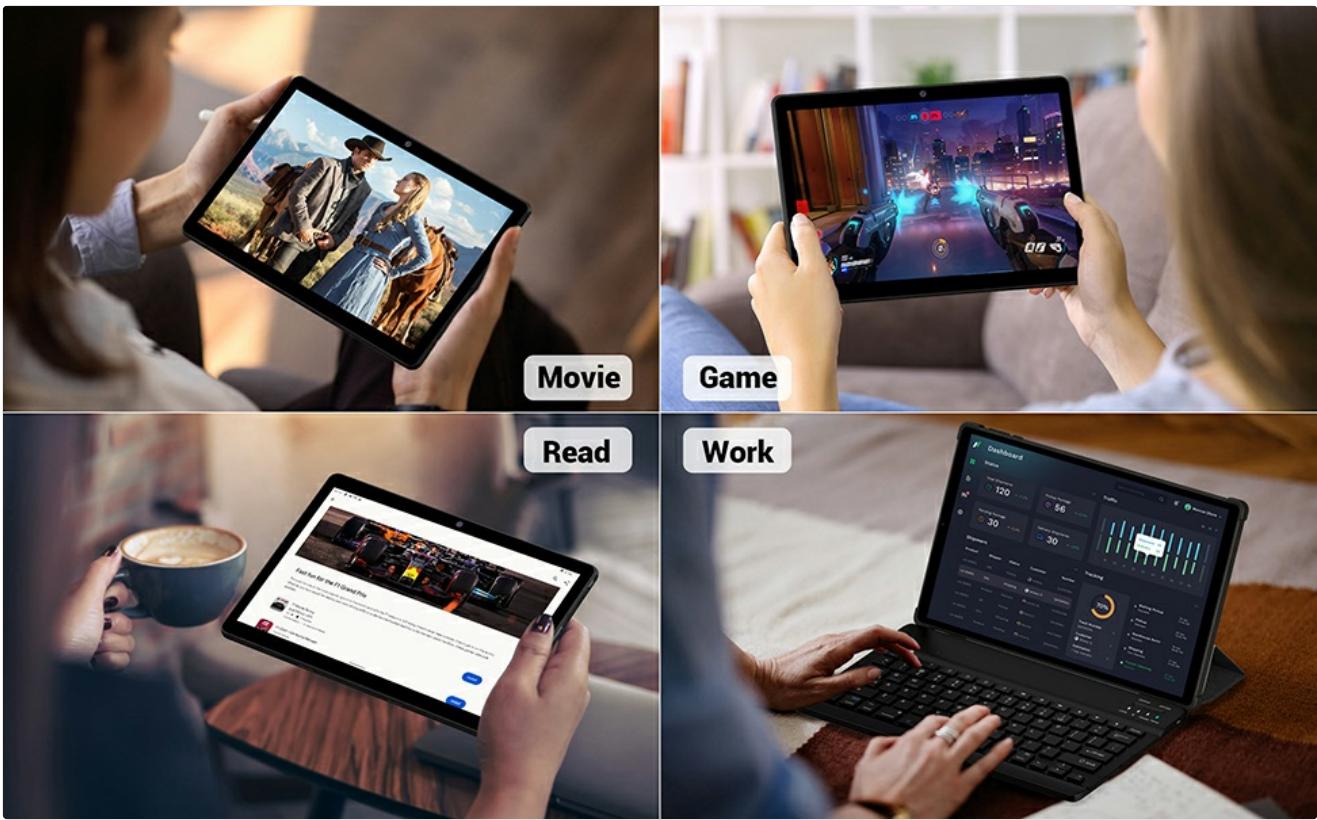


Image: Several tablets arranged to showcase new Android 14 features, including split-screen multitasking, PC mode, parental controls, password unlock, and various theme choices.

4.2 Display and Audio

The tablet features a 10-inch IPS HD Full View display with 1280x800 resolution and G+G technology, enhanced with T-colour Enhancement for vibrant visuals and effective blue light reduction. Dual stereo speakers with 5 symmetrical sound holes provide clear and immersive audio.

Satisfy Your Large Memory Needs

36GB RAM allows you to seamlessly switch between applications.
128GB ROM and **1TB scalability** allow you to store all games, photos and videos.

36GB

(12GB+24GB RAM)

128GB

ROM

1TB

Expandable



Image: A close-up view of the tablet's 10.1-inch high-definition display, highlighting its anti-blue light feature, comfortable touch, precise click, fast response, and original color reproduction.

Dual camera



Immersive **dual speakers** coupled with ultra-high amplitude surround sound allow you to experience the fun of enjoying movies in the cinema at home.



Image: A diagram illustrating the tablet's dual camera setup (8MP rear and 5MP front) and emphasizing the immersive dual stereo speakers with ultra-high amplitude surround sound for an enhanced audio experience.

4.3 Connectivity

- Wi-Fi:** Supports 2.4Ghz and 5.0Ghz dual-band Wi-Fi for fast and stable internet connection.
- Bluetooth 5.0:** For wireless connection to peripherals like headphones, speakers, keyboard, and mouse.
- GPS:** Integrated GPS for navigation and location services.

New Experience Android 14 Tablet

The new Android 13 update brings even more new features
Design pages, system functions and privacy security give you
different experience.



Image: The tablet screen showing various applications and content, illustrating the fast connection speed provided by its 2.4G/5G dual-band Wi-Fi, which offers a stronger signal and faster user experience.

4.4 Cameras

The tablet is equipped with an 8MP rear camera and a 5MP front camera for photos, video calls, and more.

4.5 Usage Scenarios



Image: A collage of four images demonstrating the tablet's versatility: watching movies, playing games, reading, and working with the keyboard attached.

5. MAINTENANCE

5.1 Battery Management

The 8000mAh battery, combined with AI Smart Power Management, provides approximately 8 hours of online video playback. To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery drain completely before recharging regularly.
- Use the provided charging unit.
- Utilize Dark Theme and Night Lighting Mode to reduce power consumption.

5.2 Storage Management

With 128GB ROM (expandable up to 1TB), you have ample storage. Regularly manage your storage by:

- Uninstalling unused applications.
- Deleting unnecessary files and media.
- Moving large files to an external Micro SD card.

5.3 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet does not power on.	Low battery; system crash.	Charge the tablet for at least 30 minutes. If still unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Wi-Fi connection issues.	Incorrect password; router issue; tablet Wi-Fi disabled.	Check Wi-Fi password. Restart your router. Toggle Wi-Fi off and on in tablet settings. Ensure you are within range of the Wi-Fi signal.
Bluetooth accessory not pairing.	Accessory not in pairing mode; Bluetooth off on tablet.	Ensure accessory is in pairing mode. Check tablet Bluetooth settings. Restart both devices.
Tablet is slow or unresponsive.	Too many apps running; low storage; software glitch.	Close background apps. Clear cache. Free up storage space. Restart the tablet.
Screen is unresponsive.	Temporary software glitch.	Force restart the tablet by holding the power button.

7. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	FASTWD
Model Number	L231-EEA
Operating System	Android 14
Processor Speed	2 GHz
RAM	36GB (12GB physical + 24GB virtual)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB via Micro SD
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels (HD IPS)
Rear Camera	8 MP
Front Camera	5 MP
Battery Capacity	8000mAh
Average Battery Life	8 Hours (online video playback)
Connectivity	2.4Ghz/5.0Ghz Dual-Band Wi-Fi, Bluetooth 5.0, GPS
Speakers	2 Stereo Speakers with 5 symmetrical sound holes
Dimensions	33.5 x 19.6 x 4 cm
Weight	1.31 kg

8. WARRANTY AND SUPPORT

FASTWD offers a two-year quality warranty for this tablet. If you encounter any quality issues with your tablet within two years of purchase, please contact FASTWD technical support or the return service for assistance.

For further support, please refer to the official FASTWD website or contact their customer service channels.

© 2024 FASTWD. All rights reserved.

Related Documents

 User Manual <small>Read the manual before using the product.</small>	FASTWD Tablet User Manual Comprehensive user manual for the FASTWD Tablet, covering setup, features, troubleshooting, and warranty information. Learn how to get started, navigate the home screen, manage settings, connect to networks, and troubleshoot common issues.
--	--

