

[manuals.plus](#) /› [FASTWD](#) /› [FASTWD Z10 Android 14 Tablet User Manual](#)

FASTWD Z10

FASTWD Z10 Android 14 Tablet User Manual

Model: Z10 (L231-EEA)

INTRODUCTION

Welcome to the user manual for your new FASTWD Z10 Android 14 Tablet. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. Designed for versatility and performance, the FASTWD Z10 offers a seamless user experience with its powerful Android 14 operating system, ample memory, and comprehensive accessory kit.

Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

WHAT'S IN THE Box

Your FASTWD Z10 Tablet package includes the following items:

- FASTWD Z10 Android 14 Tablet
- Bluetooth Keyboard
- Wireless Mouse
- OTG Adapter
- Stylus Pen
- Charger
- Leather Case
- USB Data Cable
- User Manual (this document)



Image: Contents of the FASTWD Z10 Tablet package, showing the tablet and all accompanying accessories.

SPECIFICATIONS

Feature	Detail
Model Name	Z10
Model Number	L231-EEA
Operating System	Android 14
Processor Brand	ARM
Processor Speed	2 GHz
RAM	36 GB (12GB + 24GB Virtual Memory)

Internal Storage (ROM)	128 GB
Expandable Storage	Up to 1 TB via Micro SD card
Screen Size	10.1 Inches
Display Resolution	1280 x 800 pixels (IPS Full View HD)
Rear Camera	8 MP
Front Camera	5 MP
Battery Capacity	8000 mAh
Battery Life	Approx. 8 hours online video playback
Connectivity	2.4Ghz/5.0Ghz Dual-Band Wi-Fi, Bluetooth 5.0
Special Features	USB OTG Support, Dual Stereo Speakers, Anti-blue light screen
Color	Gray

FASTWD Tablet

10.1 inch / 36 GB RAM / 128GB ROM



Android 14



5G WiFi



8000mAh



BT 5.0



Image: Overview of the FASTWD Z10 Tablet's core features.

SETUP

1. Initial Charging

Before first use, fully charge your tablet. Connect the provided charger to the tablet's USB-C port and plug it into a power outlet. The battery indicator on the screen will show charging progress.

8000 mAh Battery + 16W Fast Charge



Type-c



Standby
720 Hours



Music Playback
8 Hours



Game
4 Hours



Web
10 Hours

Image: Tablet battery capacity and charging indication.

2. Powering On/Off

- To Power On:** Press and hold the Power button (usually located on the side) until the FASTWD logo appears.
- To Power Off:** Press and hold the Power button until the power options menu appears, then select "Power off".
- To Restart:** From the power options menu, select "Restart".

3. Inserting a Micro SD Card (Optional)

To expand storage, insert a Micro SD card (up to 1TB, not included) into the designated slot on the tablet. Ensure the card is inserted correctly with the gold contacts facing down.

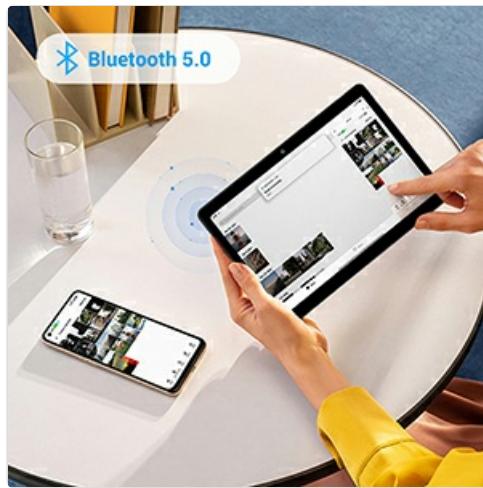


Image: Micro SD card insertion slot.

4. Connecting Accessories

Your tablet comes with a Bluetooth keyboard, wireless mouse, and stylus for enhanced productivity.

- **Bluetooth Keyboard/Mouse:** Turn on the keyboard/mouse and put it into pairing mode. On your tablet, go to *Settings > Connected devices > Bluetooth*, turn on Bluetooth, and select the device from the list to pair.
- **Stylus Pen:** The stylus is a capacitive pen and does not require pairing. Simply use it directly on the screen.
- **OTG Adapter:** Use the OTG adapter to connect USB flash drives or other USB peripherals to your tablet.

OPERATING THE TABLET

1. Android 14 Features

The FASTWD Z10 runs on the latest Android 14, offering enhanced customization, improved privacy, and a smoother user experience. You can personalize app icons, add desktop widgets, and enjoy improved compatibility with a wide range of applications like YouTube, Netflix, WhatsApp, Facebook, and Instagram.

2. Wi-Fi Connection

Connect your tablet to the internet via Wi-Fi for browsing, streaming, and app downloads. The tablet supports both 2.4GHz and 5.0GHz dual-band Wi-Fi for stable and fast connections.

1. Go to *Settings > Network & internet > Internet*
2. Turn on Wi-Fi.
3. Select your desired Wi-Fi network from the list and enter the password if prompted.

3. Bluetooth Connectivity

Bluetooth 5.0 ensures stable wireless transmission for connecting headphones, speakers, or other Bluetooth-enabled devices.

1. Go to *Settings > Connected devices > Connection preferences > Bluetooth*
2. Turn on Bluetooth.
3. Select "Pair new device" and choose your device from the list.



Image: Bluetooth 5.0 connectivity in action.

4. Display and Audio

The 10.1-inch IPS Full View HD display (1280x800 resolution) features G+G technology and T-color enhancement for vibrant, true-to-life images. It also includes effective blue light reduction for comfortable viewing.

Equipped with 2 symmetrical stereo speakers and 5 integrated sound holes, the tablet delivers crystal-clear audio, providing an immersive home cinema experience.

10.1-Inch Anti-blue Light High-definition Display



Anti-Blue
Light Screen



Comfortable
Touch



Precise Click



Fast Response



Original Color



Image: Tablet display features.

Dual camera



Immersive **dual speakers** coupled with ultra-high amplitude surround sound allow you to experience the fun of enjoying movies in the cinema at home.



Image: Dual camera and speaker system.

5. Camera Usage

Capture moments with the tablet's 8MP rear camera and 5MP front camera. Open the Camera app to take photos or record videos.

6. Battery Management

The 8000mAh battery, combined with intelligent AI power management, dark theme, and night light mode, optimizes power consumption. This provides approximately 8 hours of online video playback, ensuring extended usage.

7. Storage Management

With 128GB of internal storage and 36GB of RAM (12GB physical + 24GB virtual), the tablet handles multitasking and demanding applications smoothly. You can expand storage up to 1TB with a Micro SD card for all your games, photos, and videos.

Satisfy Your Large Memory Needs

36GB RAM allows you to seamlessly switch between applications.
128GB ROM and 1TB scalability allow you to store all games, photos and videos.

36GB

(12GB+24GB RAM)

128GB

ROM

1TB

Expandable



Image: Tablet memory and storage capabilities.

MAINTENANCE

1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid using harsh chemicals or abrasive materials.

2. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not let the battery completely drain frequently.
- Use only the provided charger or a certified compatible charger.

3. Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features, security patches, and

performance improvements. Go to *Settings > System > System update* to check for updates.

4. Storage Management

Periodically review your installed apps and files. Uninstall unused apps and delete unnecessary files to free up storage space and maintain optimal performance.

TROUBLESHOOTING

Common Issues and Solutions:

- Tablet not turning on:** Ensure the tablet is charged. Connect it to the charger and wait a few minutes before attempting to power on again.
- Wi-Fi connection issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
- Slow performance:** Close unused apps running in the background. Clear cache for frequently used apps. Consider uninstalling large, unnecessary applications. Restarting the tablet can also help.
- Apps crashing:** Ensure the app is updated to its latest version. Clear the app's cache and data (*Settings > Apps > [App Name] > Storage & cache*). If the issue persists, reinstall the app.
- Screen unresponsive:** Try restarting the tablet by holding the power button. If unresponsive, force restart by holding the power button for an extended period (e.g., 10-15 seconds) until it powers off.

If you encounter persistent issues not covered here, please refer to the Warranty and Support section for further assistance.

WARRANTY AND SUPPORT

FASTWD offers a **two-year quality problem warranty** for this tablet. If you experience any quality-related issues with your tablet within two years of purchase, please contact FASTWD technical support or the return service through your point of purchase.

For technical assistance or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official FASTWD support website.

© 2023 FASTWD. All rights reserved.

This manual is subject to change without notice.

Related Documents - Z10

 FASTWD Tablet User Manual <small>Please read the manual before using the product.</small>	<p>FASTWD Tablet User Manual</p> <p>Comprehensive user manual for the FASTWD Tablet, covering setup, features, troubleshooting, and warranty information. Learn how to get started, navigate the home screen, manage settings, connect to networks, and troubleshoot common issues.</p>
---	--

