

JTLB JTLBg9c2o38k0n

JTLB Universal Projector Remote Control User Manual

MODEL: JTLBg9c2o38k0n

1. Introduction

This manual provides instructions for the JTLB Universal Projector Remote Control, model JTLBg9c2o38k0n. This device is designed to provide convenient control over various projector functions. Please read this manual thoroughly before use to ensure proper operation and to maximize the lifespan of your remote control.

The remote control is constructed from durable ABS material, ensuring portability and longevity. It operates wirelessly, offering a control distance of up to 10 meters, though actual range may vary depending on the specific projector model and environmental factors. It requires two AAA batteries for operation, which are not included.

2. Setup

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

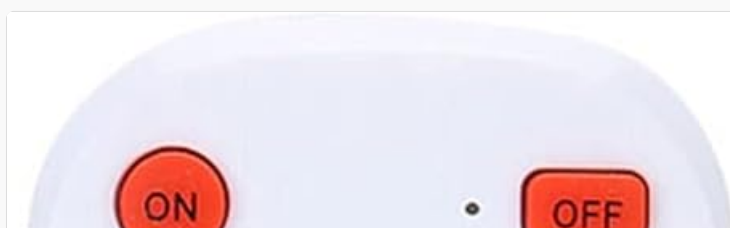




Figure 1: Battery Compartment. Insert two AAA batteries, observing polarity.

2.2 Initial Use

After battery installation, the remote control is ready for use. No complex pairing or configuration is typically required for universal projector remotes, as they often operate using standard infrared (IR) signals. Point the remote directly at your projector's IR receiver for optimal performance.

3. Operating Instructions

The JTLB Universal Projector Remote Control features a range of buttons for various projector functions. Familiarize yourself with the layout and functions below:



Figure 2: Remote Control Layout. All buttons are clearly visible.

- **ON/OFF:** Power button to turn the projector on or off.
- **VIDEO/RGB/SOURCE:** Select input sources (e.g., HDMI, VGA, Video).
- **AV/MUTE:** Mute audio or switch to AV input.
- **VOL +/-:** Adjust volume levels.
- **KEystone +/-:** Adjust keystone correction for image distortion.
- **ZOOM +/-:** Zoom in or out on the projected image.
- **MENU/ESC:** Access the projector's menu or exit current menu.
- **Navigation (Up, Down, Left, Right) & ENTER:** Navigate through menus and confirm selections.
- **POINTER:** Activate or deactivate a digital pointer function (if supported by projector).
- **MUTE:** Mute audio output.
- **BRIGHT/CONTRAST/COLOR:** Adjust image brightness, contrast, and color settings.

- **ASPECT/MODE/FREEZE/AUTO:** Control aspect ratio, display modes, freeze frame, and auto-adjust functions.
- **SIZE +/- / PAGE +/-:** Adjust image size or navigate pages in presentations.
- **SET:** Potentially for advanced settings or programming (refer to your projector's manual).

Note: Not all functions may be supported by every projector model. Refer to your specific projector's user manual for compatibility and detailed function descriptions.

4. Maintenance

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

Wipe the remote control with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. Troubleshooting

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote and the projector's IR receiver.
 - Confirm you are within the effective operating range (up to 10 meters).
- **Certain buttons do not work:**
 - Some functions may not be supported by your specific projector model. Refer to your projector's manual.
 - Clean the remote control to ensure no debris is obstructing button presses.
- **Short operating range:**
 - Replace batteries.
 - Ensure a clear line of sight to the projector.
 - Environmental factors or strong light sources can interfere with IR signals.

6. Specifications

Feature	Specification
---------	---------------

Brand	JTLB
Model Number	JTLBg9c2o38k0n
Material	ABS
Color	White
Dimensions	Approximately 15.6 x 4.5 x 2 cm (6.14 x 1.77 x 0.79 inches)
Remote Control Distance	Up to 10 meters (actual distance depends on projector model)
Battery Type	2 x AAA batteries (not included)
Power Supply	DC 3V
Weight	Approximately 52g (without batteries)
Compatibility	Compatible with models described on the back of the remote control (general universal compatibility for projectors)

7. Warranty and Support

Information regarding specific warranty terms, spare parts availability, and software updates for the JTLB Universal Projector Remote Control is not available in the provided product data. For any support inquiries, please refer to the retailer or manufacturer's contact information provided at the point of purchase.