



Manuals.plus /

› KOKODI /

› KOKODI Kids Camera Toy Digital Camera User Manual

KOKODI X5

KOKODI Kids Camera Toy Digital Camera User Manual

Model: X5 | For Ages 3-12

INTRODUCTION

The KOKODI Kids Camera is designed to inspire creativity and capture precious moments for children aged 3 to 12. Featuring a 48MP dual-camera, 1080P HD video recording, and a durable dinosaur-themed protective case, this camera is built for fun and adventure. It comes equipped with a 32GB SD card, various photo frames, filters, and built-in puzzle games to enhance the user experience.



Image: The KOKODI Kids Camera in Dinosaur-Blue, showcasing its front and back views along with the included 32GB SD card, neck lanyard, and USB charging cable.

PACKAGE CONTENTS

Before first use, please ensure all items listed below are present in the package:

- 1 x KOKODI Kids Camera (Model: X5)
- 1 x Cartoon Protective Case (Dinosaur-Blue)
- 1 x USB Charging Cable
- 1 x 32GB SD Card
- 1 x Neck Lanyard
- 1 x User Manual (this document)

KOKODI



1



2

1
1*Camera Case

2
1*Kids Camera



3

3
1*User Manual



4

4
1*32G SD Card



5

5
1*USB Charging Cord



6

6
1*Neck Lanyard



Image: A visual representation of the KOKODI Kids Camera and its accessories, including the camera, protective case, USB cable, SD card, lanyard, and user manual.

SETUP GUIDE

1. Charging the Camera

The camera has a built-in rechargeable lithium battery. For optimal performance, fully charge the camera before first use.

1. Connect the provided USB Charging Cable to the camera's USB port.
2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged (approximately 2-3 hours), the light will change or turn off.



Image: The kids camera connected to a laptop via its USB cable, illustrating the charging process and file transfer capability.

2. Inserting the SD Card

The camera requires an SD card to store photos and videos. A 32GB SD card is included.

1. Locate the SD card slot on the side of the camera.
2. Gently insert the 32GB SD card into the slot with the metal contacts facing down until it clicks into place.
3. To remove, gently push the SD card in again until it pops out.

3. Attaching the Lanyard

Attach the neck lanyard to the designated loops on the camera's protective case to prevent accidental drops and make it easy to carry.



Image: A child wearing the KOKODI Kids Camera around their neck with the blue lanyard, demonstrating its portability and loss-prevention feature.

OPERATING INSTRUCTIONS

Camera Layout and Buttons

Camera Button Function Instructions



Image: A detailed diagram highlighting the various parts of the KOKODI Kids Camera, including the front and rear HD cameras, power button, navigation buttons (Up, Menu, Mode, Down), 2.0-inch IPS display, silicone case, photo/video button, speaker, microphone, USB port, and SD card slot.

Button Functions

Button	Function
Power Button	Press and hold to turn the camera On/Off.
Up Button	Navigate up in menus, zoom in during photo/video mode.
Menu Button	Access camera settings and options.
Mode Button	Switch between Photo, Video, Playback, Games, and Music modes.
Down Button	Navigate down in menus, zoom out during photo/video mode.
Photo/Video Button	Press to take a photo or start/stop video recording.

Taking Photos and Recording Videos

The camera features a 48MP dual-camera for high-resolution photos and 1080P HD video recording.

1. Turn on the camera using the **Power Button**.
2. Use the **Mode Button** to select Photo or Video mode.
3. Frame your shot using the 2.0-inch IPS display. Use the **Up/Down Buttons** for 8x digital zoom.
4. Press the **Photo/Video Button** to capture a photo or start/stop recording.



Image: A father and child taking a selfie with the KOKODI Kids Camera, highlighting its dual-lens feature for both front and rear photography.



Image: A child holding the KOKODI Kids Camera, with an overlay showing an 8x zoom on a rabbit, illustrating the camera's digital zoom capability.

Creative Features

Enhance your photos and videos with the camera's built-in creative options:

- **Photo Frames & Filters:** Access 28 cartoon sticker photo frames and 6 different filters via the **Menu Button** to add fun effects to your pictures.
- **Puzzle Games:** The camera includes 3 pre-installed puzzle games for entertainment. Navigate to the Games mode using the **Mode Button**.
- **Music Player:** Play MP3 music files by transferring them to the SD card. Select Music mode via the **Mode Button**.
- **Timed Shooting:** Set a timer for photos (e.g., 10 seconds) through the camera settings, allowing time to pose for group shots.



Image: The KOKODI Kids Camera displaying a puzzle game on its screen, with other game icons in the background, illustrating its built-in entertainment features.



Image: The KOKODI Kids Camera displaying musical notes on its screen, demonstrating its music player functionality.



Image: Children posing for a photo while the KOKODI Kids Camera displays a 10-second countdown, illustrating the time-lapse or timed shooting feature.

Transferring Files to Computer

You can easily transfer photos and videos from the camera to a computer:

1. Connect the camera to your computer using the provided USB cable.
2. The camera will appear as a removable disk drive on your computer.
3. Open the drive to access the stored photos (JPG format) and videos (AVI format).
4. Copy the files to your computer as needed.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods.
- **Protective Case:** The silicone protective case is designed to be shock-resistant and anti-fall. Keep it on the camera for added durability.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Camera not turning on.	Ensure the battery is charged. Connect to a USB power source and try again.
Camera freezing or abnormal function.	Insert a thin metal pin (not included) into the reset hole to manually reset the camera. The reset hole is typically a small pinhole on the device.
Cannot save photos/videos.	Check if the SD card is properly inserted. Ensure the SD card is not full. Try formatting the SD card (this will erase all data).
Poor image/video quality.	Ensure the lens is clean. Check lighting conditions.
Computer does not recognize the camera.	Ensure the USB cable is securely connected. Try a different USB port or cable. Restart the computer.

SPECIFICATIONS

Feature	Detail
Brand	KOKODI
Model Name	XJ-001
Model Number	X5
Photo Resolution	48 MP (Maximum Webcam Image Resolution)
Video Resolution	1080p HD
Display Screen	2.0-inch IPS Eye Protection Screen
Digital Zoom	8x
Storage	32GB SD Card (included)
Battery Type	Built-in Lithium Polymer
Battery Life (Average)	2.5 Hours (continuous use)
Connectivity	USB
Dimensions (Approx.)	3.95 inches (L) x 1.98 inches (W) x 2.35 inches (H)
Supported File Formats	Photo: JPEG; Video: AVI; Music: MP3

WARRANTY AND SUPPORT

Warranty Information

This KOKODI Kids Camera comes with a **2-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, concerns, or assistance with your KOKODI Kids Camera, please do not hesitate to contact our customer support team. We are committed to providing perfect solutions as soon as possible.

Please refer to the contact information provided on the product packaging or the official KOKODI website for the most up-to-date support channels.