

[Manuals.plus](#) /

› [Gamrombo](#) /

› Gamrombo Wireless Controller User Manual

Gamrombo B0CMXF76R8

Gamrombo Wireless Controller User Manual

Model: B0CMXF76R8

Brand: Gamrombo

1. INTRODUCTION AND OVERVIEW

This manual provides comprehensive instructions for the Gamrombo Wireless Controller, designed for an enhanced gaming experience across multiple platforms. This controller offers advanced features such as programmable macro functions, turbo mode, 6-axis gyro sensor, and dual vibration, ensuring precise control and immersive gameplay.

It is compatible with Xbox Series X/S, Xbox One X, Windows PCs (Wegame, Steam, Epic, Origin), Android, iOS, and Samsung TVs. Please read this manual carefully to ensure proper setup and optimal use of your new controller.



Figure 1: Gamrombo Wireless Controller

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1x Gamrombo Wireless Controller
- 1x USB Charging Cable
- 1x User Manual (this document)

Note: 2x AA batteries are required for operation and are not included in the package. Please purchase them separately.

3. CONTROLLER LAYOUT

Familiarize yourself with the buttons and components of your Gamrombo Wireless Controller:

3D GAMING JOYSTICK

Zero delay ,360° response without interval
the game is fast and accurate



Figure 2: Controller Button Layout

- **Left Stick:** For directional movement.
- **D-pad:** Directional Pad for precise inputs.
- **View Button:** Access in-game menus or system functions.
- **Menu Button:** Access game or system menus.
- **Home Button:** Return to the console/device home screen.
- **Right Stick:** For camera control or aiming.
- **A/B/X/Y Buttons:** Standard action buttons.
- **LB/RB:** Left and Right Bumper buttons.
- **LT/RT:** Left and Right Trigger buttons.
- **USB Charging Port:** For wired connection and charging.
- **Pair Key:** For wireless pairing.
- **PR/PL Buttons:** Programmable back buttons.
- **Set Button:** Used for programming functions.

- **3.5mm Headphone Jack:** For audio output.

4. SETUP AND INITIAL CONNECTION

4.1. Battery Installation

Open the battery compartment on the back of the controller. Insert two (2) AA batteries, ensuring correct polarity (+/-). Close the battery compartment securely.

4.2. Wireless Connection (Bluetooth/WIFI)

To connect wirelessly to your device (Windows PC, Android, iOS, Mac, Samsung TV):

1. Ensure the controller has sufficient battery power.
2. Press and hold the Pair Key on the top of the controller until the indicator light begins to flash rapidly.
3. On your device, navigate to Bluetooth or Wireless settings.
4. Select "Gamrombo Controller" (or similar name) from the list of available devices to pair.
5. Once connected, the indicator light on the controller will become solid.



Figure 3: Multi-Platform Compatibility

4.3. Wired Connection

For a wired connection to your PC or Xbox console:

1. Connect one end of the USB charging cable to the USB charging port on the controller.
2. Connect the other end of the USB cable to an available USB port on your PC or Xbox console.
3. The controller will automatically be recognized by your device.

5. OPERATING INSTRUCTIONS

5.1. Programmable Macro Function

The controller features two back mappable buttons (PR/PL) that can be programmed with up to 16 button inputs. This allows for complex actions to be executed with a single press, enhancing gameplay and reducing finger strain.



Figure 4: Programmable Back Buttons

To program the Macro buttons:

1. Press and hold the "Set" button on the back of the controller.
2. While holding "Set", press the PR or PL button you wish to program. The indicator light will flash.
3. Input the sequence of up to 16 buttons you want to assign.
4. Press the "Set" button again to save the macro. The indicator light will stop flashing.

5.2. Turbo Function

The Turbo function allows for rapid-fire action by continuously pressing a button as long as it's held down. This can be particularly useful in fast-paced games.

TURBO FUNCTION

Gain a competitive edge with the Turbo Function, allowing you to easily activate rapid-fire mode for quick and efficient gameplay.



Figure 5: Turbo Function

To activate Turbo for a button:

1. Press and hold the "Turbo" button (located near the left stick).
2. While holding "Turbo", press the action button (A, B, X, Y, LB, RB, LT, RT) you wish to apply Turbo to.
3. Release both buttons. The selected action button will now have Turbo enabled.
4. Repeat the process to disable Turbo for a button.

5.3. 6-Axis Gyro Sensor and Adjustable Vibration

The integrated 6-axis gyro sensor provides precise motion tracking, enhancing control in games that support motion input. Dual vibration motors offer immersive haptic feedback, allowing you to feel every action and impact during gameplay.



Figure 6: Advanced Features

Vibration intensity is typically adjusted through the game or console settings. Refer to your game or console's user guide for specific instructions.

6. SOFTWARE UPDATE FOR XBOX COMPATIBILITY

Important: To ensure full compatibility and proper pairing with Xbox Series X/S and Xbox One X consoles, a software update is required. This update typically takes only a few minutes to complete.

If you are unable to connect to the Xbox system

Please download the updated software through this URL:

<https://we.tl/t-nP91yV2lWp>

There is a **software upgrade video** tutorial in the listing. Please check it out. It **only takes 2 minutes** to complete the upgrade



Figure 7: Software Update Requirement

Please follow these steps to update your controller's software:

1. Visit the official software download link:<https://we.tl/t-nP91yV2lWp>
2. Download the update program to your PC.
3. Open the downloaded upgrade program.
4. Press and hold the "Y" button on your Gamrombo controller.
5. While holding the "Y" button, connect the controller to your PC using the USB cable.
6. Once the program indicates "Connected", click the "Download" button within the software to start the update.
7. Wait for the progress bar to reach 100%. A 100% progress bar indicates a successful upgrade.
8. After upgrading, first disconnect the Xbox console with the cable before you can subsequently connect to the Xbox console wirelessly normally.

For a visual guide, please refer to the official software upgrade video tutorial:

Your browser does not support the video tag.

Video: [How to upgrade Xbox controller software \(008 010\)](#)

This video demonstrates the step-by-step process for updating your Gamrombo controller's firmware to ensure compatibility with Xbox consoles. It covers downloading the software, connecting the controller, and initiating the update.

7. TROUBLESHOOTING

Problem	Possible Cause / Solution
Controller does not connect to Xbox.	Software Update Required: This is the most common issue. Refer to Section 6: "Software Update for Xbox Compatibility" and perform the update. Ensure the controller is fully charged or has fresh AA batteries. Try re-pairing the controller (hold Pair Key). Restart your Xbox console.
Controller does not turn on.	Check battery installation and ensure batteries are not depleted. If using rechargeable batteries, ensure they are charged. Try connecting via USB cable to see if it powers on.
Buttons or joysticks are unresponsive/driftng.	Ensure the controller is properly connected. Restart the controller and the device it's connected to. Check for any physical obstructions or debris around the buttons/joysticks. Consider recalibrating joysticks if your operating system or game supports it.
Audio issues with 3.5mm jack.	Ensure the headset is fully plugged in. Check headset volume settings on the controller and device. Test with another headset to rule out headset issues.

8. SPECIFICATIONS

Feature	Detail
Model Number	B0CMXF76R8
Connectivity	Bluetooth, WIFI, Wired (USB)
Compatibility	Xbox Series X/S, Xbox One X, Windows PC, Android, iOS, Mac, Samsung TV
Special Features	Programmable Macro Function, Turbo Function, Dual Vibration, 6-Axis Gyro Sensor, 3.5mm Audio Jack
Power Source	2x AA Batteries (not included)
Item Weight	11.7 ounces (approx. 331 grams)
Package Dimensions	6.73 x 4.76 x 2.83 inches
Manufacturer	Gamrombo
Date First Available	November 8, 2023

9. WARRANTY AND SUPPORT

Gamrombo is committed to providing high-quality products and excellent customer service. Your Gamrombo Wireless Controller comes with a **1-Year Free Replacement Warranty**.

For any questions, concerns, or support needs regarding your controller, please contact Gamrombo customer service. We offer **Lifetime Service & 24H Promptly Response**.

When contacting support, please provide your Order ID for faster assistance.

You can visit the official Gamrombo Store for more information and contact options:[Gamrombo Store on Amazon](#)