

[manuals.plus](#) /

› [BEMOONY](#) /

› [BEMOONY H7 3.2L Cat Water Fountain Instruction Manual](#)

BEMOONY H7

BEMOONY H7 3.2L Cat Water Fountain Instruction Manual

Model: H7 | Capacity: 3.2 Liters (108 oz)

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your BEMOONY H7 3.2L Cat Water Fountain. This product is designed to provide a continuous supply of fresh, filtered water for your pets, encouraging healthy hydration habits. Please read this manual thoroughly before initial use and retain it for future reference.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- This appliance is intended for **indoor use only**. Do not use outdoors.
- Always **unplug the fountain** from the power outlet before cleaning, disassembling, or performing any maintenance.
- Keep the power cord away from areas where pets might chew on it. If the cord is damaged, discontinue use immediately.
- Ensure the water level is always maintained between the MIN and MAX indicators to prevent the pump from running dry.
- Do not allow children to play with or operate the fountain.
- Use only original BEMOONY replacement parts and accessories.
- Place the fountain on a stable, level surface to prevent tipping.

3. PACKAGE CONTENTS

Verify that all components are present and in good condition upon unpacking:

- Cat Fountain Unit (Base and Water Tray) x1
- Water Pump x1

- Faucet Outlet x1
- Carbon Filter x1
- Cotton Filter (Pre-filter Sponge) x1
- Power Adapter x1
- Instruction Manual x1



Figure 3.1: Included Components

4. SETUP INSTRUCTIONS

Follow these steps to assemble and prepare your BEMOONY H7 Cat Water Fountain for first use:

1. **Clean Components:** Wash all parts of the fountain (excluding the pump and power adapter) with mild soap and water. Rinse thoroughly.
2. **Install Pump:** Place the water pump into the designated slot in the fountain base. Ensure the power cord is routed correctly through the notch.
3. **Insert Filters:** Place the cotton filter (sponge) around the pump. Then, insert the carbon filter into its compartment in the water tray.
4. **Assemble Tray and Faucet:** Place the water tray onto the base, ensuring it sits securely. Attach the faucet outlet to the pump's spout.
5. **Fill with Water:** Fill the fountain with clean water up to the MAX level indicated on the translucent tank. Do not overfill.
6. **Connect Power:** Connect the power adapter to the fountain's power cord and then plug it into a standard electrical outlet. The fountain will begin operating.



Figure 4.1: Assembly Steps

5. OPERATING INSTRUCTIONS

Once assembled and powered on, the BEMOONY H7 Cat Water Fountain operates continuously, providing circulating water for your pets.

- **Water Level Monitoring:** The fountain features a translucent water tank with MIN and MAX indicators. Regularly check the water level and refill as needed to ensure the pump remains submerged and to prevent it from running dry. The integrated LED light assists in nighttime visibility of the water level.

- **Faucet Design:** The faucet spout provides a flowing stream of water, which can encourage pets, especially cats, to drink more frequently.
- **Quiet Operation:** The fountain is designed with an ultra-quiet pump to minimize noise, providing a comfortable drinking environment for your pets.

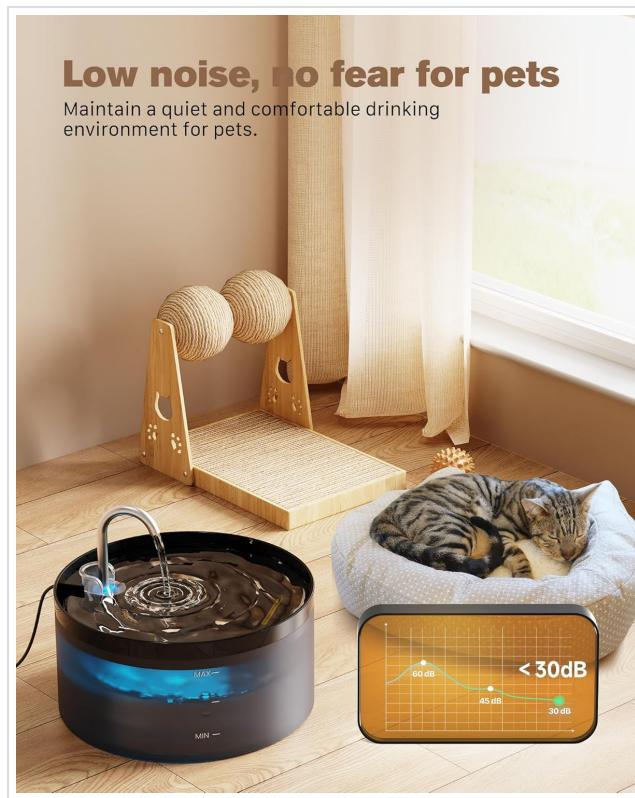


Figure 5.1: Water Level Indicators

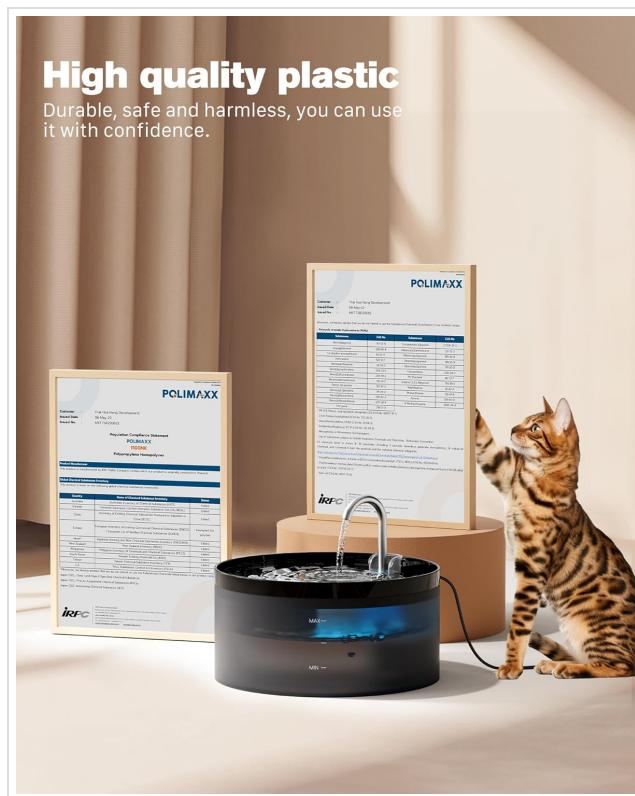


Figure 5.2: Faucet Water Flow

6. MAINTENANCE

Regular cleaning and filter replacement are crucial for maintaining water quality and extending the life of your fountain.

6.1 Cleaning the Fountain

- **Frequency:** Clean the fountain at least once a week, or more frequently if you have multiple pets or notice debris.
- **Steps:**
 - a. Unplug the fountain and disassemble all removable parts (water tray, faucet, filters, pump).
 - b. Wash the water tray and base with mild soap and water. Use a soft brush to clean any hard-to-reach areas.
 - c. Rinse all parts thoroughly to remove any soap residue.
 - d. Clean the pump by removing its cover and impeller. Rinse the impeller and the pump's interior under running water. Reassemble the pump.
 - e. Dry all components before reassembly.

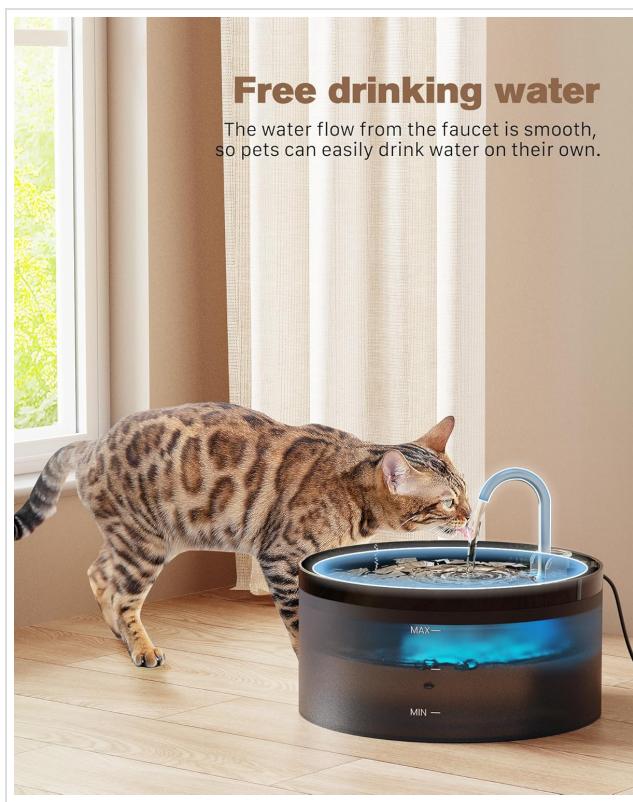


Figure 6.1: Cleaning Process

6.2 Filter Replacement

- **Carbon Filter:** Replace the carbon filter every 2-4 weeks, or sooner if the water appears cloudy or has an odor.
- **Cotton Filter (Pre-filter Sponge):** Replace the cotton filter every 1-2 months, or when it appears heavily soiled.
- **Steps:**
 - a. Unplug the fountain and remove the water tray.
 - b. Remove the old carbon and cotton filters. Dispose of them responsibly.
 - c. Rinse new filters under running water before placing them into their respective compartments.
 - d. Reassemble the fountain and refill with fresh water.

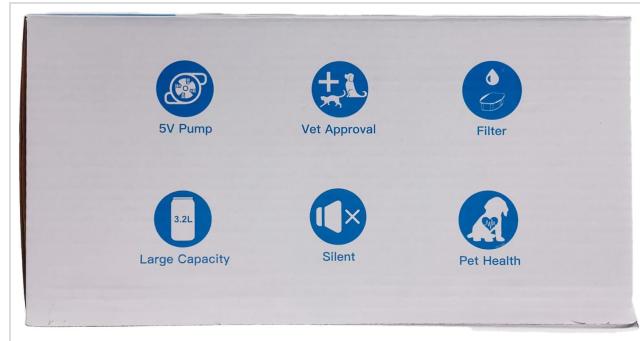


Figure 6.2: Replacement Filters

7. TROUBLESHOOTING

If you encounter issues with your BEMOONY H7 Cat Water Fountain, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Fountain not dispensing water.	Low water level; pump clogged; power issue.	Refill water to MAX level. Clean pump and filters. Check power connection.
Excessive noise from pump.	Low water level; pump dirty; impeller obstructed.	Ensure water is at MAX level. Clean pump and impeller thoroughly.
Water tastes or smells bad.	Filter needs replacement; fountain needs cleaning.	Replace carbon filter. Perform a thorough cleaning of all fountain components.
Water leakage.	Improper assembly; damaged component.	Ensure all parts are correctly assembled and seated. Check for cracks or damage.

8. SPECIFICATIONS

Feature	Detail
Model Name	H7
Brand	BEMOONY
Capacity	3.2 Liters (108 oz)
Material	Polypropylene (PP)
Item Dimensions (LxWxH)	9.06 x 9.06 x 4.53 inches (approx. 8.9" L x 8.9" W x 4.6" H)
Item Weight	1.94 Pounds
Power Supply	5V Pump (Adapter included)
Target Audience	Cats, Dogs, House-cats


9. WARRANTY AND SUPPORT

Your BEMOONY H7 Cat Water Fountain is covered by a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact BEMOONY customer service. Refer to the contact information provided on the product packaging or the official BEMOONY website for assistance.

© 2023 BEMOONY. All rights reserved.

Related Documents - H7

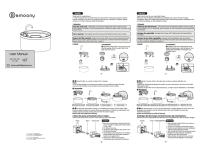	<p>Bemoony H7 Automatic Pet Water Fountain User Manual</p> <p>Learn how to set up, maintain, and troubleshoot your Bemoony H7 automatic pet water fountain with this comprehensive user manual. Ensure fresh, clean water for your pet.</p>
	<p>Domus Line DIY LED Profiles: Custom Lighting Solutions</p> <p>Explore the Domus Line collection of DIY LED profiles for custom, professional, and flexible lighting solutions. Find profiles, diffusers, end caps, and accessories for interior design projects.</p>
	<p>TRUX ACCESSORIES LED Headlights Troubleshooting Guide</p> <p>Comprehensive troubleshooting guide for TRUX ACCESSORIES LED headlights, covering common issues like high beam/low beam problems, flickering, wiring, and installation. Find solutions for various TRUX LED headlight models.</p>
	<p>Polar A300 Průvodce Začínáme - Fitness Tracker a Monitor Aktivity</p> <p>Objevte, jak nastavit a používat sporttester Polar A300 a snímač srdeční frekvence Polar H7. Sledujte svou aktivitu, spánek a tréninkové výsledky s Polar Flow.</p>
	<p>eScooter H7 Owner's Manual</p> <p>This manual provides comprehensive instructions for the eScooter H7, covering product overview, specifications, folding steps, operation, maintenance, troubleshooting, and safety warnings. Learn how to safely operate and care for your electric scooter.</p>
	<p>ProForm Carbon HIIT H7 User Manual</p> <p>Comprehensive user manual for the ProForm Carbon HIIT H7 elliptical trainer, covering assembly, operation, maintenance, and troubleshooting.</p>

