

[Manuals.plus](#) /

› [Midea](#) /

› Midea Dual Basket Air Fryer Oven User Manual

Midea MDEC002F5

Midea Dual Basket Air Fryer Oven User Manual

Model: MDEC002F5 | Brand: Midea

1. INTRODUCTION AND OVERVIEW

The Midea Dual Basket Air Fryer Oven is a versatile 11-quart appliance designed to simplify your cooking experience. Featuring an innovative double-decker design with an upper 6-quart basket and a lower 5-quart baking pan, it allows for simultaneous preparation of different dishes. With 8-in-1 functions including air fry, grill, dehydrate, bake, roast, broil, reheat, and toast, this appliance is a comprehensive kitchen solution. It incorporates three heating tubes for precise temperature control and even cooking, along with Smart Sync Finish technology to ensure both dishes are ready at the same time. For added convenience, the air fryer offers Wi-Fi connectivity, allowing control and access to over 50 recipes via the MSmart App, and is compatible with voice assistants like Alexa.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during operation.

3. PRODUCT COMPONENTS



Main Unit: The primary appliance housing the control panel, heating elements, and cooking compartments.



Upper Air Fryer Basket (6QT): Designed for air frying, ideal for items like fries and nuggets. Features a removable grill plate for easy cleaning.



Lower Oven Pan (5QT): Suitable for baking, roasting, and broiling, perfect for pizza or larger items. Includes a removable drip tray.

4. SETUP

- 1. Unpack:** Carefully remove the air fryer and all its accessories from the packaging. Remove any protective films or stickers from the appliance.
- 2. Initial Cleaning:** Before first use, wash the upper air fryer basket, lower oven pan, grill plate, and drip tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.

3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 6 inches (15 cm) of clear space on all sides of the appliance to allow for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded 120V AC electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview



The digital control panel features a central knob for adjusting time and temperature, along with touch buttons for various functions and basket selection.

- **Digital Display:** Shows temperature, time, and selected functions.
- **Central Knob:** Rotate to adjust time and temperature. Press to confirm selection or cycle through functions.
- **UPPER / LOWER Buttons:** Select the upper basket or lower oven for independent control.

- **LIGHT Button:** Turns the interior light on/off to monitor cooking progress.
- **SYNC FINISH Button:** Activates the Smart Sync feature for simultaneous completion of cooking in both zones.
- **CANCEL Button:** Stops the current cooking program.
- **TIME / TEMP Buttons:** Toggle between time and temperature adjustment modes.
- **START / PAUSE Button:** Starts or pauses the cooking cycle.

5.2 8-in-1 Functions

The Midea Air Fryer Oven offers 8 preset menus for diverse cooking needs:

- **Air Fry:** For crispy results with little to no oil.
- **Grill:** Ideal for searing and grilling various foods.
- **Dehydrate:** Low-temperature cooking for drying fruits, vegetables, or jerky.
- **Bake:** Perfect for cakes, pastries, and other baked goods.
- **Roast:** For tender and flavorful roasted meats and vegetables.
- **Broil:** High-heat cooking for browning and crisping the top layer of food.
- **Reheat:** Quickly warms up leftovers while maintaining texture.
- **Toast:** For bread, bagels, and other toasted items.

5.3 Dual Zone Cooking & Smart Sync Finish

The dual basket design allows you to cook two different items simultaneously. The Smart Sync Finish technology automatically adjusts the cooking time of each zone so that both dishes complete cooking at the same moment, ensuring a hot and fresh meal.



Smart Sync Finish ensures both dishes are ready simultaneously.

5.4 Wi-Fi Connectivity & App Control

Connect your Midea Air Fryer Oven to your home Wi-Fi network to unlock smart features via the MSmart App. The app provides access to over 50 recipes, allows you to monitor cooking progress, receive alerts, and control settings remotely. The appliance is also compatible with voice control through Amazon Alexa and Google Assistant.



Control your air fryer and access recipes via the MSmart App.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool down completely before cleaning.
- **Removable Parts:** The upper air fryer basket, lower oven pan, grill plate, and drip tray are dishwasher safe for convenient cleaning. For stubborn residue, soak them in warm, soapy water before scrubbing with a non-abrasive sponge.
- **Interior:** Wipe the interior of the appliance with a damp cloth. For baked-on food, a non-abrasive cleaner can be used. Avoid using metal scouring pads or abrasive cleaners that can damage the non-stick coating.
- **Exterior:** Clean the exterior surface with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- **Heating Elements:** Gently wipe the heating tubes with a damp cloth. Do not use excessive water or immerse the appliance.

7. TROUBLESHOOTING

If you encounter issues with your Midea Air Fryer Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; main power switch off.	Ensure power cord is securely plugged into a working outlet. Check household circuit breaker.
Food not cooked evenly.	Overcrowding of baskets; incorrect temperature/time.	Cook in smaller batches. Adjust temperature and time as per recipe or cooking guide. Shake or flip food halfway through.
White smoke from appliance.	Excess oil/grease from food; food residue in heating elements.	Ensure baskets/pans are clean. Remove excess oil from food before cooking.
Wi-Fi connectivity issues.	Incorrect Wi-Fi password; router too far; temporary network issue.	Re-enter Wi-Fi password. Move appliance closer to router. Restart router and appliance.

For more detailed troubleshooting or persistent issues, please refer to the full user manual available on the Midea website or contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Midea
Model Name	MAD113MCAF (MDEC002F5)
Capacity	11 Quarts (Upper: 6QT, Lower: 5QT)
Product Dimensions	14.6"D x 12.5"W x 15.7"H
Item Weight	23.5 pounds (10.68 Kilograms)
Color	Black
Material	Stainless Steel, Glass, Plastic
Output Wattage	1700 Watts
Voltage	120 Volts
Max Temperature Setting	450 Degrees Fahrenheit
Control Method	App, Remote, Touch, Voice

Feature	Specification
Nonstick Coating	Yes
Dishwasher Safe Parts	Yes (Baskets/Trays)

9. WARRANTY AND SUPPORT

Midea products come with a standard manufacturer's warranty. For specific warranty details, registration, and customer support, please visit the official Midea website or refer to the warranty card included with your purchase. You can also find FAQs and additional resources on the Midea support page.