

LOZ 1953

LOZ Mini Blocks 1953 Sweetheart Fluid Music Box Building Set Instruction Manual

Model: 1953

1. IMPORTANT SAFETY INFORMATION

- **Small Parts Warning:** This product contains small parts and is not suitable for children under 3 years of age due to choking hazards.
- **Recommended Age:** Suitable for ages 6 years and up. Adult supervision is recommended for younger children during assembly.
- **Material:** Constructed from Acrylonitrile Butadiene Styrene (ABS) plastic.
- **Handling:** Handle with care to avoid damage to delicate components, especially the light strip and music box mechanism.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. The package should contain:

- Approximately 909 Mini Building Blocks
- 1 Music Box Mechanism
- 1 LED Light Strip (batteries included)
- Instruction Manual (this document)



Image 2.1: The product packaging and the fully assembled Sweetheart Fluid Music Box.



Image 2.2: Front view of the LOZ Mini Blocks 1953 Sweetheart Fluid Music Box packaging, showing the product name and design.

3. SETUP AND ASSEMBLY

Follow the step-by-step diagrammatic instructions provided within the building block set for detailed assembly. The general process involves:

1. **Sorting Blocks:** Organize the mini blocks by color and shape to facilitate easier assembly.
2. **Base Assembly:** Begin by constructing the base of the music box according to the diagrams.
3. **Layered Construction:** Build the main structure of the Sweetheart Fluid Music Box in layers, carefully following the sequence in the instruction booklet.
4. **Integrating the Music Box Mechanism:** At the designated step, carefully insert the music box mechanism into the base structure. Ensure it is securely fitted and the winding key protrudes correctly.
5. **Adding Decorative Elements:** Attach all the candy, gingerbread, and other decorative mini blocks to complete the whimsical design.
6. **Installing the Light Strip:** Route the LED light strip as indicated in the instructions, typically around the internal structure or specific decorative elements to illuminate the model. Ensure the battery compartment is accessible if future battery replacement is needed.

NO.1953
909 PCS



Image 3.1: The fully assembled LOZ Mini Blocks 1953 Sweetheart Fluid Music Box, indicating it consists of 909 pieces.



Image 3.2: A side view of the assembled music box, showcasing the intricate details of the candy-themed design.

4. OPERATING INSTRUCTIONS

4.1. Music Box Function

To play the music, locate the winding key on the side of the music box base. Gently turn the key clockwise until you feel a slight resistance. Release the key, and the music box will begin to play its melody. Do not over-wind the mechanism, as this can cause damage.

4.2. Light Function

The LED light strip is designed to illuminate the building set. The light strip comes with pre-installed batteries. Locate the small switch or button on the light strip's battery compartment (or as indicated in the assembly instructions) to turn the lights ON or OFF.



Image 4.1: The Sweetheart Fluid Music Box illuminated by its integrated LED light strip, highlighting the 360-degree rotation feature.

5. MAINTENANCE

- **Cleaning:** To clean the building set, gently wipe with a dry, soft cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the plastic.
- **Dust Removal:** Use a soft brush or compressed air to remove dust from intricate areas.
- **Battery Replacement:** If the LED lights dim or stop working, replace the batteries in the light strip's battery compartment. Refer to the light strip's specific instructions for battery type and replacement procedure.
- **Storage:** Store the assembled model in a cool, dry place away from direct sunlight to prevent discoloration or material degradation.

6. TROUBLESHOOTING

- **Music Box Not Playing:**
 - Ensure the winding key has been turned sufficiently clockwise.

- Check for any obstructions preventing the mechanism from moving freely.

- **LED Lights Not Working:**

- Verify that the ON/OFF switch for the light strip is in the 'ON' position.
- Check if the batteries in the light strip need replacement.
- Ensure all connections for the light strip are secure.

- **Loose Blocks:** If any blocks become loose, gently press them back into place. For persistent issues, ensure the blocks are correctly oriented and fully seated.

7. SPECIFICATIONS

Feature	Detail
Brand	LOZ
Model Number	1953
Number of Pieces	909 PCS
Material Type	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions (L x W x H)	17 x 12 x 20 cm
Educational Objective	Creative Thinking
Batteries Included	Yes (for light strip)
Manufacturer Recommended Age	6 years and up



Image 7.1: The assembled music box with its dimensions: 17cm (Long), 12cm (Width), 20cm (High).

8. WARRANTY INFORMATION

This product is covered by the standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for any warranty claims. For specific details regarding warranty duration and terms, refer to the information provided on the product packaging or contact LOZ customer support.

9. SUPPORT

For further assistance, missing parts, or technical support, please contact LOZ customer service. You may find contact information on the product packaging or by visiting the official LOZ website. When contacting support, please have your product model number (1953) and proof of purchase readily available.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question