

MasterPRO BGKIT-0204

MasterPRO Rocket 1100 Air Fryer Oven Instruction Manual

Model: BGKIT-0204

1. INTRODUCTION

Thank you for choosing the MasterPRO Rocket 1100 Air Fryer Oven. This appliance is designed to provide a healthy and efficient way to cook a variety of meals with little to no oil. With its 11-liter capacity, 1800W power, and intuitive LED touch screen, you can enjoy crispy snacks and delicious main courses. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off",

then remove plug from wall outlet.

- Do not use the appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.

3. PRODUCT OVERVIEW

3.1 Components

- Main Unit (Air Fryer Oven)
- LED Touch Screen Control Panel
- Oven Door with Viewing Window
- Interior Racks/Shelves
- Power Cord



Figure 1: Front view of the MasterPRO Rocket 1100 Air Fryer Oven with a black silicone baking tray in the foreground. The oven features a digital display and a transparent door.

3.2 Control Panel

The MasterPRO Rocket 1100 features an intuitive LED touch screen control panel for easy operation. It allows for precise temperature and time adjustments, as well as selection of various cooking programs.



Figure 2: The MasterPRO Rocket 1100 Air Fryer Oven in a kitchen environment, showcasing its illuminated LED touch screen display with various cooking icons and settings.

4. PACKAGE CONTENTS

Verify that all items are present in the package:

- MasterPRO Rocket 1100 Air Fryer Oven
- Round Silicone Baking Tray
- Two Racks/Shelves
- Rotisserie Basket
- Rotisserie Spit with Forks

- Drip Tray
- Instruction Manual

5. INITIAL SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove all packaging materials from the appliance and its accessories.
2. **Clean:** Wipe the exterior of the appliance with a damp cloth. Wash all removable accessories (racks, trays, silicone tray, rotisserie basket) with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer oven on a stable, level, heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for proper air circulation.
4. **First Use Burn-Off:** It is recommended to run the appliance empty for about 10-15 minutes at 180°C (350°F) to burn off any manufacturing residues. A slight odor or smoke may be present during this process; this is normal. Ensure the area is well-ventilated.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

1. **Connect Power:** Plug the power cord into a grounded electrical outlet. The appliance will beep, and the LED display will illuminate briefly.
2. **Power On:** Press the Power button () on the touch screen to turn on the appliance.
3. **Select Function:** Choose a preset cooking function by tapping the corresponding icon, or manually set the temperature and time.
4. **Adjust Temperature:** Use the temperature control buttons (+ / -) to set the desired cooking temperature (e.g., 80°C to 200°C).
5. **Adjust Time:** Use the time control buttons (+ / -) to set the desired cooking time (e.g., up to 60 minutes).
6. **Start Cooking:** Press the Start/Pause button (▶/||) to begin the cooking cycle.
7. **Pause/Stop:** During cooking, press the Start/Pause button to pause. Press and hold the Power button to stop the cooking cycle.



Accesorios incluidos

Nuestra freidora incluye **dos rejillas**, **una bandeja para hornear**, **un mango en U**, **un espetón**, **una cesta giratoria** y **10 brochetas** con soporte.



Figure 3: A user's hand operating the LED touch screen of the MasterPRO Rocket 1100 Air Fryer Oven, demonstrating the ease of selecting cooking functions and adjusting settings.

6.2 Loading Food

- Always place food in the appropriate accessory (rack, basket, or silicone tray).
- Do not overfill the cooking chamber to ensure even cooking and air circulation.
- For best results, shake or flip food halfway through the cooking time, especially for air frying.



Figure 4: A hand gently inserting a white baking dish containing vegetables into the MasterPRO Rocket 1100 Air Fryer Oven, illustrating how to load food for cooking.

6.3 Using the Rotisserie Function

For items like whole chicken or roasts:

1. Secure the food onto the rotisserie spit using the forks.
2. Insert the rotisserie spit into the designated slots inside the oven.
3. Select the rotisserie function on the control panel.
4. Set temperature and time as required for your recipe.



Figure 5: An interior view of the MasterPRO Rocket 1100 Air Fryer Oven, displaying the rotisserie basket accessory in place, ready for use.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

7.1 Before Cleaning

- Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.

7.2 Cleaning the Interior and Exterior

- Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners.
- Clean the interior walls with a damp cloth and mild, non-abrasive cleaner.
- For stubborn stains, a paste of baking soda and water can be used, then wiped clean.
- Do not immerse the main unit in water or any other liquid.

7.3 Cleaning Accessories

- All removable accessories (racks, trays, silicone tray, rotisserie basket) can be washed in warm, soapy water.
- They are generally dishwasher safe, but hand washing is recommended to prolong their lifespan.
- Ensure all parts are completely dry before reassembling or storing.

8. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; power button not pressed.	Ensure the appliance is properly plugged in. Check the power outlet with another device. Press the Power button firmly.
Food is not cooked evenly.	Overfilled cooking chamber; food not shaken/flipped.	Do not overfill. Arrange food in a single layer if possible. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the appliance and accessories thoroughly after each use. For fatty foods, ensure the drip tray is in place.
Food is not crispy.	Too much moisture; not enough oil (for certain foods); temperature too low.	Pat food dry before cooking. Lightly spray with oil if desired. Increase temperature or cooking time slightly.

9. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	MasterPRO
Model Number	BGKIT-0204
Color	Black
Capacity	11 Liters
Power	1800 Watts
Voltage	230 Volts
Material	LED Touch Screen, Silicone
Product Dimensions (L x W x H)	30 x 30 x 30 cm
Item Weight	9.97 Kilograms
Control Method	Touch




Feature	Specification
Country of Origin	China




10. WARRANTY AND SUPPORT

The MasterPRO Rocket 1100 Air Fryer Oven comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact MasterPRO customer service through their official website or the contact information provided with your purchase documentation.



Related Documents - BGKIT-0204

 <p>INSTRUCCION MANUAL - MANUAL DE INSTRUCCIONES USEMANUAL A USUARIO - MANUALE DI ISTRUZIONE MANUEL E INSTRUCTIONS - MANUAL DE INSTRUÇÕES</p>	<p>MasterPRO Dual Air Fryer: Instruction Manual & User Guide</p> <p>Explore the MasterPRO Dual Air Fryer (BGMP-9178-BK) with this comprehensive instruction manual. Learn about safe operation, cooking tips, troubleshooting, and maintenance for healthy, efficient meal preparation.</p>
 <p>INSTRUCCION MANUAL - MANUAL DE INSTRUCCIONES USEMANUAL A USUARIO - MANUALE DI ISTRUZIONE MANUEL E INSTRUCTIONS - MANUAL DE INSTRUÇÕES</p>	<p>Masterpro Rocket 1100 Air Fryer Oven Instruction Manual</p> <p>Comprehensive instruction manual for the Masterpro Rocket 1100 Air Fryer Oven. Learn about safety precautions, how to use accessories, control panel functions, cooking tips, troubleshooting, and cleaning.</p>
 <p>INSTRUCCION MANUAL - MANUAL DE INSTRUCCIONES USEMANUAL A USUARIO - MANUALE DI ISTRUZIONE MANUEL E INSTRUCTIONS - MANUAL DE INSTRUÇÕES</p>	<p>MasterPRO Air Fryer Oven Instruction Manual</p> <p>Comprehensive instruction manual for the MasterPRO Air Fryer Oven, detailing features, operation, safety guidelines, cleaning, and warranty information for healthier and efficient cooking.</p>

	<p>MasterPRO ROCKET DUO 900 Dual Air Fryer Instruction Manual</p> <p>Comprehensive instruction manual for the MasterPRO ROCKET DUO 900 Dual Air Fryer, covering safety precautions, usage instructions, control panel guide, food preparation, troubleshooting, cleaning, and technical specifications.</p>
	<p>MasterPRO ROCKET DUO 900: Ръководство за употреба на фритюрник с горещ въздух</p> <p>Научете как да използвате вашия фритюрник с горещ въздух MasterPRO ROCKET DUO 900 (BGMP-9178-BK). Това ръководство предоставя основни инструкции за безопасност, употреба, почистване и съвети за готвене за здравословно приготвяне на храна.</p>
	<p>MasterPRO Air Fryer Instruction Manual</p> <p>Comprehensive instruction manual for the MasterPRO Air Fryer (Model BGMP-9513-01), covering setup, operation, cleaning, safety, and warranty information.</p>