

Taiyo TYS-300063A

Taiyo Radio Control Mini RC Boat Wave Cruiser User Manual

Model: TYS-300063A

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation of your Taiyo Radio Control Mini RC Boat Wave Cruiser. This compact, remote-controlled boat is designed for use in calm water environments such as swimming pools, ponds, and small lakes. It features a top speed of 6 mph and a runtime of up to 20 minutes per charge. The remote control operates within a 100-foot range and includes a safety feature that automatically powers off the boat if it exceeds this range. The Wave Cruiser is constructed from durable, water-resistant plastic.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not suitable for children under 3 years old.

- Always supervise children during operation.
- Do not operate in saltwater or rough water conditions.
- Keep fingers, hair, and loose clothing away from the propeller.
- Ensure the battery compartment is securely sealed before placing the boat in water.
- Do not attempt to modify or disassemble the boat or remote control.
- Use only the specified batteries and charging methods.
- Remove batteries from the boat and remote control when not in use for extended periods.

3. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- Taiyo Mini RC Boat Wave Cruiser
- Remote Control
- USB Charging Cable (for boat battery)
- Instruction Manual (this document)



Image: The Taiyo Mini RC Boat Wave Cruiser displayed within its retail packaging, showing the boat and remote control.

4. SETUP

4.1 Charging the Boat Battery

1. Locate the charging port on the boat.
2. Connect the provided USB charging cable to the boat's charging port.
3. Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer USB port.
4. The charging indicator light (if present) will illuminate during charging and turn off or change color when fully charged.
5. Charging typically takes 60-90 minutes for a full charge, providing up to 20 minutes of runtime.
6. Disconnect the charging cable once charging is complete.

4.2 Installing Remote Control Batteries

The remote control requires 4 AA batteries (not included).

1. Open the battery compartment on the back of the remote control.
2. Insert 4 AA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment securely.



Image: The Taiyo Mini RC Boat Wave Cruiser, showcasing its design and features.

5. OPERATING INSTRUCTIONS

1. **Power On:** Ensure the boat is fully charged and the remote control has fresh batteries. Turn on the

power switch located on the boat. Then, turn on the remote control.

2. **Pairing:** The boat and remote should automatically pair. If not, turn both off and then on again.
3. **Placement:** Carefully place the boat into the water. The boat's propeller may not activate until it is in water due to safety sensors.
4. **Navigation:** Use the remote control's joysticks or buttons to navigate the boat.
 - Forward/Backward: Controls the boat's speed and direction.
 - Left/Right: Controls the boat's steering.
5. **Range Safety:** The boat has a 100-foot operating range. If the boat ventures too far from the remote control, it will automatically power off to prevent loss. Retrieve the boat and bring it closer to the remote to resume operation.
6. **Power Off:** After use, remove the boat from the water, turn off the power switch on the boat, and then turn off the remote control.

6. MAINTENANCE

- **Cleaning:** After each use, gently wipe the boat with a soft, dry cloth to remove any water, dirt, or debris. Ensure the propeller area is clear.
- **Drying:** Allow the boat to air dry completely before storage, especially the battery compartment and charging port.
- **Storage:** Store the boat and remote control in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries from both devices if storing for an extended period.
- **Battery Care:** Do not overcharge the boat's battery. If the boat will not be used for a long time, charge the battery partially (around 50%) before storage and recharge every few months to maintain battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Boat does not move.	Boat battery is low or uncharged. Remote control batteries are low or incorrectly installed. Boat is not in water (safety feature). Boat and remote are not paired.	Charge the boat battery. Replace or correctly install remote control batteries. Place the boat in water. Turn both boat and remote off, then on again to re-pair.
Boat stops unexpectedly.	Boat battery is depleted. Boat has exceeded the 100-foot operating range. Debris caught in propeller.	Recharge the boat battery. Retrieve the boat and bring it closer to the remote. Carefully remove any debris from the propeller (ensure boat is off).
Poor control or erratic movement.	Weak remote control batteries. Interference from other RC devices. Operating at the edge of the range.	Replace remote control batteries. Move to an area with less interference. Operate the boat closer to the remote control.

8. SPECIFICATIONS

Model Number	TYS-300063A
Product Dimensions	9.7 x 21.7 x 25.7 cm
Weight	630 g
Material	Plastic
Color	Multicolor
Top Speed	Up to 6 mph
Runtime	Up to 20 minutes (per charge)
Remote Control Range	100 feet
Boat Battery	Rechargeable (type not specified, typically Li-ion or NiMH)
Remote Control Batteries	4 x AA batteries (not included)
Recommended Age	6 years and up
Educational Objective	Hand-eye coordination

© 2026 Taiyo. All rights reserved.

For customer support, please refer to the contact information provided with your purchase.