

[Manuals.plus](#) /

> [SAMSUNG](#) /

> SAMSUNG Galaxy Z Flip 5 User Manual

SAMSUNG Galaxy Z Flip5

SAMSUNG Galaxy Z Flip 5 User Manual

Model: Galaxy Z Flip5

1. OVERVIEW

The SAMSUNG Galaxy Z Flip 5 is a compact and powerful 5G smartphone designed for portability and versatility. Featuring an innovative foldable design, it offers a large internal display when unfolded and a functional cover screen when closed. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.



Image: The SAMSUNG Galaxy Z Flip 5 in Lavender, showcasing its unique foldable design in both open and closed states. The device features a large main screen and a smaller cover screen, along with dual rear cameras.

2. WHAT'S IN THE BOX

Upon unboxing your SAMSUNG Galaxy Z Flip 5, verify that all standard components are present:

- Galaxy Z Flip 5 Device
- USB Cable (for charging and data transfer)
- SIM Tray Ejector Tool
- Quick Start Guide

Note: Power adapter may be sold separately.

3. PHYSICAL COMPONENTS

Familiarize yourself with the external features and button placements of your Galaxy Z Flip 5:

- **Main Display:** The large, foldable screen for primary interaction.
- **Cover Screen:** A smaller external display for quick access to notifications, widgets, and camera previews.
- **Side Button (Power/Fingerprint Sensor):** Located on the right side, used for power functions and fingerprint recognition.
- **Volume Buttons:** Located above the Side Button, used to adjust media and call volume.
- **USB-C Port:** At the bottom, for charging and connecting to other devices.
- **Dual Rear Cameras:** Located on the top half of the device when folded, used for high-quality photography.
- **Front Camera:** Located on the main display, used for video calls and selfies.
- **SIM Card Tray:** Located on the side, for inserting your Nano-SIM card.

Charmingly compact

Bold and compact, Galaxy Z Flip5 easily fits
in your pocket or purse.



Image: The compact form factor of the Galaxy Z Flip 5 is demonstrated as a user easily places the folded device into a jacket pocket, highlighting its portability.

4. SETUP

4.1 Initial Power On/Off

To power on your Galaxy Z Flip 5, press and hold the Side Button until the Samsung logo appears. To power off, simultaneously press and hold the Side Button and the Volume Down button. A power menu will appear, allowing you to select "Power off", "Restart", or "Emergency call". Alternatively, you can access the power menu by swiping down twice from the top of the screen to reveal the Quick Panel, then tapping the power icon.

4.2 Remapping Side Button

By default, pressing and holding the Side Button activates Bixby. To remap this button to the Power off menu:

1. Press and hold the Side Button and Volume Down button simultaneously to bring up the power menu.
2. Tap "Side button settings" at the bottom of the screen.
3. Under "Press and hold", select "Power off menu".

Now, pressing and holding the Side Button will directly bring up the power off options.

4.3 SIM Card Installation

To install your Nano-SIM card:

1. Locate the SIM card tray on the side of the device.
2. Insert the SIM tray ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM card into the tray with the gold contacts facing down and the notched corner aligned.
4. Carefully push the tray back into the slot until it is flush with the device.

5. OPERATING YOUR DEVICE

5.1 Display Features

The Galaxy Z Flip 5 features a 6.7-inch Foldable Dynamic AMOLED 2X main display with a 120Hz refresh rate for smooth scrolling and vibrant visuals. The 3.4-inch Super AMOLED Cover Display allows for quick interactions without unfolding the phone. You can reply to texts, change songs, check notifications, and access widgets directly from the cover screen.

Easy to use, open or closed

The large cover screen of the compact Galaxy Z Flip5 lets you reply to texts, change songs and snap photos with one hand.



Availability of Samsung Wallet and its features may vary by country/region, device model, carrier and firmware version and are subject to change. E-Ticket reservations and paper boarding passes cannot be added to Samsung Wallet.

Image: The versatility of the Galaxy Z Flip 5's large cover screen is highlighted, displaying various widgets and applications such as messaging, music controls, and weather, all accessible without opening the phone.

5.2 Camera Usage

The device is equipped with a 12MP wide-angle and a 12MP ultrawide rear camera, along with a 10MP front camera. The unique foldable design allows for hands-free photography using Flex Mode. You can preview your selfies on the cover screen before capturing them, ensuring the perfect shot.

Show off your best selfie

Easily capture stunning selfies with the best camera on Galaxy Z Flip5, thanks to the full cover screen that lets you see more before you snap.



Image: Several Galaxy Z Flip 5 devices are shown in Flex Mode, demonstrating how users can capture high-quality selfies using the main camera while viewing themselves on the cover screen, offering versatile shooting angles.

5.3 Flex Mode

Flex Mode optimizes the user interface when the phone is partially folded, allowing for hands-free video calls, content viewing, and photography. The screen content adapts to the folded angle, providing a comfortable and convenient experience for various tasks.

5.4 Connectivity

The Galaxy Z Flip 5 supports 5G connectivity for fast data speeds. It also includes Wi-Fi, Bluetooth, and GPS capabilities for seamless wireless communication and navigation.

6. MAINTENANCE

6.1 Cleaning

To clean your device, gently wipe the screens and body with a soft, lint-free cloth. Avoid using harsh chemicals or abrasive materials. For the foldable screen, apply minimal pressure and wipe gently. Ensure the device is powered off before cleaning.

6.2 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Navigate to *Settings > Software update > Download and install* to check for available updates.

6.3 Battery Care

To maximize battery life, avoid extreme temperatures, and do not fully discharge the battery frequently. For optimal performance, keep the battery charge between 20% and 80%. The device features a 3700mAh battery.

New &
Notable

Ultimate innovation. Ultimate peace of mind.

With Gorilla Glass Victus 2 external protection, IPX8 water resistance* and a preinstalled internal screen protector.



Consistent with IPX8 rating, water resistant in up to 5 feet of fresh water for up to 30 minutes. Rinse residue / dry after wet.
Not advised for beach or pool use. Not dust or sand resistant.

Image: The Galaxy Z Flip 5 is shown folded, emphasizing its robust construction with Gorilla Glass Victus 2 for external protection and IPX8 water resistance, ensuring durability against daily wear and tear.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Galaxy Z Flip 5.

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Device not powering on	Ensure the battery is charged. Press and hold the Side Button for at least 10 seconds to force a restart.
Screen unresponsive	Perform a force restart (Side Button + Volume Down). If issue persists, consider a factory reset (data will be lost).
Poor battery life	Close unused apps, reduce screen brightness, disable unnecessary features (GPS, Bluetooth, Wi-Fi when not in use). Check battery usage in settings.
Network connectivity issues	Toggle Airplane Mode on/off. Restart the device. Check SIM card insertion. Contact your service provider.

7.1 Factory Reset

A factory reset will erase all data from your device and restore it to its original factory settings. Back up all important data before proceeding. To perform a factory reset, navigate to *Settings > General management > Reset > Factory data reset* and follow the on-screen instructions.

8. SPECIFICATIONS

Feature	Detail
Model Name	Samsung Galaxy Z Flip5
Main Display	6.7 Inches Foldable Dynamic AMOLED 2X, 120Hz, 1080x2640 pixels
Cover Display	3.4 Inches Super AMOLED, 720x748px
Processor	Qualcomm SM8550-AC Snapdragon 8 Gen 2 (4nm) Octa-core
RAM	8 GB
Storage	256 GB ROM
Rear Camera	12MP (wide) + 12MP (ultrawide)
Front Camera	10 MP (wide)
Battery Capacity	3700 mAh
Operating System	Android
Dimensions (folded)	6.5 x 2.83 x 0.27 inches
Weight	6.6 ounces
Water Resistance	IPX8 (up to 5 feet of fresh water for up to 30 minutes)

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Samsung website or contact Samsung customer service. Keep your proof of purchase for warranty claims. This renewed

product may have specific warranty terms provided by the seller; please consult your purchase documentation for details.

Online resources and FAQs are available on the Samsung support portal. For technical assistance, you may need your device's model number and serial number.