

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FITUEYES](#) /

› [FITUEYES Master Series V2 Rolling TV Cart Instruction Manual for 24-48 Inch Televisions](#)

**FITUEYES S02M1226J**

# FITUEYES Master Series V2 Rolling TV Cart Instruction Manual

Model: S02M1226J

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your FITUEYES Master Series V2 Rolling TV Cart. Designed for televisions ranging from 24 to 48 inches, this stand offers portability and adjustable viewing options. Please read this manual thoroughly before assembly and use to ensure safe and correct operation.





Image: The FITUEYES Master Series V2 Rolling TV Cart in pink, showcasing its minimalist design with a television mounted.

## SAFETY INFORMATION

---

Please observe the following safety precautions to prevent injury or damage to your product and property:

- **Weight Capacity:** Do not exceed the maximum weight capacity of 44 lbs (20 kg).
- **TV Size:** This stand is designed for televisions between 24 and 48 inches.
- **VESA Compatibility:** Ensure your TV's VESA mounting pattern is compatible (75x75mm to 200x200mm).
- **Assembly:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all screws are tightened securely.
- **Stability:** Always ensure the TV stand is on a level surface. When moving, do so slowly and carefully, especially over uneven surfaces or carpets.
- **Children:** Keep children away from the TV stand during assembly. Do not allow children to climb on or play with the stand or mounted TV.
- **Cable Management:** Properly route all cables to prevent tripping hazards and ensure they do not

interfere with the stand's movement or stability.

## PACKAGE CONTENTS

---

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

- TV Stand Components
- Mounting Accessories (various screws, washers, spacers)
- Assembly Tools (Allen wrenches)
- Instruction Manual



Image: An exploded diagram illustrating the main components of the TV stand, including the base, central pole, and TV mounting plate.

## SETUP AND ASSEMBLY

---

Follow these steps carefully for proper assembly. It is recommended to have two people for certain steps, especially when mounting the television.

### 1. **Attach the Pole to the Base:**

Secure the main support pole to the circular base using the provided screws and Allen wrench. Ensure it is firmly seated and tightened to prevent wobbling.



**50+**

Countries & Regions



**100+**

National  
Patent Certifications



**400,000+**

Annual Sales Volume

Image: A detailed view of the stand's base, highlighting the hidden swivel wheels and the connection point for the central pole.

**2. Assemble the TV Mounting Bracket:**

Attach the horizontal bracket arms to the vertical mounting plate. Refer to the VESA compatibility diagram to ensure correct orientation for your TV size.

**3. Attach Mounting Bracket to TV:**

Select the appropriate screws, washers, and spacers for your television's VESA mounting holes. Securely attach the assembled mounting bracket to the back of your TV. Do not overtighten.

**4. Mount TV to Stand:**

Carefully lift the television with the attached mounting bracket and hook it onto the support pole's designated slot. Ensure the TV is level and securely seated. Tighten any locking mechanisms or screws to prevent accidental dislodgement.

**5. Cable Management:**

Route all TV cables through the integrated cable management system on the back of the pole. The magnetic fabric cover can be used to conceal wires for a tidy appearance.

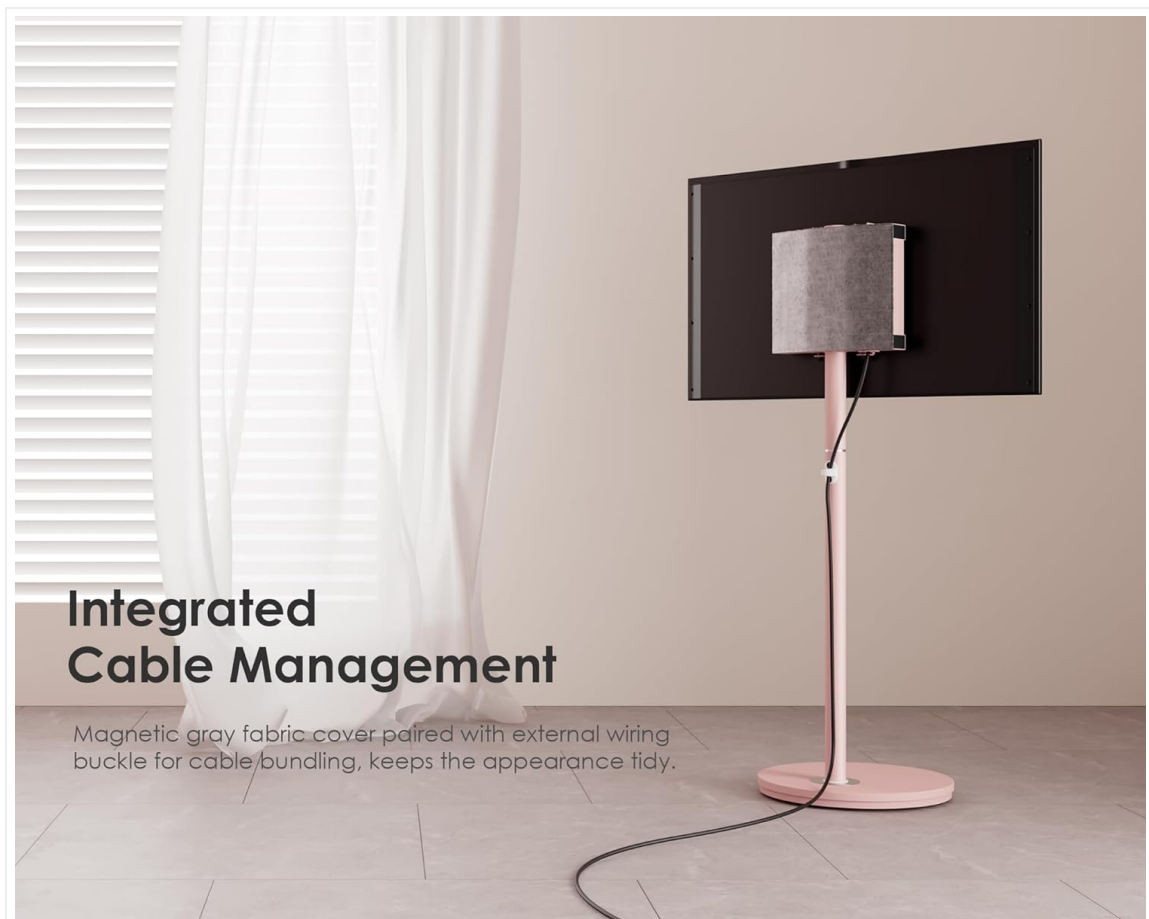


Image: The TV stand demonstrating its integrated cable management feature, with a magnetic gray fabric cover and external wiring buckle to keep cables organized.

## OPERATING INSTRUCTIONS

---

Your FITUEYES Rolling TV Cart is designed for ease of use and flexibility.

- **Mobility:** The stand features hidden swivel wheels on its base, allowing for smooth movement across hard floors. To move the stand, gently push it to your desired location. Exercise caution when moving over carpets or uneven surfaces.
- **Height Adjustment:** The TV mounting plate can be adjusted vertically along the support pole. Loosen the locking mechanism (typically an Allen screw) on the pole, adjust the TV to the desired height (between 1000mm and 1200mm), and then securely tighten the locking mechanism.
- **Rotation:** The TV can be rotated 360 degrees on the stand, offering flexible viewing angles. Gently rotate the television to achieve the optimal viewing position.

## Universal Wheels

The bottom base comes with hidden swivel wheels that move freely.



## Height Adjustable

Height infinitely adjustable from  
1000-1200mm.

Image: Visual representation of the stand's universal wheels for mobility and the adjustable height range.

## MAINTENANCE

Regular maintenance will help prolong the life and appearance of your TV stand.

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Wheel Care:** Keep the wheels free of dust and debris to ensure smooth movement.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
TV stand is unstable or wobbles.	Screws are loose; stand is on an uneven surface; weight capacity exceeded.	Ensure all assembly screws are tightened. Move the stand to a level surface. Verify TV weight is within limits (max 44 lbs).
TV does not stay at desired height or slides down.	Height adjustment locking mechanism is not sufficiently tightened.	Loosen the height adjustment screw, reposition the TV, and then tighten the screw firmly using the provided Allen wrench. Ensure the screw is fully engaged.

Problem	Possible Cause	Solution
Wheels do not roll smoothly.	Debris caught in wheels; wheels are damaged.	Clean any debris from the wheels. If wheels are damaged, contact customer support for replacement parts.
TV mounting bracket does not fit TV.	Incorrect VESA pattern; wrong screws/spacers used.	Verify your TV's VESA pattern is between 75x75mm and 200x200mm. Ensure you are using the correct screws and spacers from the accessory kit for your TV model.

## SPECIFICATIONS

**Model Number:** S02M1226J

**Compatible TV Sizes:** 24 - 48 inches

**Maximum Weight Capacity:** 44 lbs (20 kg)

**VESA Compatibility:** 75x75mm, 100x100mm, 100x200mm, 200x100mm, 200x200mm

**Height Adjustment Range:** 1000mm - 1200mm (39.3 inches - 47.2 inches)

**Product Dimensions (L x W x H):** 17.91 x 17.91 x 53.15 inches (45.5 x 45.5 x 135 cm)

**Item Weight:** 26.1 pounds (11.8 kg)

**Materials:** Metal, Plastic

**Color:** Pink

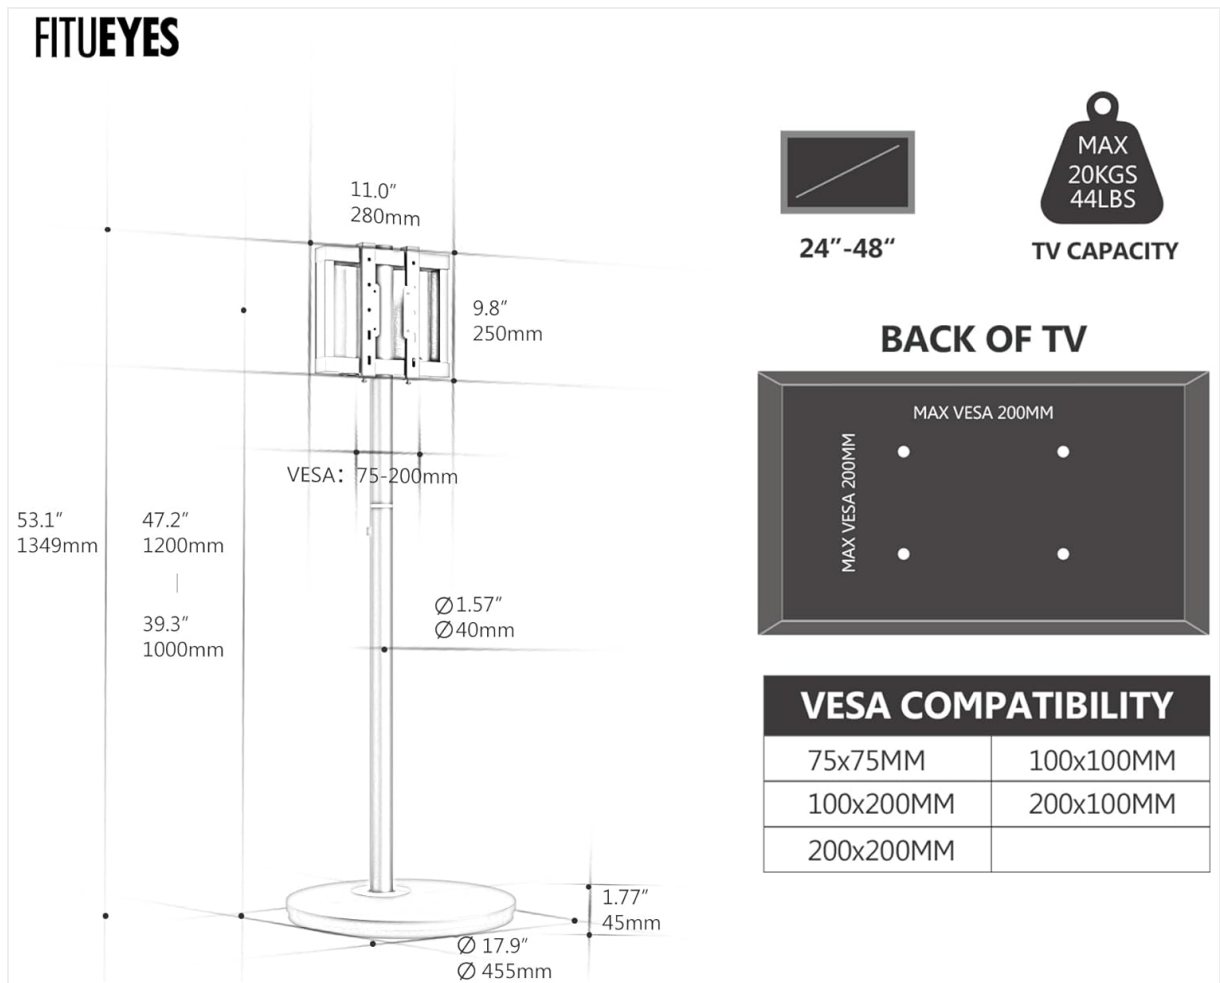


Image: A technical drawing detailing the dimensions of the TV stand and its VESA mounting compatibility.

## WARRANTY AND SUPPORT

---

FITUEYES stands behind the quality of its products. This product comes with an up to 10-year warranty. For technical assistance, missing parts, or warranty claims, please contact FITUEYES customer service. Our global service team is available to assist you.

**Customer Service:** Refer to the contact information provided on the FITUEYES official website or your purchase documentation.

**Warranty Period:** Up to 10 years (details may vary, please check your purchase receipt or product registration).

**Service Availability:** 24-hour global service.



Image: Icons representing FITUEYES customer care services, including 24-hour global support and an extended warranty.