

manuals.plus /

- › [FASTWD](#) /
- › [FASTWD T181-EEA 11-inch Android 14 Tablet User Manual](#)

FASTWD T181-EEA

FASTWD T181-EEA 11-inch Android 14 Tablet User Manual

Model: T181-EEA | Brand: FASTWD

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your FASTWD T181-EEA 11-inch Android 14 Tablet. Please read it carefully to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW

The FASTWD T181-EEA is an 11-inch tablet featuring the Android 14 operating system, an Octa-Core processor, and a high-resolution 2K INCell display. It offers extensive memory, versatile connectivity, and a range of features designed for productivity and entertainment.

**FASTWD T181-EEA Tablet che vale la pena avere**

Provate il nuovo standard dei tablet di fascia alta





Android 14

36(12+24)GB RAM

256GB ROM

5G WiFi

4G LTE

Image: Overview of the FASTWD T181-EEA Tablet highlighting its 2K IN-Cell display, 36GB RAM, 256GB ROM, Octa-Core 2.0 GHz

processor, 8MP front and 13MP rear cameras, 2.4G+5G WiFi, 4G LTE, 9580mAh battery, metal border slim design, and face recognition capabilities.

## Included Components:

- FASTWD T181-EEA Tablet
- Leather Case
- Keyboard
- Mouse
- Power Adapter
- OTG Adapter
- Data Cable (USB-C)
- Capacitor Pen (Stylus)
- User Manual (this document)



Image: The FASTWD T181-EEA Tablet displayed with its full set of accessories, including a leather case, keyboard, mouse, power adapter, OTG adapter, data cable, capacitor pen, and the user manual.

## SETUP

---

### 1. Charging the Tablet

Before first use, fully charge your tablet using the provided power adapter and data cable. Connect the USB-C end of the cable to the tablet's charging port and the other end to the power adapter, then plug the adapter into a wall outlet. The battery indicator on the screen will show charging progress.

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button until the FASTWD logo appears.
- **To Power Off:** Press and hold the Power button until the power options appear on the screen, then select "Power off".
- **To Restart:** Press and hold the Power button until the power options appear, then select "Restart".

### 3. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, setting up your Google account, and configuring basic privacy settings.

### 4. Inserting SIM and Micro SD Cards

Locate the SIM/Micro SD card tray on the side of the tablet. Use the provided SIM ejector tool to open the tray. Carefully place your Nano-SIM card(s) and/or Micro SD card into the designated slots, ensuring correct orientation. Gently push the tray back into the tablet until it clicks into place.

### 5. Connecting Accessories

- **Keyboard and Mouse:** These accessories typically connect via Bluetooth. Go to **Settings > Connected devices > Bluetooth**, turn Bluetooth on, and pair with your keyboard and mouse.
- **OTG Adapter:** Use the OTG adapter to connect USB-A devices like flash drives or other peripherals to your tablet's USB-C port.

## OPERATING INSTRUCTIONS

---

### 1. Basic Navigation

The tablet uses touch gestures for navigation. Tap to select, swipe to scroll, pinch to zoom, and long-press for additional options. The Android 14 interface provides intuitive controls for accessing apps, notifications, and settings.

# Latest **Android 14** First for Users!



**Android 14**  
Personalized Settings



 
**GMS Certification**  
Many Programs in Google Play



**Privacy & Security**  
Stricter Permissions



**Parental Controls**  
Control Screen Time

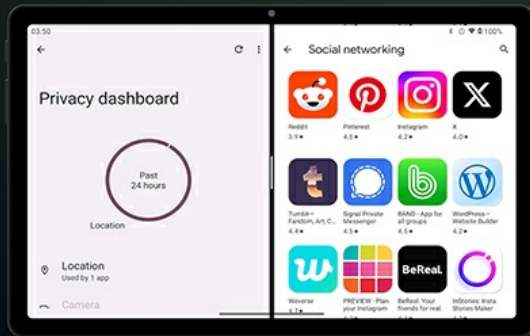

## **4G LTE & 5G WiFi**

4GLTE& 5G WiFi allows you to browse the internet anytime,anywhere. PC Mode & 11 inch ultra-large touchscreen makes work easier



**Bluetooth 5.0**



**2.4G+5G  
Dual Band WiFi**



**4G LTE**



Image: The FASTWD T181-EEA Tablet showcasing Android 14 features such as AI-powered smart replies, multitasking windows, enhanced privacy protection, lock screen customization, and the ability to scale font size up to 200%.

## **2. Connectivity (Wi-Fi, 4G LTE, Bluetooth)**

- **Wi-Fi:** Access **Settings > Network & internet > Wi-Fi** to connect to available wireless networks. The tablet supports 2.4G and 5G dual-band Wi-Fi.
- **4G LTE:** If a SIM card is inserted, enable mobile data via **Settings > Network & internet > Mobile network**.
- **Bluetooth:** For connecting wireless headphones, speakers, or other Bluetooth devices, go to **Settings > Connected devices > Bluetooth**. The tablet supports Bluetooth 5.0.

## **3. Camera Usage**

The tablet is equipped with an 8MP front camera and a 13MP rear camera. Open the Camera app to take photos or record videos. The AI post-processing feature enhances image quality.

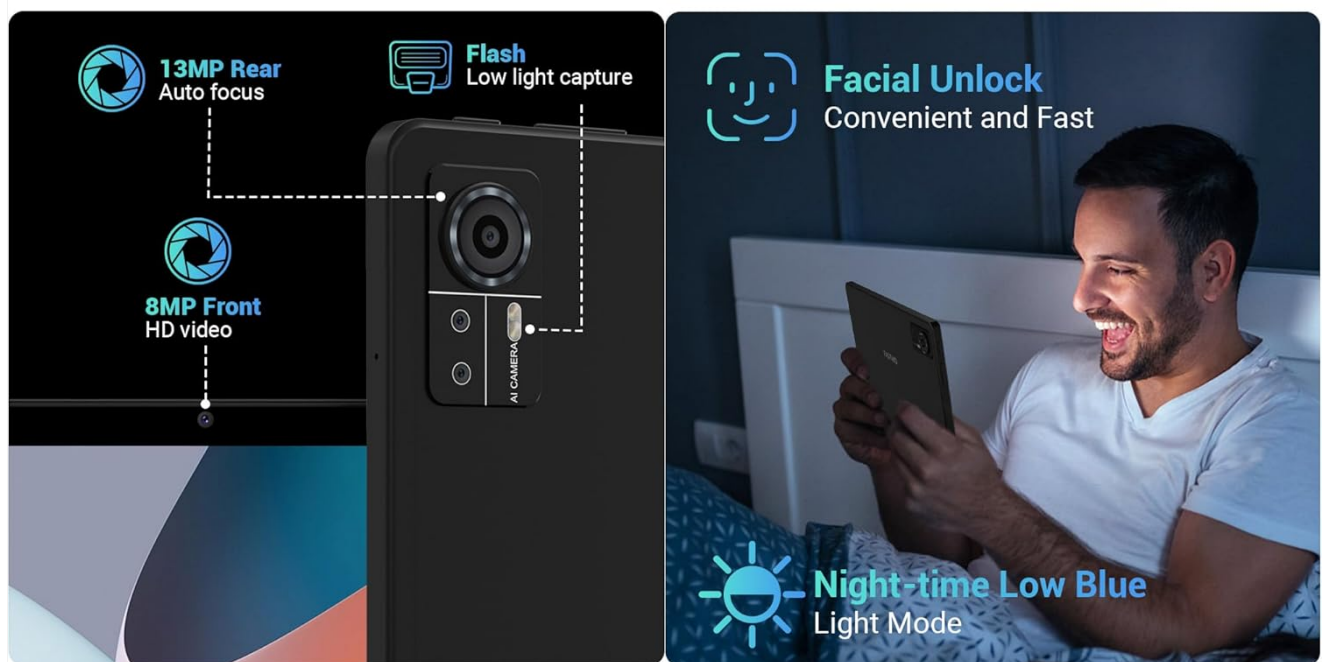 


Image: The FASTWD T181-EEA Tablet highlighting its 9580mAh battery capacity and estimated usage times for various activities (music, gaming, calls, web, standby). It also details the 13MP rear camera with autofocus, 8MP front camera for HD video, and the convenient facial unlock feature.

#### 4. Storage Management

The tablet comes with 256GB of internal storage. You can expand this by up to 1TB using a Micro SD card. To manage your storage, go to **Settings > Storage**. You can view used space, free up storage, and manage files.



# FASTWD Tablet Android 14

## Esperienza Di Personalizzazione Come Mai Prima D'ora

Vous pouvez personnaliser les applications et le lecteur multimédia à votre guise, ainsi que changer les couleurs, les thèmes et les langues pour une véritable personnalisation.

- Rilevamento degli screenshot
- Evidenziazione delle finestre di testo
- Nuovo design del dorso del sistema
- Azione personalizzata su foglio di condivisione
- Preferenze locali
- Rilevamento intelligente AI

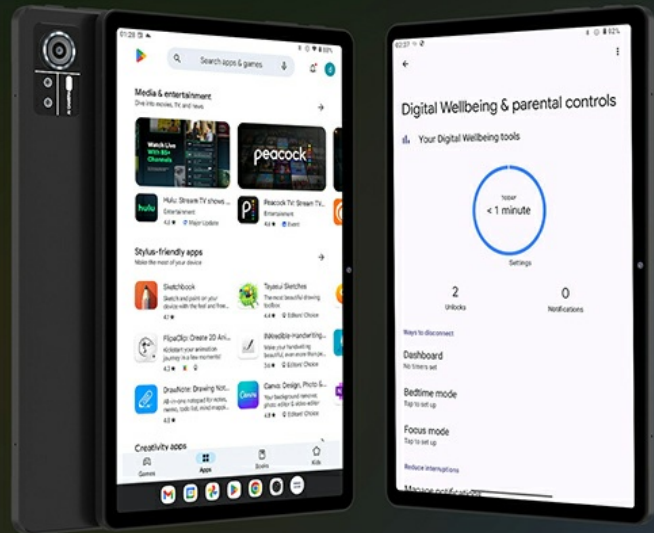 



Image: The FASTWD T181-EEA Tablet illustrating its memory capabilities, including 36GB RAM (12GB physical + 24GB virtual expansion), 256GB internal ROM, and support for up to 1TB Micro SD card expansion, suitable for storing a wide range of applications and media.

## 5. Display Features

The 11-inch 2K INCell display (2000x1200 pixels) offers clear visuals. It features Rheinland Low Blue Light certification for eye protection. Adjust display settings like brightness, dark theme, and font size in **Settings > Display**.

## Memoria Elevata, Niente Stress

 Dotato di 12 GB RAM e di 24 GB RAM virtuale, è possibile attivare altri 24 GB RAM direttamente nelle impostazioni, se necessario, per consentire il multitasking e il passaggio da un'app all'altra con facilità. 256 GB ROM di archiviazione consentono di installare app ed eseguire giochi a velocità mai viste prima.

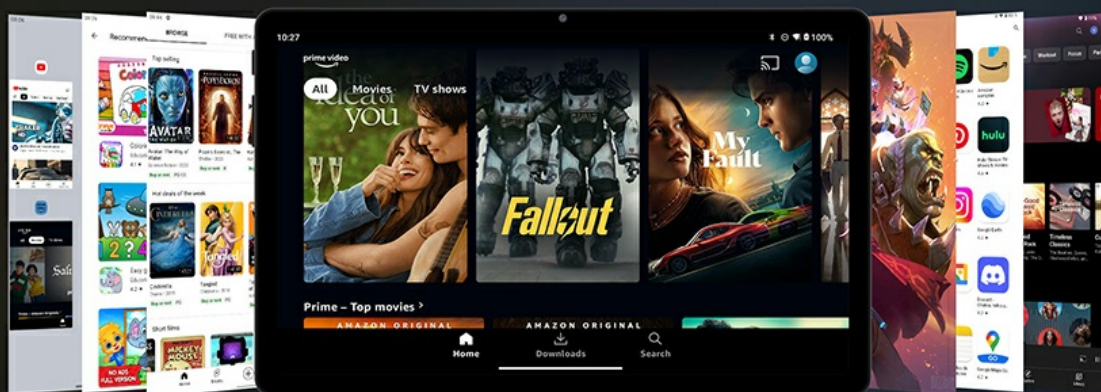

**MAX 36GB RAM**  
12GB+24GB Expansion

**256GB ROM**

**6540.4Mbps\***  
MAX Port Speed

**Micro SD**  
MAX 1TB

Image: A visual comparison demonstrating the clarity and vibrant picture quality of the 11-inch 2K IN-Cell display (2000x1200 resolution) of the FASTWD T181-EEA Tablet against a standard 1280x800 IPS display, emphasizing its eye protection features and suitability for all ages.

## 6. Privacy and Security

Android 14 provides enhanced privacy controls. Access **Settings > Security & privacy** to manage app permissions, location access, and set up screen locks (PIN, pattern, password, or Face Recognition).

- **Face Recognition:** Set up facial unlock for convenient and fast access to your tablet.
- **Parental Controls:** Utilize built-in parental controls to manage screen time and content access for children.

## MAINTENANCE

### 1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

### 2. Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

### 3. Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Use only the provided charger or a compatible 20W fast charger.
- Do not let the battery completely drain frequently.
- For long-term storage, charge the battery to about 50-60%.

## TROUBLESHOOTING

### Common Issues and Solutions:

- **Tablet not powering on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Slow performance:** Close unused apps, clear cache, or restart the tablet. Check for available software updates.
- **Wi-Fi connection issues:** Ensure Wi-Fi is enabled. Restart your router and the tablet. Forget the network and reconnect.
- **Apps crashing:** Clear the app's cache and data in **Settings > Apps > [App Name] > Storage & cache**. Reinstall the app if the issue persists.
- **Screen unresponsive:** Perform a forced restart by holding the Power button for about 10-15 seconds.

If problems persist, consider performing a factory reset (backup your data first) or contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	FASTWD
Model Number	P7-EEA (Series: T181-EEA)
Operating System	Android 14

Feature	Detail
Processor	MediaTek Octa-Core, 2 GHz
RAM	36 GB (12GB physical + 24GB virtual)
Internal Storage (ROM)	256 GB
Expandable Storage	Micro SD up to 1 TB
Screen Size	11 Inches
Display Resolution	2000 x 1200 pixels (2K INCell)
Rear Camera	13 MP
Front Camera	8 MP
Battery Capacity	9580 mAh
Battery Life (Usage)	Approx. 6 hours
Connectivity	5G WiFi (802.11ac), 4G LTE, Bluetooth 5.0
Special Features	Fast Charging, GPS, Face Recognition, Widevine L1, Parental Controls
Dimensions (L x W x H)	25 x 16 x 1 cm
Weight	1.35 kilograms

## WARRANTY AND SUPPORT

---

### Warranty Information:

Your FASTWD T181-EEA Tablet is covered by a one-year product warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

### Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact FASTWD customer support. Refer to the contact information provided with your purchase documentation or visit the official FASTWD website for support details.