

KÄRCHER 1.633-609.0

Kärcher WV 1 Electric Window Vacuum Squeegee 10" - Instruction Manual

Model: WV 1 White (1.633-609.0)

1. PRODUCT OVERVIEW

The Kärcher WV 1 Electric Window Vacuum Squeegee is designed for efficient and streak-free cleaning of smooth surfaces. This device offers a cordless operation, making it suitable for various household cleaning tasks.

Key Features:

- Multi-Surface Cleaning: Suitable for windows, showers, mirrors, tiles, and countertops.
- Lightweight and Compact: Weighs only 1.1 lbs for comfortable handling.
- Cordless Operation: Rechargeable battery provides up to 25 minutes of runtime.
- Streak-Free Results: Vacuums away dirty water and cleaning solution, preventing drips and streaks.
- Complete System: Includes the WV 1 Plus unit, a spray bottle with microfiber pad, and concentrated glass cleaner.



AT A GLANCE

- Makes window cleaning effortless, streak-free and 3x faster*
- Cleans flat surfaces like windows, glass tables, shower area
- Lightweight, compact and handy at only 1.1 pounds
- Cordless for maximum comfort with up to 25 min runtime
- Easily detachable dirty water tank

*compared to conventional window cleaning

Figure 1: Kärcher WV 1 Electric Window Vacuum Squeegee unit.

WV 1 PLUS FEATURES



Figure 2: Diagram highlighting key features of the WV 1 Plus, including the built-in vacuum, 10-inch flexible squeegee blade, power button & battery indicator, easily removable dirt container, and ergonomic handle.

2. SETUP AND ASSEMBLY

Before first use, ensure all components are present and the device is fully charged.

2.1 Unpacking and Component Check:

Verify the package contains the WV 1 Plus unit, a spray bottle, a microfiber pad, a charger, and a 16.9 oz concentrated glass cleaner.

2.2 Charging the Device:

1. Connect the charger to the charging port on the WV 1 unit.
2. Plug the charger into a standard electrical outlet.
3. The LED indicator will show charging status. A full charge provides up to 25 minutes of operation.



The dirty water tank can be emptied without coming into contact with contaminated water.

Figure 3: Close-up of the LED display on the Kärcher WV 1, indicating when the battery requires charging.

2.3 Preparing the Spray Bottle:

1. Fill the spray bottle with water and the concentrated glass cleaner according to the cleaner's instructions.
2. Attach the microfiber pad to the spray bottle.

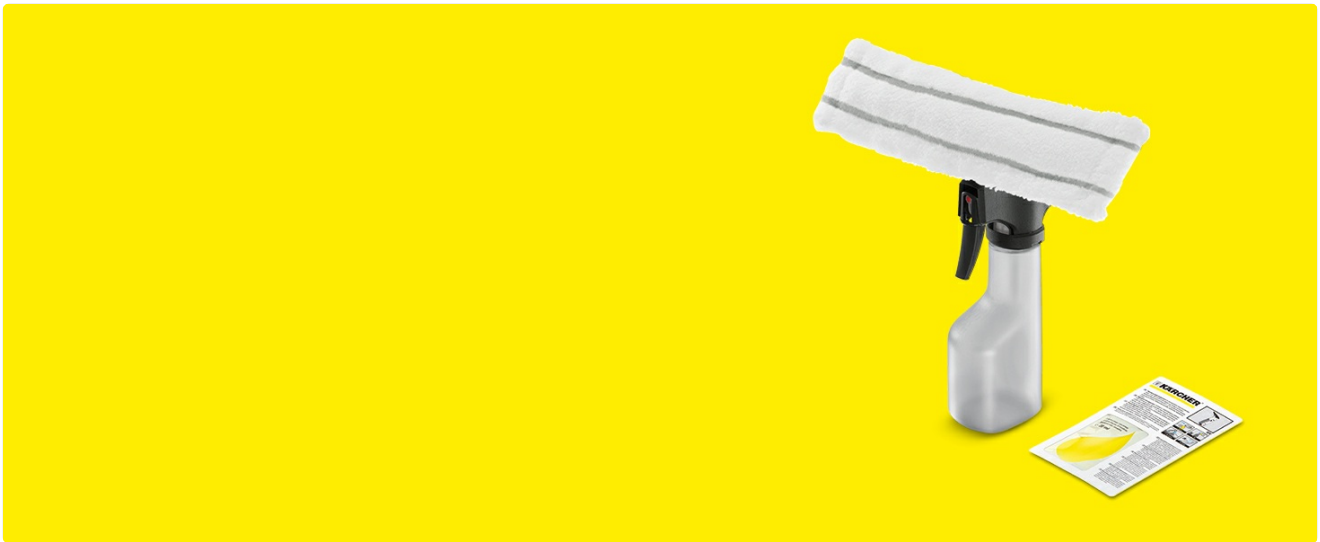


Figure 4: The Kärcher spray bottle with an attached microfiber cloth and a small pack of concentrated cleaner, ready for use.

3. OPERATING INSTRUCTIONS

Follow these steps for effective cleaning with your Kärcher WV 1.

3.1 Cleaning Process:

1. **Spray:** Spray the cleaning solution onto the surface using the prepared spray bottle.
2. **Wipe:** Use the microfiber pad on the spray bottle to evenly distribute the solution and loosen dirt.
3. **Vacuum:** Turn on the Kärcher WV 1 by pressing the power button. Hold the device with the squeegee blade flat against the wet surface and draw it downwards in a straight, even motion. The vacuum will suction the dirty water.
4. Repeat steps 1-3 as needed for the entire surface.



The WV 1 makes it easy to remove water and cleaning fluid from mirrors, glass, tiles, and other smooth surfaces.

Figure 5: A woman demonstrates cleaning a window using the Kärcher WV 1, showing the device effectively removing water and cleaning fluid from the glass surface.



The device is lightweight and is comfortable to hold.

Figure 6: The Kärcher WV 1 being used to clean a glass stovetop, illustrating its lightweight and comfortable design for various surfaces.



The flexible peel-off lip ensures that no drops are left behind.

Figure 7: A woman cleaning a tiled shower wall with the Kärcher WV 1, demonstrating how the flexible peel-off lip ensures no drops are left behind.

3.2 Recommended Usage:

For optimal results, ensure the surface is adequately wet before vacuuming. Overlap strokes slightly to avoid leaving gaps. The device can be used horizontally or vertically.

Your browser does not support the video tag.

Video 1: Official Kärcher video demonstrating the use of the WV 1 Plus for cleaning various smooth surfaces like windows, mirrors, and countertops, highlighting its ease of use and streak-free results.

4. MAINTENANCE

Regular maintenance ensures the longevity and performance of your device.

4.1 Emptying the Dirty Water Tank:

1. After each use, or when the tank is full, switch off the device.

2. Remove the dirty water tank from the main unit.
3. Empty the collected dirty water into a drain.
4. Rinse the tank with clean water and allow it to air dry before reattaching.



Figure 8: A hand emptying the dirty water tank of the Kärcher WV 1, demonstrating how it can be done without direct contact with contaminated water.

4.2 Cleaning the Microfiber Pad:

The microfiber pad is machine-washable. Remove it from the spray bottle and wash it according to its care instructions. Allow it to dry completely before reuse.

4.3 Cleaning the Squeegee Blade:

Wipe the rubber squeegee blade with a damp cloth after each use to remove any residue and ensure optimal performance.

5. TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Streaks left on surface	◦ Squeegee blade is dirty or damaged. ◦ Surface not wet enough. ◦ Incorrect cleaning solution concentration.	◦ Clean or replace the squeegee blade. ◦ Ensure the surface is thoroughly wet before vacuuming. ◦ Adjust the cleaning solution concentration as per instructions.
Device not turning on	◦ Battery is discharged. ◦ Power button not pressed correctly.	◦ Charge the battery fully. ◦ Press the power button firmly.
Water leaking from device	◦ Dirty water tank not properly sealed. ◦ Dirty water tank is full.	◦ Ensure the dirty water tank is correctly attached and sealed. ◦ Empty the dirty water tank.

6. SPECIFICATIONS

- **Brand:** KÄRCHER
- **Model Number:** 1.633-609.0
- **Color:** White
- **Product Dimensions:** 10"W x 10.75"H
- **Item Weight:** 1.1 Pounds
- **Blade Length:** 10 Inches
- **Blade Material:** Rubber
- **Handle Material:** Plastic
- **Battery Runtime:** Up to 25 minutes

7. WARRANTY AND SUPPORT

For warranty information, product registration, or further technical support, please visit the official Kärcher website or contact their customer service. Keep your proof of purchase for any warranty claims.
Official Kärcher Website: www.karcher.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question