

Vulcan Hart ABA18

Vulcan Hart ABA18 Burner Valve Instruction Manual

For 1/2 PSI (55 mbar) Gas Systems

1. GENERAL SAFETY INFORMATION

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment.

- This burner valve is designed for use with specific gas types and pressures. Verify compatibility before installation.
- Installation and service must be performed by a qualified, licensed professional.
- Always shut off the main gas supply and depressurize the system before attempting any installation, maintenance, or service.
- Check for gas leaks after installation or any service using an approved leak detection solution. Never use an open flame.
- Ensure adequate ventilation in the work area.
- Wear appropriate personal protective equipment (PPE) during installation and service.

2. PRODUCT OVERVIEW

The Vulcan Hart ABA18 Burner Valve is an on/off control device designed to regulate gas flow to a burner in commercial or industrial heating applications. It is rated for systems operating at 1/2 PSI (55 mbar) pressure. This valve ensures precise control over the gas supply, contributing to safe and efficient operation of the connected appliance.



Figure 2.1: Side view of the Vulcan Hart ABA18 Burner Valve, showing the main body and connection points.



Figure 2.2: Angled view of the Vulcan Hart ABA18 Burner Valve, highlighting the inlet, outlet, and pilot connections.

3. SETUP AND INSTALLATION

IMPORTANT: Installation must be performed by a qualified, licensed gas technician in accordance with all local and national codes and regulations.

3.1 Pre-Installation Steps

1. Ensure the main gas supply to the appliance is completely shut off.
2. Depressurize any gas lines connected to the valve.
3. Gather necessary tools: pipe wrenches, thread sealant (suitable for gas), leak detection solution, and appropriate PPE.
4. Inspect the new ABA18 burner valve for any signs of damage. Do not install a damaged valve.

3.2 Installation Procedure

1. Carefully remove the old burner valve, if applicable.
2. Clean all connecting pipe threads thoroughly to ensure a proper seal.
3. Apply an appropriate amount of gas-approved thread sealant to the male pipe threads of the gas lines.
4. Thread the new Vulcan Hart ABA18 burner valve onto the gas lines, ensuring correct orientation for gas flow (inlet and outlet). Tighten securely with pipe wrenches, but do not overtighten.

- 5. Connect any pilot lines or other auxiliary connections as required by the appliance manufacturer.
- 6. Slowly turn on the main gas supply.
- 7. Apply leak detection solution to all new connections. Bubbles indicate a leak. If a leak is detected, immediately shut off the gas supply, tighten the connection, and re-test. Repeat until no leaks are present.
- 8. Verify proper operation of the valve and appliance.

4. OPERATING INSTRUCTIONS

The Vulcan Hart ABA18 Burner Valve operates as a simple on/off control for gas flow. The specific method of actuation (e.g., knob, lever) will depend on the appliance it is installed in.

- **To Turn On:** Rotate the valve stem or control knob to the 'ON' position. This will allow gas to flow to the burner.
- **To Turn Off:** Rotate the valve stem or control knob to the 'OFF' position. This will stop the gas flow to the burner.

Always follow the operating instructions provided by the manufacturer of the appliance in which this valve is installed.

5. MAINTENANCE

The Vulcan Hart ABA18 Burner Valve is designed for reliable operation with minimal maintenance. However, regular inspection is crucial for safety and performance.

- **Annual Inspection:** Have a qualified technician inspect the valve and all gas connections annually for signs of wear, corrosion, or leaks.
- **Leak Checks:** Periodically perform a leak check using an approved leak detection solution on all gas connections.
- **Cleaning:** The exterior of the valve can be wiped clean with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not attempt to disassemble the valve for internal cleaning; internal service should only be performed by the manufacturer or authorized service personnel.
- **Replacement:** If the valve shows signs of damage, excessive wear, or consistent leakage, it must be replaced immediately by a qualified professional.

6. TROUBLESHOOTING

This section addresses common issues related to the burner valve. For complex problems, contact a qualified service technician.

Problem	Possible Cause	Solution
Gas odor detected	Gas leak at connections or within valve.	IMMEDIATELY SHUT OFF GAS SUPPLY. Ventilate area. Do not operate any electrical switches or open flames. Contact a qualified gas technician for inspection and repair.
No gas flow to burner	Valve in 'OFF' position; main gas supply off; obstruction in line; faulty valve.	Ensure valve is in 'ON' position. Check main gas supply. If problem persists, contact a qualified technician.
Valve difficult to turn	Internal wear or debris.	Do not force the valve. Contact a qualified technician for inspection or replacement.

7. SPECIFICATIONS

- **Model:** ABA18
- **Type:** Burner Valve, On/Off
- **Pressure Rating:** 1/2 PSI (55 mbar)
- **Manufacturer:** Vulcan Hart
- **Compatibility:** Designed to fit systems requiring a 1/2 PSI (55 mbar) burner valve.

8. WARRANTY INFORMATION

Warranty information for the Vulcan Hart ABA18 Burner Valve is typically provided by the seller or manufacturer at the time of purchase. Please refer to your purchase documentation or contact your supplier for details regarding warranty coverage, terms, and conditions.

9. CUSTOMER SUPPORT

For technical assistance, replacement parts, or service inquiries regarding your Vulcan Hart ABA18 Burner Valve, please contact the vendor from whom you purchased the product. They can provide specific support and guidance related to your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

