

[Manuals.plus](#) /

› [Best Choice Products](#) /

› Best Choice Products 12V Kids Ride-On Electric ATV, 4-Wheeler Quad Car Toy w/Bluetooth Audio, 2.4mph Max Speed, Treaded Tires, LED Headlights, Radio - Black Instruction Manual

Best Choice Products SKY7063

Best Choice Products 12V Kids Ride-On Electric ATV Instruction Manual

Model: SKY7063

1. SAFETY INFORMATION

To reduce the risk of injury, adult supervision is required. Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider.

2. PRODUCT OVERVIEW

The Best Choice Products 12V Kids Ride-On Electric ATV is designed for children aged 36 months to 6 years, with a maximum weight capacity of 55 lbs. It features a rugged and stylish design, large treaded wheels for various terrains, LED headlights, a horn, and Bluetooth audio connectivity.



Figure 2.1: Best Choice Products 12V Kids Ride-On Electric ATV (Black)

3. SETUP AND ASSEMBLY

Before first use, ensure all components are present and undamaged. Refer to the included Assembly Guide for detailed step-by-step instructions. Adult assembly is required.

3.1. Wheel Installation

The ATV features large treaded wheels designed for various surfaces. Install each wheel securely according to the assembly guide. Ensure all fasteners are tightened properly.

Large Treaded Wheels

Anti-slip, treaded wheels can conquer grass, dirt, driveways, and sidewalks



Figure 3.1: Illustration of Large Treaded Wheels

3.2. Battery Connection and Initial Charge

Locate the 12V battery. Connect it as per the instructions in the assembly guide. For optimal performance, fully charge the battery before the first use. The battery provides 1-2 hours of run time per charge.

Rechargeable Battery

A 12V battery provides up to 2 hours of run time per charge so kids can have endless enjoyment!



Long
Lasting



1-2 hours



Figure 3.2: Rechargeable Battery System

4. OPERATING INSTRUCTIONS

Familiarize yourself with the controls before operating the ATV.

4.1. Driving Controls

- **Foot Pedal Accelerator:** Press the foot pedal to engage the motor and move forward. Release to brake.
- **Forward/Reverse Function:** Use the designated switch to select between forward and reverse gears.
- **Speed Selections:** The ATV offers 2 speed selections (high & low) with a maximum speed of 1.2 - 2.4 mph. Select the appropriate speed based on the rider's skill level and terrain.

Realistic Functions

Made with true-to-life suspension and LED lights for maximum fun!



Foot Pedal

2 Speed
Selections

Comfortable Seat



Figure 4.1: Realistic Functions and Controls

4.2. Audio Features

- **Bluetooth Connection:** Activate the Bluetooth function on the ATV and pair it with your media device to play music.
- **LED Headlights & Horn:** Use the switches on the dashboard to turn on the LED headlights and activate the horn for a realistic driving experience.

Bluetooth Connection

Kids can wirelessly connect media devices and add a soundtrack to play time

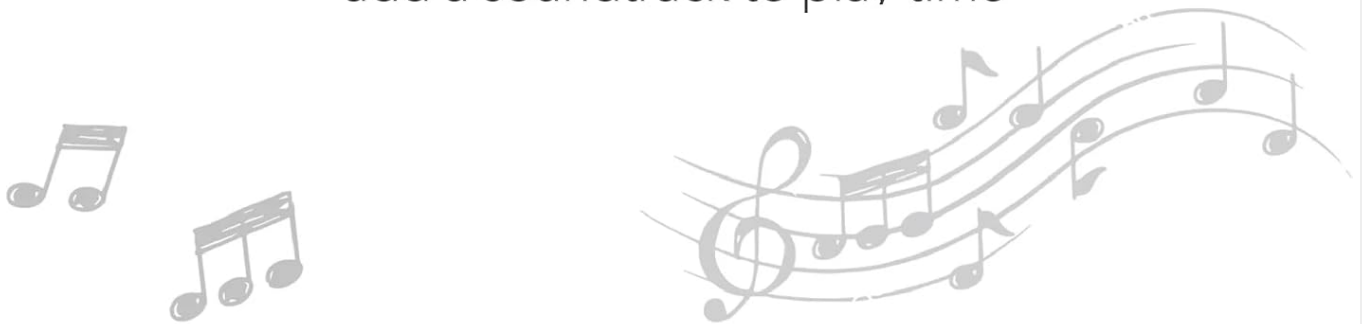


Figure 4.2: Bluetooth Audio Connectivity

5. MAINTENANCE

5.1. Battery Care

- Always recharge the 12V battery after each use.
- Remove the battery from the ATV for charging.
- Use only the included charger.
- Do not overcharge the battery.

5.2. Cleaning and Storage

- Clean the ATV with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the ATV in a dry, cool place away from direct sunlight and moisture.

6. TROUBLESHOOTING

If the ATV is not functioning correctly, please check the following:

- **No Power:** Ensure the battery is fully charged and properly connected. Check all electrical connections.
- **Slow Speed:** Verify the speed selection switch is in the desired position. Ensure the battery is fully charged.
- **Foot Pedal Not Responding:** Check the wiring to the foot pedal. Ensure no obstructions are preventing full depression of the pedal.
- **Missing Parts:** If any parts were missing upon delivery, contact customer support immediately.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	33.5" (L) x 19.5" (W) x 21" (H)
Item Weight	20 pounds
Item Model Number	SKY7063
Manufacturer Recommended Age	36 months - 6 years
Weight Capacity	55 lbs.
Max Speed	1.2 - 2.4 mph
Battery	12V
Run Time Per Charge	1-2 hours

Perfectly Sized

Scaled down and built tough to accommodate
your child as they grow



Ages 3-6



55 lbs. Capacity



35-43"

Figure 7.1: Perfectly Sized for Ages 3-6

Product Dimensions



Figure 7.2: Detailed Product Dimensions

8. WARRANTY INFORMATION

For detailed warranty information, please refer to the documentation included with your product or visit the official Best Choice Products website.

9. CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report a missing part, please contact Best Choice Products customer support. You can find contact information on the official Best Choice Products website or through their Amazon store page: [Best Choice Products Amazon Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question