

Ulike NAN-07

Ulike Electric Male Masturbator

INSTRUCTION MANUAL

Model: NAN-07 | Brand: Ulike

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this product. Retain this manual for future reference.

- This product is intended for adult use only.
- Do not use if the product appears damaged or defective.
- Clean the product thoroughly before and after each use as described in the 'Cleaning and Maintenance' section.
- Use only water-based lubricants with this product. Oil-based lubricants may damage the silicone material.
- Keep out of reach of children.
- If you experience any discomfort or pain during use, discontinue use immediately.
- Do not immerse the main body of the device in water beyond its waterproof rating. Refer to specifications.

2. PRODUCT OVERVIEW

The Ulike Electric Male Masturbator (Model NAN-07) is designed to provide a unique experience with its advanced features. It combines telescopic movement and rotation functions within a soft, textured silicone sleeve.



Image: General view of the Ulike Electric Male Masturbator.

Key Features:

- **7 Telescopic Modes:** Offers varied internal thrusting sensations.
- **Rotating Massage Function:** Provides additional stimulation.
- **Hands-Free Operation:** Equipped with an adjustable suction base for secure placement.
- **Removable & Easy to Clean:** Designed for hygienic maintenance.
- **Soft Silicone Inner Sleeve:** Ensures comfort and realistic texture.
- **USB Rechargeable:** Convenient charging for portable use.
- **Low Noise Operation:** Operates at less than 50dB.

MORE POWER LESS NOISE

Less noise than similar toys



< 50dB

Image: Detailed view of the 3D realistic texture of the inner sleeve, showing particle length (0.4in/1cm) and insertable girth (6.9in/17cm).

ADJUSTABLE SUCTION BASE

The hands-free suction base opens up
endless possibilities

- 
- Inside the car
 - Bedroom
 - Bathroom

240°

Image: Illustration highlighting the low noise operation of the device, indicated as less than 50dB.

3. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- Ulike Electric Male Masturbator (Main Unit)
- USB Charging Cable
- User Manual (this document)

4. SETUP

4.1 Initial Charging

Before first use, fully charge the device. Connect the provided USB charging cable to the charging port on the device and plug the other end into a standard USB power adapter (not included) or a computer USB port. The charging indicator light will typically show charging status and turn off or change color when fully charged. A full charge takes approximately 1 hour for use.

Diverse Modes to Serve You

90min

7 automatic rotation modes



3 thrusting speed



Image: Illustration of the USB quick charging port and the suction cup mouth at the base of the device.

4.2 Attaching the Suction Base (Optional)

The device features an adjustable suction base for hands-free use. To attach, ensure the surface is clean, smooth, and dry. Press the suction cup firmly against the surface and engage the locking mechanism (if present) to secure it. Adjust the angle as desired.



Image: The adjustable suction base allowing for hands-free use and angle adjustment up to 240 degrees.

5. OPERATING INSTRUCTIONS

Ensure the device is charged before use. Apply a generous amount of water-based lubricant to the inner sleeve and your body.

5.1 Power On/Off

- Press and hold the power button () for 2-3 seconds to turn the device ON or OFF.

5.2 Mode Selection

The device offers 7 telescopic modes and a rotating massage function. Use the control buttons to cycle through the modes:

- Press the 'M' button to switch between the 7 telescopic modes.
- Press the 'R' button to activate or change the rotating massage function.
- Use the '+' and '-' buttons to adjust the intensity or speed of the selected mode.



Image: Diagram illustrating the 3 thrusting speeds (up to 300 thrusts/min) and 7 rotating modes (up to 150 rotations/min) of the device.



Image: Visual representation of the 7 automatic rotation modes and 3 thrusting speeds available for diverse use.

experiences.

5.3 One-Click Climax Mode

For an intensified experience, press the dedicated 'Climax' button (often indicated by a lightning bolt symbol). This mode will activate a powerful combination of thrusting and rotation.

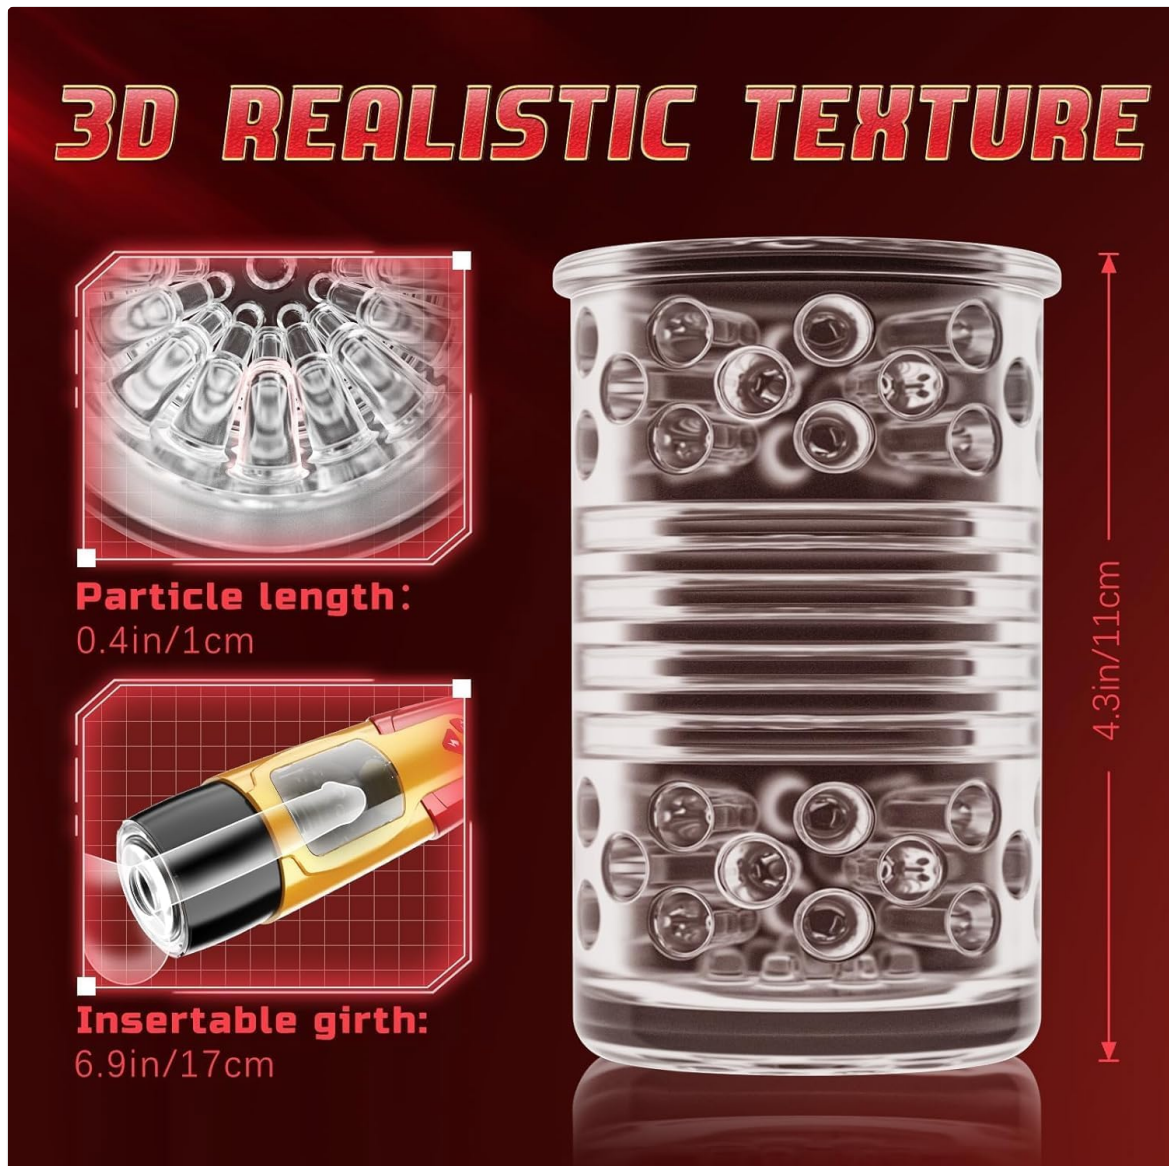


Image: Illustration of the 'One-Click Climax Mode' button and its effect on the device's operation.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance are essential for hygiene and product longevity.

6.1 Disassembly for Cleaning

The inner sleeve is removable for easy cleaning:

1. Gently twist and pull the top cover or base to separate the main unit from the inner sleeve.
2. Carefully remove the silicone inner sleeve from the housing.

6.2 Cleaning Instructions

- Wash the silicone inner sleeve thoroughly with warm water and a mild, toy-safe soap. Rinse completely to remove all soap residue.

- The main unit (containing electronics) is waterproof. Wipe it clean with a damp cloth and a mild soap. Do not submerge the entire main unit in water unless explicitly stated as fully submersible in the specifications.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

6.3 Drying and Reassembly

- Allow all components to air dry completely before reassembly or storage. You may use a lint-free cloth to pat dry.
- Once dry, carefully reinsert the silicone inner sleeve into the main housing and reattach the cover/base until it clicks securely into place.

7. CHARGING

The device is powered by a rechargeable battery. When the battery is low, the indicator light may flash or the device's performance may decrease.

- Connect the USB charging cable to the device's charging port.
- Plug the USB cable into a compatible USB power source (e.g., wall adapter, computer, power bank).
- The charging indicator light will illuminate during charging.
- Charging typically takes approximately 1 hour for sufficient use. Avoid overcharging by disconnecting once fully charged.

8. TROUBLESHOOTING

If you encounter any issues with your Ulike Electric Male Masturbator, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully.
Device does not turn on.	Power button not pressed correctly.	Press and hold the power button for 2-3 seconds.
Weak or no vibration/movement.	Low battery.	Recharge the device.
Weak or no vibration/movement.	Mode/intensity set too low.	Adjust mode and intensity using the control buttons.
Device not charging.	Faulty cable or power source.	Try a different USB cable or power adapter. Ensure connections are secure.

9. SPECIFICATIONS

Feature	Detail
Model	NAN-07

Feature	Detail
Brand	Ulike
Product Dimensions (L x W x H)	12 x 8 x 4 cm
Material	Silicone
Water Resistance Level	Waterproof
Charging	USB Rechargeable
Noise Level	< 50dB
UPC	744585993813

10. DISPOSAL INFORMATION

This product contains electronic components and a rechargeable battery. Do not dispose of it with general household waste. Please follow local regulations for the disposal of electronic waste and batteries. Proper disposal helps prevent potential negative consequences for the environment and human health.

11. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries not covered in this manual, please refer to the product packaging or contact the manufacturer directly through their official website or customer service channels. Keep your purchase receipt as proof of purchase for warranty claims.