

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [NIXON](#) /

› [NIXON Time Teller A1373 Analog Watch Instruction Manual](#)

NIXON A1373-5247-00

NIXON Time Teller A1373 Analog Watch Instruction Manual

Model: A1373-5247-00

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your NIXON Time Teller A1373 analog watch. This timepiece features a Miyota Japanese quartz 3-hand movement and is designed for daily wear with a 10 ATM (100-meter) water resistance rating.

SETUP

Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown out to the first position. You may feel a slight click.
3. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
4. Once the time is set, push the crown back into its original position against the watch case. Ensure it is fully seated to maintain water resistance.



Image: Front view of the NIXON Time Teller A1373 watch. The crown for time adjustment is visible on the right side of the case.

Adjusting the Leather Band

The watch features a 20-18mm tapered custom leather band with a stainless steel buckle. To adjust the fit, simply

move the buckle pin through the available holes on the strap until a comfortable and secure fit is achieved on your wrist.



Image: Back view of the watch, highlighting the leather band and buckle for adjustment.

OPERATING THE WATCH

Time-Telling

Your NIXON Time Teller A1373 watch displays time using three hands: an hour hand, a minute hand, and a red second hand. The dial features raised indices for clear readability.

Water Resistance (10 ATM / 100 Meters)

This watch is water resistant to 10 ATM or 100 meters. This rating means the watch is suitable for swimming, snorkeling, and showering. It is not recommended for high-impact water sports or diving. Always ensure the crown is fully pushed in before any contact with water.



Image: The NIXON Time Teller A1373 watch being worn on a wrist.

MAINTENANCE

Cleaning

- **Case and Crystal:** Wipe the stainless steel case and hardened mineral crystal with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.

- **Leather Band:** Clean the leather band with a soft, dry cloth. Avoid prolonged exposure to water, direct sunlight, and extreme heat, which can damage the leather.

Water Resistance Care

To maintain the water resistance of your watch, ensure the crown is always fully pushed in. Avoid operating the crown while the watch is wet or submerged. Water resistance is not a permanent condition and may eventually be affected by the aging of gaskets or accidental shocks to the crown. It is recommended to have the water resistance checked periodically by a qualified watch technician.



Image: Engravings on the watch case back, indicating water resistance and movement type.

Battery Replacement

The watch uses one product-specific battery (included). When the watch stops running, it indicates the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

- **Watch Not Running:**
 - Ensure the crown is fully pushed in.

- The battery may need replacement. Refer to the "Battery Replacement" section.
- **Time Inaccuracy:**
 - Check if the crown is fully pushed in.
 - Extreme temperatures or strong magnetic fields can affect accuracy.
 - If inaccuracy persists, the movement may require servicing.
- **Moisture Inside Watch:**
 - If you notice condensation or water inside the watch, immediately contact customer support or a qualified watch technician. Do not attempt to open the watch yourself.

SPECIFICATIONS

Model Number	A1373-5247-00
Movement	Miyota Japanese Quartz 3-Hand
Case Material	Custom Solid Stainless Steel
Case Diameter	37mm
Water Resistance	10 ATM / 100 Meters
Crystal	Hardened Mineral Crystal
Band Material	Custom Leather
Band Width	20mm-18mm Tapered
Clasp Type	Stainless Steel Buckle
Battery	1 Product Specific (included)

WARRANTY AND SUPPORT

Warranty Information

NIXON watches are covered by a limited warranty against defects in materials and workmanship. Please refer to the official NIXON website or your purchase documentation for specific warranty terms and conditions, including duration and coverage details.

Customer Support

For technical assistance, service, or warranty claims, please contact NIXON customer support through their official website or the contact information provided with your purchase. When contacting support, please have your watch model number (A1373-5247-00) and purchase details available.

NIXON Official Website: www.nixon.com

