

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY SRT32HY4003 Replacement Remote Control User Manual for Strong LED TVs

ECONTROLLY SRT32HY4003

ECONTROLLY SRT32HY4003 Replacement Remote Control User Manual

For Strong LED TV Models: SRT40FX4003, 32HX4003, 43FX4003, 49FX4003, 55FX4003, 65FX4003

INTRODUCTION

This manual provides instructions for the ECONTROLLY SRT32HY4003 Replacement Remote Control. This remote is designed to function as a direct replacement for the original remote controls of various Strong LED TV models. It offers a user-friendly experience without the need for complex programming.

Please read this manual carefully to ensure proper setup and operation of your new remote control.

SETUP

1. Battery Installation

The remote control requires two (2) AA batteries (not included). For optimal performance, use new alkaline batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating where to insert AA batteries.

2. Initial Use

Once batteries are installed, the remote control is ready for use. No programming or pairing is required. Point the remote directly at your Strong LED TV and begin operating it.

Note: Ensure there are no obstructions between the remote control and the TV's infrared receiver.

OPERATING INSTRUCTIONS

The ECONTROLLY SRT32HY4003 remote control features standard buttons for TV operation. Below is a general overview of common button functions.





Image: Front view of the remote control, displaying the layout of all buttons.

- **POWER** (Red Button): Turns the TV on or off.
- **PICTURE / SOUND / ZOOM**: Access picture, sound, and zoom settings.
- **SUBTITLE / EPG / FAV**: Control subtitles, Electronic Program Guide, and favorite channels.
- **Number Buttons (0-9)**: Directly select channels.
- **CHN LIST / BACK / RETURN**: Access channel list, go back to previous menu, or return to previous channel.
- **MENU**: Opens the TV's main menu.
- **SOURCE**: Selects input source (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right)**: Navigate through menus and options.
- **ENTER**: Confirms selections.
- **EXIT**: Exits current menu or function.
- **TV/RADIO**: Switches between TV and Radio modes.
- **VOL +/-**: Adjusts volume level.
- **PR +/- (Program +/-)**: Changes channels.
- **HOME**: Accesses the TV's home screen or smart features.
- **REC / INDEX / CANCEL**: Recording functions.
- **SLEEP / REVEAL / SIZE**: Sleep timer, teletext reveal, screen size adjustment.
- **INFO / MIX / SUB-PAGE**: Display information, teletext mix, sub-page navigation.
- **Playback Controls** (Rewind, Play/Pause, Fast Forward, Previous, Stop, Next): Control media playback.
- **Color Buttons** (Red, Green, Yellow, Blue): Specific functions within menus or teletext.
- **NICAM I/II / TEXT / AD / QUICK / HOLD / FREEZE / PVR LIST / 3D**: Various advanced functions depending on TV model.

For detailed functionality of specific buttons, refer to your Strong LED TV's original user manual.

MAINTENANCE

Cleaning the Remote Control

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners, alcohol, or other solvents, as these may damage the surface or internal components.

Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure new alkaline batteries are correctly installed. Replace if necessary.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the remote is pointed directly at the TV.
 - Confirm your TV model is listed as compatible (SRT40FX4003, 32HX4003, 43FX4003, 49FX4003, 55FX4003, 65FX4003).
- **Some buttons not working:**
 - This remote is a replacement and may not support all advanced functions of your original TV remote if those functions are unique to the original.
 - Ensure the batteries have sufficient power.
- **Short operating range:**
 - Replace batteries with new alkaline ones.
 - Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR receiver.

If issues persist after following these steps, please contact customer support.

SPECIFICATIONS

Model Number	SRT32HY4003
Brand	ECONTROLLY
Compatibility	Strong LED TV models: SRT40FX4003, 32HX4003, 43FX4003, 49FX4003, 55FX4003, 65FX4003
Power Source	2 x AA Batteries (not included)
Material	ABS
Dimensions	6 x 3 x 0.5 inches (approximate)
Item Weight	2 ounces (approximate, without batteries)

SUPPORT

For further assistance or inquiries, please contact ECONTROLLY customer support through the retailer's platform where the product was purchased. When contacting support, please provide your product model number (SRT32HY4003) and a detailed description of the issue.

We are committed to resolving any issues and providing you with the best service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNCRV9D2>

More documents and user manuals: <https://manuals.plus/>