

McGrey DP 17

McGrey DP-17 AL Digital Piano Set User Manual

Model: DP-17 AL

[Introduction](#)

[Safety Instructions](#)

[Package Contents](#)

[Setup](#)

[Operating Instructions](#)

[Connections](#)

[Warranty &](#)

[Support](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

1. INTRODUCTION

Thank you for choosing the McGrey DP-17 AL Digital Piano Set. This instrument combines ease of use, a stylish slimline design, and a high-quality hammer-action keyboard to deliver an impressive sound experience in a compact form. The DP-17 AL is an ideal instrument for beginners and families who value elegant aesthetics and features perfectly adapted for learning. This manual provides essential information for the proper setup, operation, and maintenance of your digital piano.

2. SAFETY INSTRUCTIONS

- **Power Supply:** Use only the specified power adapter. Ensure the voltage matches your local power supply. Disconnect the power cord during lightning storms or when unused for long periods.
- **Water and Moisture:** Do not expose the instrument to rain, moisture, or excessive humidity. Do not place containers with liquids on the instrument.
- **Ventilation:** Ensure proper ventilation. Do not block ventilation openings.
- **Placement:** Place the instrument on a stable, level surface. Avoid direct sunlight, heat sources, or extreme temperatures.
- **Cleaning:** Clean only with a soft, dry cloth. Do not use liquid cleaners or sprays.
- **Servicing:** Do not attempt to service the instrument yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Your McGrey DP-17 AL Digital Piano Set includes the following items:

- McGrey DP-17 AL Digital Piano (88 weighted keys)
- Power Adapter

- Music Rest (detachable)
- Piano Bench (with padded seat and metal legs)
- Headphones (dynamic, over-ear)
- Piano School Book (multimedia for beginners)
- Pedal Unit (3 pedals)
- Metal Legs for Piano

4. SETUP

4.1 Assembling the Digital Piano

Carefully unpack all components. Attach the metal legs to the main piano unit using the provided screws. Ensure all connections are secure. Mount the detachable music rest into its designated slot on the piano.



The McGrey DP-17 AL Digital Piano, showcasing its slim design and 88-weighted keys, with a music rest.

4.2 Assembling the Piano Bench

Assemble the piano bench by attaching the legs to the seat using the provided hardware. Ensure the bench is stable before use. The bench features a padded synthetic leather seat and stable metal legs with plastic floor protectors.



A sturdy black piano bench with a comfortable padded synthetic leather seat, designed for use with the digital piano.



Close-up images highlighting the synthetic leather look of the piano bench seat and the stable metal legs with floor protectors.

4.3 Initial Power-Up

Connect the power adapter to the DC IN jack on the piano and then to a suitable power outlet. Press the power button to turn on the instrument. The display will illuminate, indicating the piano is ready for use.

5. OPERATING INSTRUCTIONS

The DP-17 AL features an intuitive control panel for easy access to its various functions.



Detail view of the piano's control panel, showing the display, function buttons for sounds, rhythms, dual/split, metronome, and volume.

5.1 Keyboard and Touch Sensitivity

The 88-weighted hammer-action keyboard simulates the feel of an acoustic piano. The touch-sensitive keys allow for dynamic expression; notes will sound louder or softer depending on how hard you strike them.

5.2 Selecting Sounds (Voices)

The piano offers 128 different sounds (voices). Use the dedicated buttons or the data entry dial on the control panel to browse and select your desired instrument sound. The current sound number will be displayed.

5.3 Using Rhythms (Accompaniment)

Access 600 different accompaniment styles. Select a rhythm using the control panel. The automatic accompaniment function adapts to the chords you play with your left hand, providing a full band or orchestra experience.

5.4 Dual and Split Functions

- **Dual Function:** This feature allows you to layer two different voices, such as strings and piano, to create a richer, more impressive sound. Activate the Dual function and select the two desired voices.
- **Split Function:** The Split function divides the keyboard into two separate zones. This is useful for playing different instruments with each hand, for example, bass with the left hand and piano with the right.

5.5 Metronome and Demo Songs

- **Metronome:** Use the built-in metronome to practice with precise timing. Adjust the tempo as needed.
- **Demo Songs:** The piano includes 80 demo songs. These can be used for listening pleasure or as learning aids.

5.6 Using the Pedals

The DP-17 AL comes with a 3-pedal unit. These pedals typically control Sustain, Sostenuto, and Soft functions, enhancing

your playing expression. Connect the pedal unit to the designated pedal input on the piano's rear panel.

5.7 Headphones

The included dynamic headphones provide a private practice experience. They feature soft circumaural ear pads, good external sound insulation, and integrated volume control on the cable. Connect them to one of the two headphone jacks on the piano.





Dynamic over-ear headphones, model KH-238, with soft ear pads and integrated volume control, suitable for private practice.

5.8 Piano School Book

The multimedia piano school book by Michael Christoph is designed for beginners. It includes 15 songs ranging from classical to jazz and rock, an introduction to reading sheet music, and 38 accompanying videos for self-study. Utilize this resource to enhance your learning experience.

inkl.
**Playalongs
und Videos**
zum Download

Aller Anfang ist leicht!

Die Klavierschule für Einsteiger
von Michael Christoph

15 coole Songs

von Klassik über Jazz bis Rock zum sofortigen Mitspielen

Einfache Einführung

in das Spiel nach Noten

Trainings-Videos für das Selbststudium

zu jeder Übung und zu jedem Song

PlayAlong zum kostenlosen Download

zu jeder Übung und zu jedem Song

Alle Übungen und Lieder als Midifile

für die Einbindung in elektronische Lernsoftware

EMB 404



The 'Aller Anfang ist leicht!' multimedia piano school book by Michael Christoph, included for beginners.

6. CONNECTIONS

The rear panel of the DP-17 AL provides various connection options:



The rear panel of the digital piano, illustrating various connection ports including USB, MIDI In/Out, AUX In/Out, power, pedal, and headphone jacks.

- **DC IN:** Connect the included power adapter here.
- **PEDAL:** Connect the 3-pedal unit to this port.
- **AUX IN/OUT:** Use these jacks to connect external audio devices (e.g., MP3 player for playback, or an amplifier for output).
- **USB to Host:** Connect to a computer for MIDI data transfer.
- **USB to Device:** For connecting USB storage devices.
- **HEADPHONES (2x):** Two 6.3mm stereo headphone jacks for private practice or duet playing.

7. MAINTENANCE

- **Cleaning:** Wipe the instrument's surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water, then wipe dry immediately. Avoid abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the piano in a dust-free environment. Avoid extreme temperatures and humidity.
- **Key Care:** Keep the keys clean. Avoid touching them with dirty or greasy hands.

8. TROUBLESHOOTING

- **No Power:**
 - Ensure the power adapter is securely connected to both the piano and the power outlet.
 - Check if the power outlet is functioning correctly.
 - Verify the power button is pressed.

- **No Sound:**

- Check the master volume level.
- If using headphones, ensure they are fully plugged in and their volume is adjusted.
- If connected to external speakers, ensure they are powered on and connected correctly.
- Ensure no Mute function is active.

- **Keys Not Responding:**

- Restart the piano.
- Ensure no specific function (e.g., local control off) is preventing sound output.

- **Distorted Sound:**

- Check volume levels on both the piano and any connected external audio equipment.
- Ensure cables are securely connected and not damaged.

9. SPECIFICATIONS

Model:	DP-17 AL
Keys:	88, Weighted Hammer Action, Touch Sensitive
Polyphony:	128 Notes
Sounds (Voices):	128
Rhythms (Styles):	600
Demo Songs:	80
Functions:	Dual, Split, Metronome, Vibrato, Sustain
Pedals:	3 (Sustain, Sostenuto, Soft)
Connections:	DC IN, 2x Headphones, AUX IN/OUT, USB to Host, USB to Device, Pedal
Dimensions (WxDxH):	134 x 33 x 72 cm (52.7 x 13 x 28.3 inches)
Weight:	21 kg (46.3 lbs)
Origin:	China

10. WARRANTY & SUPPORT

For warranty information, please refer to the terms and conditions provided at the time of purchase or contact your retailer. If you encounter any issues not covered in the troubleshooting section, or require further assistance, please contact McGrey customer support or your authorized dealer. Keep your proof of purchase for warranty claims.