

## MODEBHD Contemporary Resin Bird Pendant Light (B0CNCVTBL4)

# MODEBHD Contemporary Pendant Light User Manual

Model: Contemporary Resin Bird Pendant Light (B0CNCVTBL4)

Brand: MODEBHD

## 1. INTRODUCTION

This manual provides essential information for the safe installation, operation, and maintenance of your MODEBHD Contemporary Resin Bird Pendant Light. Please read this manual thoroughly before installation and retain it for future reference.

The pendant light features a unique design with a white resin bird accent and a hand-blown clear glass shade, offering adjustable hanging length to suit various ceiling heights and room configurations.

## 2. SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with electrical wiring.
- Do not install this fixture in wet locations.
- Ensure the fixture is securely mounted to a structural element of the ceiling.
- Use only the specified bulb type and wattage to avoid overheating.
- Do not touch the bulb directly with bare hands during operation or immediately after turning off, as it may be hot.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x Pendant Light Fixture (including resin bird, glass shade, and wiring)
- 1 x Ceiling Canopy/Suction Cup
- Mounting Hardware (screws, wire nuts, etc.)
- *Light bulb is NOT included.*



Image 1: Overview of the MODEBHD Contemporary Resin Bird Pendant Light, showcasing the white resin bird perched atop the clear glass shade and the hanging wire.

#### 4. SPECIFICATIONS

Feature	Detail
Product Name	Pendant Light
Style	Nordic, Contemporary
Color	White
Material	Resin, Hand-Blown Glass
Fixture Diameter	20 cm / 7.9 inches

Fixture Height	26 cm / 10.2 inches
Adjustable Hanging Length	Up to 150 cm / 59 inches
Ceiling Canopy Diameter	10 cm / 3.9 inches
Light Source Base	E26 / E27 (1 bulb required, not included)
Max Wattage	60W per bulb
Voltage	AC110V (Compatible with 110-240V systems)
Certifications	ETL Listed, 3C, UL, CE
Recommended Coverage Area	5-10 square meters



Image 2: Diagram illustrating the dimensions of the pendant light, including fixture diameter, height, and adjustable hanging wire length.

## 5. SETUP AND INSTALLATION

**Before you begin:** Ensure power is disconnected at the circuit breaker. Gather necessary tools (screwdriver, wire strippers, electrical tape, ladder).

1. **Prepare Wiring:** Carefully unpackage the fixture. If necessary, strip approximately 1/2 inch of insulation from the ends of the fixture wires.
2. **Mount Ceiling Canopy:** Secure the ceiling canopy to the junction box in your ceiling using the provided mounting hardware. Ensure it is firmly attached.
3. **Adjust Hanging Length:** The pendant light features an adjustable hanging wire. To adjust the length, gently push the wire into the canopy or pull it out until the desired height is achieved. You may need to loosen a set screw on the canopy to facilitate adjustment, then tighten it once the length is set. The maximum hanging length is 59 inches (150 cm).
4. **Make Electrical Connections:** Connect the fixture's wires to your household electrical wires using wire nuts. Typically, connect the black fixture wire to the black (live) household wire, the white fixture wire to the white (neutral) household wire, and the bare copper or green fixture wire to the green or bare copper (ground) household wire. Ensure all connections are secure.
5. **Secure Canopy:** Carefully push the wired canopy up to the ceiling, ensuring all wires are tucked inside the junction box. Secure the canopy to the mounting bracket with the provided screws.
6. **Install Bulb:** Screw an E26 or E27 base bulb (max 60W, not included) into the socket within the glass shade. Do not overtighten.
7. **Restore Power:** Once installation is complete, restore power at the circuit breaker.



Image 3: Two pendant lights installed in a modern dining or bar area, demonstrating their aesthetic integration into a contemporary space.

## 6. OPERATING INSTRUCTIONS

---

Once installed and powered, the pendant light operates via your standard wall switch. Simply toggle the switch to turn the light on or off.



Image 4: A detailed close-up of the white resin bird accent, highlighting its intricate design and texture.

## 7. MAINTENANCE

- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth to wipe the fixture. For the glass shade, a slightly damp cloth with a mild glass cleaner can be used, then dry thoroughly. Avoid abrasive cleaners or solvents that may damage the finish.
- **Bulb Replacement:** Disconnect power before replacing the bulb. Allow the old bulb to cool completely. Unscrew the old bulb and screw in a new E26 or E27 base bulb (max 60W). Do not exceed the maximum wattage.
- **Inspection:** Periodically inspect the wiring and connections for any signs of wear or damage. If any issues are found, disconnect power and consult a qualified electrician.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Light does not turn on	<ol style="list-style-type: none"> <li>1. Power is off</li> <li>2. Loose wire connection</li> <li>3. Faulty bulb</li> <li>4. Faulty wall switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Check circuit breaker and wall switch.</li> <li>2. Disconnect power and check wiring connections.</li> <li>3. Replace bulb with a new one.</li> <li>4. Consult an electrician to check the switch.</li> </ol>
Light flickers	<ol style="list-style-type: none"> <li>1. Loose bulb</li> <li>2. Loose wire connection</li> <li>3. Incompatible dimmer switch (if applicable)</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten bulb.</li> <li>2. Disconnect power and check wiring connections.</li> <li>3. Ensure dimmer switch is compatible with the bulb type.</li> </ol>
Humming noise from fixture	<ol style="list-style-type: none"> <li>1. Incompatible bulb or dimmer switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Try a different bulb or ensure dimmer switch is compatible with the bulb type.</li> </ol>

## 9. WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. Please refer to your purchase documentation or contact the seller/manufacturer directly for warranty terms and conditions.

## 10. SUPPORT

If you have any questions, require assistance with installation, or encounter issues not covered in this manual, please contact the seller or manufacturer. You can typically find contact information on your purchase receipt or the product listing page.

For general inquiries, you may reach out via email or through the platform's question and answer feature. Responses are typically provided within 24 hours.