



[Manuals.plus](#) /

> [WONDER](#) /

> Wonder WC185600FNF No Frost Combi Refrigerator User Manual

WONDER WC185600FNF

Wonder WC185600FNF No Frost Combi Refrigerator User Manual

Model: WC185600FNF

1. INTRODUCTION

Thank you for choosing the Wonder WC185600FNF No Frost Combi Refrigerator. This appliance is designed to provide efficient and reliable food preservation. Please read this manual carefully before installation, operation, and maintenance to ensure proper use and maximize the lifespan of your refrigerator.



Figure 1.1: Exterior view of the Wonder WC185600FNF Combi Refrigerator.



Figure 1.2: Interior view showing the refrigerator and freezer compartments with shelves.

2. SAFETY INFORMATION

For your safety and to ensure correct operation, please read the following safety precautions carefully before using the appliance.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded power outlet. Do not use extension cords or multiple socket adapters. Disconnect the power plug before cleaning or maintenance.
- **Ventilation:** Maintain adequate ventilation around the refrigerator to prevent overheating. Do not block any ventilation openings.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or

mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- **Disposal:** When disposing of the appliance, do so only at an authorized waste disposal center. Ensure the refrigerant circuit is not damaged.

3. SETUP

3.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the refrigerator for any damage during transit. Keep packaging materials out of reach of children.

3.2 Placement

Place the refrigerator on a firm, level surface. Ensure there is sufficient space around the appliance for proper air circulation. A minimum of 10 cm (4 inches) should be left at the back and sides, and 30 cm (12 inches) above the unit. Avoid direct sunlight or heat sources.

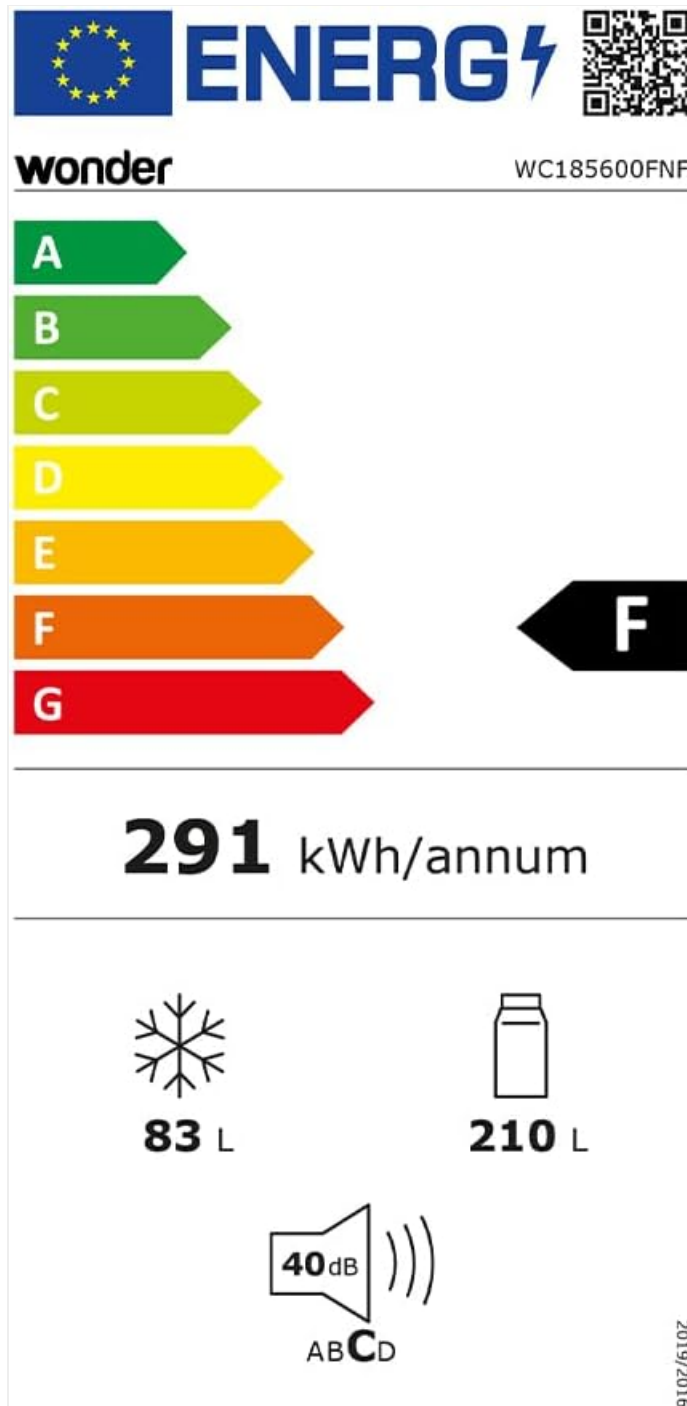


Figure 3.1: Dimensions of the refrigerator (185 cm height, 60 cm width, 60 cm depth) for proper placement.

3.3 Door Reversal

The doors of this refrigerator are reversible, allowing them to open from either the left or right side. If you wish to change the door opening direction, please refer to the detailed instructions provided in the separate door reversal kit or consult a qualified technician. This procedure involves removing and reattaching hinges and door stops.

3.4 First Use

1. Before plugging in, clean the interior of the refrigerator with a damp cloth and mild detergent. Dry thoroughly.
2. Plug the appliance into a grounded power outlet.
3. Allow the refrigerator to operate empty for at least 2-3 hours to reach its optimal temperature before storing food.
4. Adjust the temperature control knob to your desired setting (refer to Section 4.1).

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator features a manual temperature control system. The control knob is typically located inside the refrigerator compartment. Turn the knob to adjust the cooling intensity. Higher numbers usually indicate colder temperatures. Start with a medium setting and adjust as needed based on ambient temperature and food load.

4.2 No Frost Technology

This refrigerator is equipped with No Frost technology in both the refrigerator and freezer compartments. This system prevents ice build-up, eliminating the need for manual defrosting and ensuring consistent cooling performance. Air circulation within the compartments removes moisture, keeping food fresher for longer.

4.3 Multi Air Flow System

The Multi Air Flow system ensures even distribution of cold air throughout the refrigerator compartment. This helps maintain a stable temperature, reducing temperature fluctuations and preserving food quality.

4.4 LED Interior Lighting

The interior of the refrigerator is illuminated with energy-efficient LED lighting, providing clear visibility of your stored items.

4.5 Food Storage Guidelines

- **Refrigerator Compartment:** Store fresh foods such as fruits, vegetables, dairy products, and cooked meals. Ensure food is covered to prevent drying out and odor transfer.
- **Freezer Compartment:** Ideal for long-term storage of frozen foods. Do not place hot food directly into the freezer.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain hygiene and efficiency.

- **Interior:** Disconnect the power. Clean the interior with a solution of warm water and mild detergent. Rinse with clean water and dry thoroughly. Do not use abrasive cleaners or solvents.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild detergent.
- **Door Seals:** Clean door seals regularly to ensure a tight seal. A dirty or damaged seal can lead to inefficient operation.

5.2 Automatic Defrosting

The No Frost system automatically defrosts the evaporator. Any water from defrosting is collected in a tray above the compressor and evaporates. Ensure the drain hole is not blocked to allow proper water flow.

5.3 Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain the internal temperature for as long as possible. Avoid opening the doors unnecessarily.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Refrigerator not cooling	Power supply issue; Temperature setting too high; Door not closed properly; Overloaded with food.	Check power plug and circuit breaker; Adjust temperature control; Ensure door is fully closed; Reduce food load.
Unusual noises	Appliance not level; Items inside rattling; Compressor noise (normal).	Adjust leveling feet; Rearrange items; Compressor noise is normal during operation.
Water on floor/inside	Blocked drain hole; Door left open.	Clear the drain hole; Ensure door is closed properly.
Door not closing properly	Door seals dirty or damaged; Appliance not level; Obstruction.	Clean or replace door seals; Level the appliance; Remove any obstructions.

7. SPECIFICATIONS

Detailed technical specifications for the Wonder WC185600FNF Combi Refrigerator:

Feature	Specification
Model Number	WC185600FNF
Dimensions (H x W x D)	185 x 60 x 60 cm
Total Capacity	293 Liters
Fresh Food Capacity	210 Liters
Freezer Capacity	83 Liters
Energy Efficiency Class	F
Annual Energy Consumption	291 kWh/annum
Noise Level	40 dB
Defrost System	No Frost (Refrigerator & Freezer)
Refrigerant	R600a
Voltage	220 Volts
Number of Doors	2
Door Orientation	Reversible
Adjustable Temperature Control	Yes
Included Components	Refrigerator, Instruction Manual

Ficha de información del producto				condicio- nes de con- servación con- templadas en el anexo IV, cuadro 3.	
REGLAMENTO DELEGADO (UE) 2019/2016 DE LA COMISIÓN en lo relativo al etiquetado energético de los aparatos de refrigeración domésticos					
Nombre o marca comercial del proveedor: WONDER					
Dirección del proveedor: Wonder, Avd. del Este 34, 30100 Murcia, ES					
Identificador del modelo: WC185600FNF					
Tipo de aparato de refrigeración:					
Aparato de bajo nivel de ruido:	No	Tipo de diseño:	De libre instalación		
Armarios para la conservación de vinos:	No	Otros aparatos de refrigeración:	No		
Parámetros generales del producto:					
Parámetro	Valor	Parámetro	Valor		
Dimensiones totales (milímetros)	Altura	Volumen total (dm ³ o l)	293		
	Anchura				
	Profundidad				
IEE	125	Clase de eficiencia energética	F		
Ruido acústico aéreo emitido [dB(A) re 1 pW]	40	Clase de ruido acústico aéreo emitido	C		
Consumo de energía anual (kWh/a)	291	Clase climática:	templada, tropical		
Temperatura ambiente mínima (°C) en la que puede funcionar el aparato de refrigeración	16	Temperatura ambiente máxima (°C) en la que puede funcionar el aparato de refrigeración	38		
Ajuste de invierno	No				
Parámetros de los compartimentos:					
Parámetros y valores de los compartimentos					
Tipo de compartimento	Volumen del compartimento (dm ³ o l)	Ajuste de temperatura recomendado para la conservación optimizada de los alimentos (°C). Estos ajustes no contradirán las	Capacidad de congelación (kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)	
Despensa	No				-
Conservación de vinos	No				-
Compartimento bodega	No				-
Alimentos frescos	Sí		210,0	4	-
Helador	No				-
0 estrellas o fabricación de hielo	No				-
1 estrella	No				-
2 estrellas	No				-
3 estrellas	No				-
4 estrellas	Sí		83,0	-18	3,8
Sección 2 estrellas	No				-
Compartimento de temperatura variable	-				-
En compartimentos de 4 estrellas					
Capacidad de congelación rápida				No	
Parámetros de las fuentes luminosas:					
Tipo de fuente luminosa				-	
Clase de eficiencia energética				-	
Duración mínima de la garantía ofrecida por el fabricante: 36 meses					
Información adicional:					
Enlace del sitio web del fabricante, en el que se encuentra la información contemplada en el punto 4, letra a), del anexo del Reglamento (UE) 2019/2019: https://wonderelectro.es/					

Página 1 / 3

Página 2 / 3

Figure 7.1: Energy label for the Wonder WC185600FNF, showing efficiency class F and other key metrics. For more detailed information, please refer to the EPREL database: <https://eprel.ec.europa.eu/qr/1437994>

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Wonder refrigerator comes with a three-year manufacturer's warranty. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, improper installation, or unauthorized repairs.

8.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact your retailer or the authorized Wonder service center. Refer to your purchase documentation for specific contact details.