



[Manuals.plus](#) /

› [Bellemave](#) /

› Bellemave Twin Over Twin Bunk Bed with Trundle and Storage Staircase Instruction Manual

Bellemave AGUO-LT000068AAK-11.16

Bellemave Twin Over Twin Bunk Bed with Trundle and Storage Staircase Instruction Manual

Model: AGUO-LT000068AAK-11.16

INTRODUCTION

Thank you for choosing the Bellemave Twin Over Twin Bunk Bed with Trundle and Storage Staircase. This manual provides essential information for the safe assembly, operation, and maintenance of your new bunk bed. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION AND WARNINGS

Your safety and the safety of others are paramount. Please adhere to all warnings and instructions to prevent injury or damage.

- Always follow the assembly instructions carefully to ensure stability and prevent accidents.
- Do not exceed the weight limit of **175 lbs** for the upper bed.
- Do not exceed the weight limit of **275 lbs** for the bottom bed.
- Do not exceed the weight limit of **175 lbs** for the trundle bed.
- Be cautious during assembly and use to avoid injury, as the product has potential pinch points and sharp edges.
- Ensure all connections are securely tightened before use and check periodically.
- The upper bunk is not suitable for children under six years of age.
- Use only mattresses that are 6-8 inches thick for both upper and lower bunks to ensure proper guardrail height.
- Always use the guardrails on the upper bunk.

PRODUCT DIMENSIONS

Refer to the diagram below for detailed product dimensions.



Bunk Bed with Trundle

Four storage drawers



Image: Detailed dimensions of the Bellemave Twin Over Twin Bunk Bed, including length, width, and height of the main bed, trundle, and staircase with drawers.

Overall Dimensions: 97.2"L x 42.4"W x 65.7"H

Upper Bunk Weight Capacity: 175 lbs

Bottom Bunk Weight Capacity: 275 lbs

Trundle Bed Weight Capacity: 175 lbs

Recommended Mattress Thickness: 6-8 inches for all beds

SETUP AND ASSEMBLY

Estimated assembly time: 1.5 hours. All necessary tools are included. It is recommended to assemble with two people.

Assembly Steps:

1. **Unpack and Identify Components:** Carefully unpack all boxes and lay out all parts. Verify that all components and hardware are present according to the parts list (not provided in this manual, refer to your package insert).
2. **Assemble Main Bed Frame:** Attach legs with screws. Tighten using the provided tool. Connect headboard to side rails using bolts. Secure footboard.
3. **Install Slats:** Place slats across the main bed frames (upper and lower bunks) and secure them according to the instructions.
4. **Assemble Trundle Bed:** Assemble the trundle bed frame and attach it to the main frame as instructed. Ensure wheels are properly installed for smooth operation.
5. **Install Guardrails and Staircase:** Install the safety guardrails on the upper bunk. Assemble and attach the staircase unit to the bunk bed.
6. **Attach Storage Drawers:** Insert and attach the four storage drawers into the staircase unit.
7. **Final Check:** Ensure all bolts, screws, and connections are securely tightened. Do not overtighten.



Image: Close-up view of the integrated staircase with four storage drawers pulled open, demonstrating the storage capacity.



Image: An angled view of the bunk bed with the trundle bed fully extended, revealing the wooden slats for mattress support.

OPERATING INSTRUCTIONS

Using the Bunk Beds:

- Ensure mattresses are properly sized (Twin) and within the recommended thickness of 6-8 inches.
- Always use the staircase for climbing to and from the upper bunk. Do not use other parts of the bed as a ladder.
- The upper bunk is designed for one occupant at a time, not for play.

Using the Trundle Bed:

The trundle bed provides an additional sleeping surface, ideal for guests.

- To extend the trundle, gently pull the front panel outwards from under the lower bunk. The wheels will allow it to slide smoothly.
- To retract, push the trundle back under the lower bunk until it is fully nested.



Image: A diagram illustrating the pull-out trundle design, showing how it extends from beneath the lower bunk to provide extra sleeping space.

Using the Storage Drawers:

The staircase features four integrated drawers for convenient storage.

- Pull the drawer handles to open. Push firmly to close.
- Do not overload drawers to ensure smooth operation and prevent damage.

MAINTENANCE

Proper care will extend the life of your Bellemave bunk bed.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Tighten Hardware:** Periodically check and tighten all bolts and screws to ensure the bed remains stable and secure. Do not overtighten.
- **Avoid Moisture:** Protect the wood from excessive moisture and direct sunlight to prevent warping or fading.
- **Weight Distribution:** Distribute weight evenly on the beds and in the drawers.

TROUBLESHOOTING

If you encounter any issues, refer to the following common solutions:

- **Wobbling Bed:** Ensure all bolts and screws are securely tightened. Check that the bed is on a level surface.
- **Sticking Drawers:** Check for any obstructions in the drawer slides. Ensure drawers are not overloaded. Verify that the drawer slides are properly aligned and installed.
- **Squeaking Noises:** Tighten all hardware. If squeaking persists, apply a small amount of lubricant (e.g., silicone spray) to metal-on-metal contact points, avoiding wood surfaces.
- **Missing Parts:** If you find any parts missing during assembly, please contact customer support immediately.

SPECIFICATIONS

Brand	Bellemave
-------	-----------

Model Number	AGUO-LT000068AAK-11.16
Product Dimensions (L x W x H)	97.2" x 42.4" x 65.7"
Material	Engineered Wood, Pine Wood
Color	White
Upper Bunk Weight Capacity	175 lbs
Bottom Bunk Weight Capacity	275 lbs
Trundle Bed Weight Capacity	175 lbs
Required Assembly	Yes
Storage Options	4 Drawers in Staircase

WARRANTY INFORMATION

This Bellemave product is backed by a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. Please retain your proof of purchase for warranty claims. For any issues or concerns, refer to the customer support section.

CUSTOMER SUPPORT

For assistance with assembly, missing parts, or any other product-related inquiries, please contact Bellemave customer service. Contact information can typically be found on the packaging, your purchase receipt, or the official Bellemave website.

Online Support: Visit the official Bellemave website for FAQs and support resources.

Email Support: Refer to your purchase documentation for the customer service email address.

Phone Support: Refer to your purchase documentation for the customer service phone number.