

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY STV106 Remote Control User Manual

ECONTROLLY STV106

ECONTROLLY STV106 Remote Control User Manual

Model: STV106

PRODUCT OVERVIEW

The ECONTROLLY STV106 is a replacement remote control designed for various Sharp Soundbar models, including HT-SBW110, HT-SB110, HT-SB115, and 92LRC105001372. This remote provides essential functions for controlling your soundbar's audio and input settings.





Image: Front view of the STV106 remote control, displaying its ergonomic design and button layout. Key buttons include Power, Optical, Mute, AUX, BT, HDMI ARC, Volume Up/Down, Play/Pause/Pair, Skip Back, Skip Forward, News, Movie, and Music modes.

PACKAGE CONTENTS



- 1 x ECONTROLLY STV106 IR Remote Control
- *Note: Instructions and batteries are not included in the package.*

SETUP

Battery Installation

The STV106 remote control requires one CR2025 coin cell battery for operation. Follow these steps to install the battery:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert one CR2025 battery, ensuring the positive (+) side faces upwards.
4. Close the battery cover by sliding it back into place until it clicks securely.

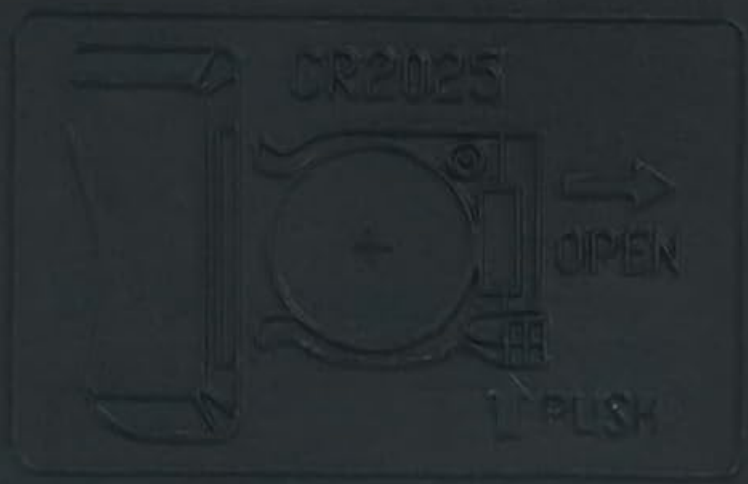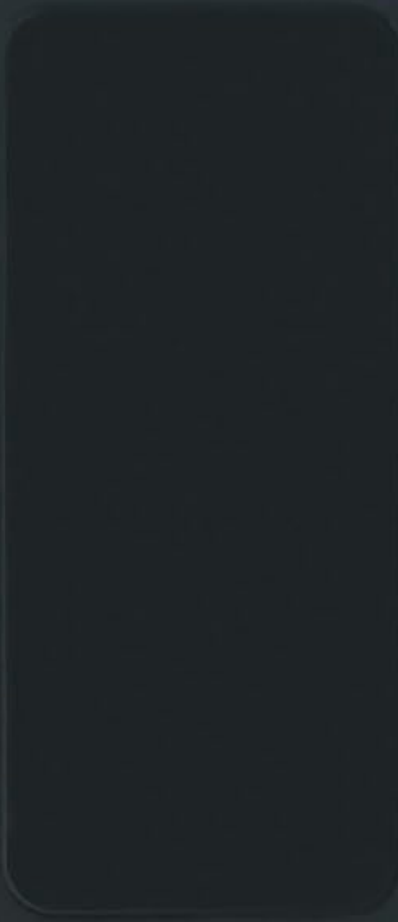

RELEASE



Image: Rear view of the STV106 remote control, showing the battery compartment. The compartment indicates the use of a CR2025 coin cell battery, with instructions for opening and releasing.

Initial Connection

This remote control is designed to work directly with compatible Sharp Soundbar models (HT-SBW110, HT-SB110, HT-SB115, 92LRC105001372) without requiring any programming. Once the battery is installed, point the remote towards your soundbar and begin operation.

OPERATING INSTRUCTIONS

The STV106 remote control provides comprehensive control over your Sharp Soundbar. Below is a guide to the primary functions of each button:



Image: Angled view of the STV106 remote control, providing a clear perspective of its button arrangement and overall form factor.

Button	Function
Power ()	Turns the soundbar On or Off.
OPTICAL	Selects the Optical input source.
MUTE	Mutes or unmutes the soundbar audio.
AUX	Selects the Auxiliary input source.
BT	Selects the Bluetooth input source. Press and hold to initiate Bluetooth pairing mode.
HDMI ARC	Selects the HDMI ARC input source.
VOL+	Increases the volume level.

Button	Function
VOL-	Decreases the volume level.
(Skip Back)	Skips to the previous track (in Bluetooth mode).
/PAIR (Play/Pause/Pair)	Plays or pauses audio. Also used for Bluetooth pairing.
(Skip Forward)	Skips to the next track (in Bluetooth mode).
NEWS	Activates the News sound mode, optimizing audio for spoken content.
MOVIE	Activates the Movie sound mode, enhancing cinematic audio experiences.
MUSIC	Activates the Music sound mode, optimizing audio for music playback.



Image: Side-angled view of the STV106 remote control, illustrating its slim profile and the tactile nature of its buttons.

MAINTENANCE

Cleaning the Remote

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace the CR2025 coin cell battery when the remote's response becomes sluggish or it stops functioning. Refer to the "Battery Installation" section for detailed steps.

Important: Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed battery.	Replace battery with a new CR2025 coin cell, ensuring correct polarity.
Remote not responding.	Obstruction between remote and soundbar.	Ensure a clear line of sight between the remote's IR emitter and the soundbar's IR receiver.
Remote not responding.	Soundbar is off or unplugged.	Verify the soundbar is powered on and properly connected to a power source.
Limited functionality.	Remote is not compatible with your specific soundbar model.	Confirm your Sharp Soundbar model (HT-SBW110, HT-SB110, HT-SB115, 92LRC105001372) is listed as compatible.

SPECIFICATIONS

- **Model:** STV106
- **Brand:** ECONTROLLY
- **Compatible Devices:** Sharp HT-SBW110, HT-SB110, HT-SB115, 92LRC105001372 Soundbars
- **Power Source:** 1 x CR2025 Coin Cell Battery (*Note: Product description states "13pcs AA batteries" which is a likely typo. The image of the battery compartment clearly shows CR2025.*)
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 2.3 ounces
- **Manufacturer:** ECONTROLLY
- **Country of Origin:** China

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller's policy on the platform where the purchase was made. Typically, replacement parts may carry a limited warranty against manufacturing defects.

For support or inquiries regarding this remote control, please contact the seller directly through the purchase platform. They can provide assistance with product functionality, compatibility, or any issues you may encounter.

Note: Instructions and batteries are not included in the package.

© 2023 ECONTROLLY. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question