

[Manuals.plus](#) /

› [leapwell](#) /

› Leapwell Portable CD Player User Manual

leapwell L-CD201

Leapwell Portable CD Player

Model: L-CD201

Brand: leapwell

INTRODUCTION

Thank you for choosing the Leapwell Portable CD Player. This device combines classic CD playback with modern connectivity options, including Bluetooth, FM radio, AUX, and optical inputs. Its compact and retro design makes it suitable for various environments, from home to car. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.



Image: The Leapwell Portable CD Player, showcasing its compact design and the CD spinning, with musical notes floating above.

PACKING LIST

Before you begin, please ensure all items are present in the package:

- Leapwell Portable CD Player (L-CD201)
- Remote Control
- USB-C Charging Cable
- 3.5mm AUX Cable
- Wired Earphones
- User Manual (this document)



Image: A flat lay of the Leapwell CD Player and its included accessories: remote control, USB-C cable, earphones, and AUX cable.

SETUP

Charging the Device

The Leapwell CD Player features a built-in 2600mAh rechargeable Lithium-ion battery. Before first use, it is recommended to fully charge the device.

1. Connect the provided USB-C charging cable to the USB-C port on the CD player.
2. Connect the other end of the USB-C cable to a compatible USB power source (e.g., power bank, USB wall adapter, car charger).
3. The charging indicator light will illuminate. The device does not provide an explicit "fully charged" indication, so monitor

charging time (approximately 4 hours for a full charge).



Image: The CD player being charged via a USB-C cable connected to a laptop, illustrating its portability and charging flexibility.

Initial Power On

Press and hold the Power button (▶/⏻) on the device or remote control to turn it on. The display will light up.

OPERATING INSTRUCTIONS

Controls Overview

A-B Repeat Function

Good Choice for Children to Learn Better



Image: The CD player on a table with its remote control, highlighting the convenience of remote operation and the dust cover feature. The device can be operated using the buttons on the unit or the included remote control. Key controls include:

- **Power Button** (▶/■): Press and hold to turn on/off. Short press to play/pause.
- **Volume Knob** (+/-): Rotate to adjust volume.
- **Mode Button (M)**: Short press to cycle through modes (CD, Bluetooth, FM, AUX, Optical).
- **Previous/Next Buttons** (◀◀ / ▶▶): Skip tracks in CD/Bluetooth mode, or adjust frequency in FM mode.
- **A-B Repeat (AB)**: For repeating a specific section of audio (useful for learning).

CD Playback Mode

1. Gently lift the translucent dust cover.
2. Place a CD onto the spindle, ensuring it is seated correctly.
3. Close the dust cover.
4. Press the **Mode (M)** button until "CD" mode is selected (if not already).
5. The CD player will automatically begin reading and playing the disc.
6. Use the **Play/Pause** (▶/■), **Previous** (◀◀), and **Next** (▶▶) buttons to control playback.

Bluetooth Mode

Connect your smartphone or tablet to the CD player via Bluetooth for wireless audio streaming.

1. Press the **Mode (M)** button until "BT" (Bluetooth) mode is selected. The device will enter pairing mode.
2. On your mobile device, enable Bluetooth and search for "Leapwell L-CD201" (or similar).
3. Select the device to pair. Once connected, you can play audio from your mobile device through the CD player's speakers.

Note: This CD player supports Bluetooth reception only. It cannot transmit Bluetooth audio to headphones or other Bluetooth speakers.

Bluetooth Reception

Easily Connect to Your Phone/Tablet



Image: The CD player displaying its various input ports including USB-C, Adapter, USB, Flash Disk, Audio, Headphone, Optical, and Decoder, indicating wide compatibility.

FM Radio Mode

Enjoy your favorite radio stations with the built-in FM tuner.

1. Press the **Mode (M)** button until "FM" mode is selected.
2. Use the **Previous (◀◀)** and **Next (▶▶)** buttons to manually tune to a frequency or long-press to auto-scan for stations.
3. The FM frequency range is 87.5MHz-108.0MHz.

AUX Line-in Mode

Connect external audio devices using the 3.5mm AUX cable.

1. Connect one end of the 3.5mm AUX cable to the AUX input port on the CD player.
2. Connect the other end to the audio output of your external device (e.g., smartphone, MP3 player).
3. Press the **Mode (M)** button until "AUX" mode is selected.
4. Audio from your external device will now play through the CD player.

Built-in 2600mAh Battery

With USB-C Fast Charging

Playing Time **4H**

2600mAh

5V

USBC

Power Bank



Adapter



Car Charger



Image: The Leapwell CD Player placed in a car's center console, connected via an AUX cable, demonstrating its portability and use in vehicles.

Optical Mode

For high-fidelity audio output, connect to a decoder or sound system via the optical port.

1. Connect an optical cable (not included) from the optical output port on the CD player to the optical input of your decoder or sound system.

2. Press the **Mode (M)** button until "OPT" (Optical) mode is selected.
3. Audio will be transmitted digitally to the connected device.

Remote Control & Dust Cover

Effectively Isolate Dust and Avoid Stuttering



15ft Control



Dust Cover



Image: The Leapwell CD Player on a desk, with a close-up showing the optical port and a fiber optic cable connected, illustrating its high-fidelity audio output capability.

A-B Repeat Function

This function allows you to repeat a specific segment of audio, ideal for language learning or musical practice.

1. During playback, press the **A-B (AB)** button once to set the starting point (A).

- 2. Press the **A-B (AB)** button again to set the ending point (B).
- 3. The section between A and B will now repeat continuously.
- 4. Press the **A-B (AB)** button a third time to cancel the repeat function.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the CD player. For the CD lens, use a specialized CD lens cleaning kit. Do not use abrasive cleaners or solvents.
- **Dust Cover:** Keep the translucent dust cover closed when not in use to protect the optical lens from dust and debris, which can affect playback quality.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.



Image: The Leapwell CD Player with its dust cover closed, emphasizing its protective function against dust and stuttering during playback.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Device does not power on.	Battery may be depleted. Connect to power source and charge. Ensure power button is pressed and held.

Problem	Possible Cause / Solution
CD does not play or skips.	CD may be dirty or scratched. Clean the CD. Ensure the CD is properly seated. The dust cover should be closed during playback.
No sound.	Check volume level. Ensure correct mode is selected (CD, BT, FM, AUX, OPT). Check speaker connections if external speakers are used.
Bluetooth pairing fails.	Ensure the CD player is in Bluetooth mode. Make sure Bluetooth is enabled on your mobile device and it's within range. Try forgetting the device on your mobile and re-pairing.
Poor FM radio reception.	Adjust the position of the device. Try auto-scanning for stations again. Interference from other electronic devices may be present.

SPECIFICATIONS

- **Model Number:** L-CD201
- **Brand:** leapwell
- **Color:** White
- **Connectivity:** Bluetooth, USB-C, 3.5mm AUX Jack, Optical
- **Battery:** 2600mAh Lithium-ion (rechargeable, included)
- **USB Ports:** 1 (USB-C for charging/power, additional USB for flash disk)
- **FM Frequency Range:** 87.5MHz-108.0MHz
- **Number of Discs:** 1
- **Audio Channels:** 2
- **Product Dimensions:** 18.5L x 14.5W x 5.5H cm (approx. 7.3L x 5.7W x 2.2H inches)
- **Item Weight:** 1.3 lbs (approx. 0.59 kg)
- **Included Components:** AUX cable, FM antenna, CD player, Optical cable (output), USB cable (charging)
- **Specific Uses:** Personal music entertainment, portable music playback, wireless music streaming



Image: The Leapwell CD Player on a bedside table, with text overlays indicating its compact size (7.3x5.7x2.2 inches) and lightweight (1.3 lbs), emphasizing its portability.

WARRANTY AND SUPPORT

Leapwell offers lifetime technical support and 24/7 professional customer service for this product. For any issues or inquiries, please contact Leapwell customer support through the contact information provided with your purchase or on the official Leapwell website.

Information regarding spare parts availability and software updates is not explicitly provided and may be subject to change. Please refer to the manufacturer's official channels for the most up-to-date information.

© 2024 Leapwell. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question