

[Manuals.plus](#) /

> [SZFIXEZ](#) /

> SZFIXEZ Electric Spin Scrubber SXT-160 Instruction Manual

SZFIXEZ SXT-160

SZFIXEZ

SZFIXEZ Electric Spin Scrubber

MODEL: SXT-160 INSTRUCTION MANUAL

Your guide to efficient and effortless cleaning.

Introduction

Thank you for choosing the SZFIXEZ Electric Spin Scrubber SXT-160. This powerful and versatile cleaning tool is designed to make your household cleaning tasks easier and more efficient. This manual provides essential information on how to safely and effectively use, maintain, and troubleshoot your new electric spin scrubber. Please read this manual thoroughly before first use and retain it for future reference.

Safety Information

- Always ensure the charging port is completely dry before connecting the charging cable.
- Do not immerse the entire main body of the scrubber in water. The unit is IPX5 waterproof, meaning it is resistant to water jets, but not full submersion.
- Keep the device out of reach of children.
- Do not use the scrubber for purposes other than its intended cleaning function.
- Avoid using abrasive or corrosive cleaning agents with the scrubber, as they may damage the device or brush heads.
- If the device shows any signs of damage or malfunction, discontinue use immediately and contact customer support.

Package Contents

Please check the package to ensure all items are present:

- 1 x SZFIXEZ Electric Spin Scrubber Main Unit
- 2 x Extension Rods (for adjustable length)
- 8 x Interchangeable Brush Heads:
 - Sponge Brush: For efficient cleaning of siding, glass, and cars.
 - Small Mop Brush: Ideal for scrubbing glass tiles and similar surfaces.
 - Fiber Brush: Suitable for kitchen cleaning tasks.
 - Large Bristle Brush: Designed for cleaning large flat surface areas.
 - Anti-Wool Plate Brush: Recommended for scrubbing the interior of cars.
 - Pointed Brush: Excellent for cleaning tile grout and hard-to-reach corners.
 - Small Hair Brush: For cleaning small flat surfaces.
 - Wide Range Brush: General purpose brush for bathroom cleaning.
- 1 x USB Type-C Charging Cable
- 1 x Storage Bag
- Wall Mounts (for tidy storage)



Image: The SZFIXEZ Electric Spin Scrubber main unit, two extension rods, eight different brush heads, USB-C charging cable, storage bag, and wall mounts, all neatly displayed.

Product Overview & Key Features

Two-in-One Long and Short Design

The SZFIXEZ Electric Spin Scrubber offers versatile cleaning with its adjustable handle. Use the short handle for close-range cleaning tasks like sinks and countertops, or extend it up to 40 inches for reaching floors, windows, and bathtubs without bending or kneeling. The ergonomic grip ensures comfortable use.

TWO-IN-ONE LONG AND SHORT DESIGN

Clean from ceiling to floor

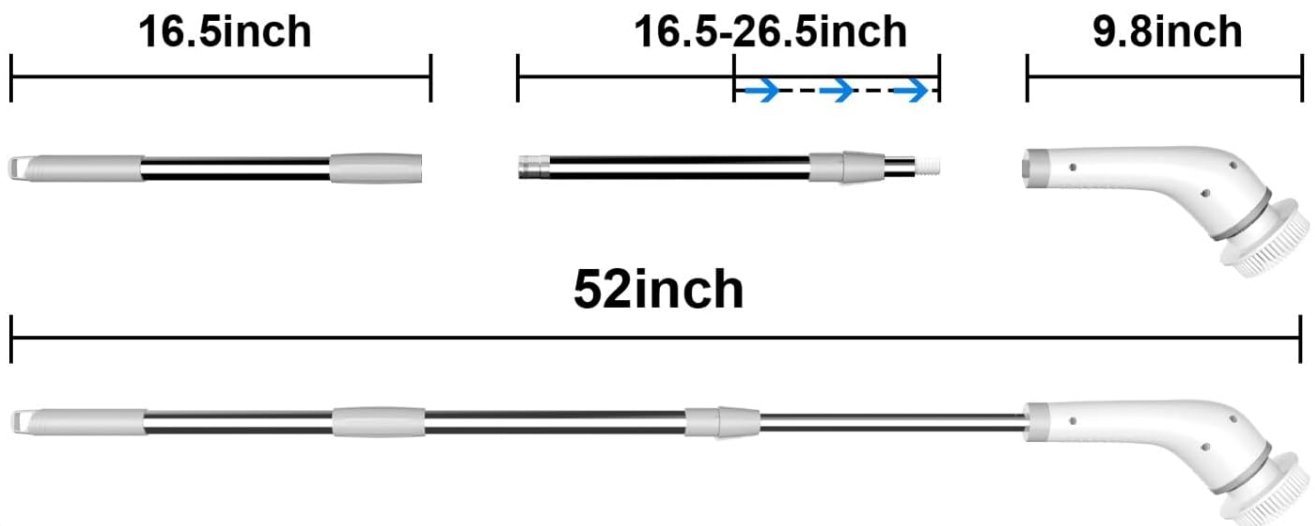


Image: Demonstrates the scrubber being used in a short, handheld configuration for a sink, and a long, extended configuration for floor cleaning, highlighting its adjustable length.

Newly Upgraded 2-Speed High Power

This scrubber features two powerful speed modes to tackle various cleaning challenges. The low-speed mode operates at 400 revolutions per minute (rpm), while the high-speed mode reaches 450 rpm, providing increased power for deeper cleaning.

NEWLY UPGRADED 2ND GEAR SPEED

Make cleaning deeper

**LOW
SPEED MODE**

400_{prm}

**Press the key
once**



**HIGH
SPEED MODE**

450_{prm}

**Press the key
twice**

Image: Illustrates the two speed modes: 'LOW Speed Mode' at 400rpm (press once) and 'HIGH Speed Mode' at 450rpm (press twice), with visual representations of the spinning motion.

Power Display & Ultra-High Battery Life

The scrubber is equipped with a power display, allowing you to monitor the battery level and know when charging is needed. A full charge takes approximately 3 hours and provides about 90 minutes of continuous use, preventing unexpected power interruptions during cleaning.

COMMON TYPE-C CHARGING PORT

3h Fully Recharged

1.5h Runtime



Image: Shows the electric spin scrubber connected to a power outlet via a Type-C charging cable, with an illuminated power display indicating battery status.

IPX5 Waterproof Cleaning Brush

The main unit of the scrubber is designed with an IPX5 waterproof rating, making it resistant to water splashes and jets. This allows for safe use in wet environments like bathrooms and kitchens. However, it is crucial not to submerge the entire body in water.

IPX5 WATERPROOF CLEANING BRUSH



Note: Please do not soak the entire body in water and keep it dry after use



Image: Illustrates the IPX5 waterproof capability, showing the brush head submerged in water with a checkmark, and the main body above water with a cross mark, emphasizing not to submerge the entire unit.

Setup

1. Initial Charging

Before first use, it is recommended to fully charge the electric spin scrubber. Long-term transportation may cause the battery to discharge. Connect the provided USB Type-C charging cable to the scrubber's charging port and plug it into a suitable USB power adapter (not included). The power display will indicate charging status. A full charge takes approximately 3 hours.

Charging Tips

Use TYPE-C charging head, not C-C charging head. Charge after the battery is exhausted. The best output power of the charging head is 2A. The correct charging method can extend the service life of the product.



Image: Provides charging tips, advising to use a TYPE-C charging head (not C-C), charge after battery exhaustion, and use a 2A output power for optimal charging and extended product life.

2. Assembling the Handle

1. For short, handheld use, simply attach the desired brush head directly to the main unit.
2. For extended reach, connect one or both extension rods to the main unit. The length of one extension rod is adjustable, allowing you to customize the overall length up to 40 inches. Ensure the connections are secure.

3. Attaching Brush Heads

Select the appropriate brush head for your cleaning task. Align the brush head with the connection point on the main unit or the end of the extension rod. Apply vertical force to firmly attach the brush head until it clicks into place. Ensure it is securely fastened before operation.

Operating Instructions

1. Powering On/Off and Speed Selection

- To turn on the scrubber at the low-speed mode (400 rpm), press the power button once.
- To switch to the high-speed mode (450 rpm), press the power button a second time.
- To turn off the scrubber, press the power button a third time.

2. Cleaning Techniques

- Apply a small amount of cleaning solution directly to the surface to be cleaned or to the brush head.
- Gently press the rotating brush against the surface. Allow the scrubber's rotation to do the work; excessive force is not necessary and may reduce efficiency or damage the unit.
- Move the scrubber slowly and steadily over the area, ensuring thorough coverage.
- For stubborn stains, allow the cleaning solution to soak for a few minutes before scrubbing, and consider using the higher speed setting.
- After cleaning, wipe the surface with a clean cloth or rinse with water as appropriate.

Maintenance

1. Cleaning the Scrubber

- After each use, detach the brush head and rinse it thoroughly under running water to remove dirt and debris.
- Wipe the main unit and extension rods with a damp cloth. Ensure the charging port is dry before storing.
- Do not use harsh chemicals or abrasive cleaners on the scrubber's body.

2. Brush Head Care (Deformation Recovery)

If a brush head becomes deformed due to use or storage, you can attempt to restore its shape:

- Soak the deformed brush head in hot water for 2-3 minutes. The bristles should gradually recover their original shape.
- If some deformation persists, you may gently manually straighten and adjust the bristles while they are still warm.

3. Storage

Store the SZFIXEZ Electric Spin Scrubber in a clean, dry place away from direct sunlight and extreme temperatures. Utilize the provided wall mounts for convenient and tidy storage, keeping your cleaning area organized.

EASY TO STORE AND KEEP TIDY



Image: Illustrates effective storage solutions, showing the extended scrubber hanging neatly on wall mounts and the various brush heads organized in a drawer.

Troubleshooting

Problem	Possible Cause	Solution
Scrubber does not turn on or stops suddenly.	Battery is low or depleted.	Check the power display. Recharge the battery fully (approx. 3 hours).
Brush head is deformed.	Prolonged use or improper storage.	Soak the brush head in hot water for 2-3 minutes to help it regain its shape. Manually adjust if necessary.

Problem	Possible Cause	Solution
Scrubber is not cleaning effectively.	Incorrect brush head used, insufficient cleaning solution, or low battery.	Ensure you are using the appropriate brush head for the surface. Apply adequate cleaning solution. Check battery level and recharge if needed. Try the higher speed setting.
Brush head is difficult to attach/detach.	Misalignment or debris in connection.	Ensure proper alignment and apply vertical force. Check for any obstructions in the connection area.

Specifications

- **Brand:** SZFIXEZ
- **Model Number:** SXT-160
- **Colour:** Grey
- **Product Dimensions (Extended):** Approximately 102.87 x 31.75 x 25.4 cm (40.4L x 12.4W x 9.9H Centimetres)
- **Item Weight:** 1.2 kg
- **Power/Wattage:** 20 Watt-hours (Max power up to 40W)
- **Material:** Plastic
- **Special Features:** Reusable, 2-Speed (400rpm/450rpm), Cordless, Telescopic Handle, Power Display
- **Battery Life:** Approximately 90 minutes continuous use (after full charge)
- **Charging Time:** Approximately 3 hours
- **Waterproof Rating:** IPX5
- **Charging Port:** USB Type-C

Warranty and Support

The SZFIXEZ Electric Spin Scrubber SXT-160 comes with a one-year quality guarantee. If you encounter any quality problems with your product within one year of purchase, please do not hesitate to contact us. Our customer support team is ready to assist you with any questions or concerns you may have.

For support, please refer to the seller's contact information on the product sales page or your purchase documentation.