

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [HOMCOM](#) /

> [HOMCOM DE800-177V90WT0431 Yogurt Maker Instruction Manual](#)

HOMCOM DE800-177V90WT0431

HOMCOM DE800-177V90WT0431 Yogurt Maker Instruction Manual

Model: DE800-177V90WT0431

INTRODUCTION

Thank you for purchasing the HOMCOM DE800-177V90WT0431 Yogurt Maker. This appliance is designed to help you prepare delicious and healthy homemade yogurt with ease. Featuring 7 individual glass jars, an adjustable thermostat, and a programmable timer, this yogurt maker ensures consistent results and low energy consumption. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.

PACKAGE CONTENTS

Please check the package contents upon unpacking. If any items are missing or damaged, contact your retailer.

- 1 x HOMCOM Yogurt Maker Main Unit
- 7 x Glass Jars (180ml each)
- 7 x Jar Lids
- 1 x Transparent Top Lid
- 1 x Instruction Manual



Image: The HOMCOM Yogurt Maker with its 7 glass jars, each with a capacity of 180ml, and a transparent top lid. This image illustrates the complete set of components included in the package.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your yogurt maker:

1. **Main Unit:** Stainless steel base housing the heating element and control panel.
2. **Control Panel:** Features an LED display for time and temperature, along with control buttons.
3. **Glass Jars:** Seven individual 180ml glass jars for preparing yogurt.
4. **Jar Lids:** Individual lids for each glass jar.

5. **Transparent Top Lid:** Covers all jars during the fermentation process.



Image: A close-up view of the HOMCOM Yogurt Maker's control panel, showing the LED display, temperature adjustment buttons (Temp), and timer adjustment buttons (Time), along with Set/View and Start/Cancel buttons. The display shows "08" for time, indicating 8 hours.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the glass jars, jar lids, and transparent top lid with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the yogurt maker on a stable, flat, and heat-resistant surface, away from direct sunlight or heat sources. Ensure adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet (220V-240V/50Hz-60Hz).



Image: The HOMCOM Yogurt Maker main unit, with its transparent top lid and several glass jars placed separately on a kitchen counter, illustrating the components ready for cleaning or assembly.

OPERATING INSTRUCTIONS

Making Yogurt

- 1. Prepare Ingredients:** Prepare your yogurt mixture (milk and starter culture) according to your recipe. Ensure the milk is at the correct temperature before adding the starter.
- 2. Fill Jars:** Pour the yogurt mixture evenly into the 7 clean glass jars. Do not overfill.
- 3. Place Jars:** Place the filled glass jars (without their individual lids) into the main unit.
- 4. Cover:** Place the transparent top lid over the main unit, ensuring it is properly seated.
- 5. Set Temperature:** Press the "Temp" button to adjust the fermentation temperature. The temperature is adjustable from 25°C to 50°C. Use the "+" and "-" buttons to set your desired temperature.
- 6. Set Timer:** Press the "Time" button to adjust the fermentation duration. The timer is adjustable from 1 to 48 hours. Use the "+" and "-" buttons to set your desired time.
- 7. Start Fermentation:** Press the "Start/Cancel" button to begin the fermentation process. The LED display will show the remaining time.
- 8. Completion:** Once the set time has elapsed, the yogurt maker will automatically shut off and emit an audible

signal.

9. **Cooling:** Carefully remove the transparent top lid and then the glass jars. Place the individual lids on the glass jars. Allow the yogurt to cool to room temperature, then refrigerate for at least 4 hours before serving.



Image: The HOMCOM Yogurt Maker on a wooden counter, filled with yogurt in its glass jars, covered by the transparent lid, indicating it is in operation or has just completed a cycle. Fresh fruits are visible nearby.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your yogurt maker.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Glass Jars and Lids:** Wash the glass jars and their individual lids with warm, soapy water. They are dishwasher safe. Rinse thoroughly and dry.
3. **Transparent Top Lid:** Wash the transparent top lid with warm, soapy water. Rinse and dry. It is not recommended for dishwasher use to prevent warping.
4. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or scouring pads. **Never immerse the main unit in water or any other liquid.**
5. **Storage:** Store the clean and dry yogurt maker in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Yogurt is too thin/liquid.	Insufficient fermentation time or low temperature. Insufficient starter culture. Milk type.	Increase fermentation time (e.g., 8-12 hours) or temperature (e.g., 42-45°C). Ensure fresh and active starter culture. Use whole milk or add milk powder for thicker yogurt.
Yogurt is too lumpy/curdled.	Over-fermentation or too high temperature.	Reduce fermentation time or temperature. Ensure milk was not too hot when adding starter.
Yogurt has an off-flavor.	Contamination, old milk, or poor quality starter.	Ensure all equipment is thoroughly clean. Use fresh milk and a high-quality, active starter.
Appliance does not turn on.	Not plugged in, power outage, or faulty outlet.	Check power cord connection. Test outlet with another appliance.

SPECIFICATIONS

Model Number: DE800-177V90WT0431

Brand: HOMCOM

Power: 20 Watts

Voltage: 220V-240V / 50Hz-60Hz

Material: Stainless Steel (base), Plastic (lid), Glass (jars)

Dimensions (L x W x H): 24 cm x 24 cm x 13 cm

Item Weight: 1.27 kg

Jar Capacity: 7 x 180 ml (Total 1.26 L)

Temperature Range: 25°C - 50°C

Timer Range: 1 - 48 hours

Color: White

Certifications: UKCA, CE-EMC, LVD, RoHS, Erp, BS1363, LFGB



Image: A diagram showing the dimensions of the HOMCOM Yogurt Maker, with a length and width of 24 cm and a height of 13 cm.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact the retailer where you purchased the HOMCOM Yogurt Maker. You may also visit the official HOMCOM website for further assistance.

Manufacturer: HOMCOM

Country of Origin: China