



[Manuals.plus](#) /

› [Nespresso](#) /

› Nespresso Inissia EN80.B Coffee Machine User Manual

Nespresso Inissia EN80.B

Nespresso Inissia EN80.B Coffee Machine User Manual

Model: **Inissia EN80.B** | Brand: **Nespresso**

PRODUCT OVERVIEW

The Nespresso Inissia EN80.B is a compact and user-friendly coffee machine designed for the Nespresso Original Line capsule system. It features a high-pressure pump (19 bar) to extract the full aroma and flavor from your coffee, a 0.7L removable water tank, and an automatic shut-off function for energy saving. This package includes 20 original Nespresso Florence Arpeggio capsules to get you started.



Image: The Nespresso Inissia EN80.B coffee machine in black, showcasing its compact design with a freshly brewed cup of coffee placed on the drip tray.

Key Features

- **High-Pressure Pump:** 19 bar pressure system for optimal coffee extraction.
- **Nespresso Original Line System:** Exclusively designed for Nespresso Original capsules.
- **Removable Water Tank:** 0.7 L capacity for easy refilling.
- **Eco Mode:** Automatic power-off after 9 minutes of inactivity to save energy.
- **Programmable Buttons:** Two programmable buttons for Espresso and Lungo coffee preparations.

- **Easy Capsule Insertion & Ejection:** Simple mechanism for capsule handling.
- **Compact Design:** Space-saving dimensions suitable for any kitchen.

SETUP

1. Unpacking the Machine

Carefully remove all components from the packaging. Ensure all parts are present: the coffee machine, water tank, drip tray, and the included capsule assortment.



Image: All components of the Nespresso Inissia EN80.B coffee machine laid out after unpacking, including the main unit, water tank,

drip tray, and accompanying documentation and capsules.

2. Initial Rinse

1. Fill the water tank with fresh drinking water.
 2. Place a container (at least 0.5L) under the coffee outlet.
 3. Press either the Espresso or Lungo button. The machine will start dispensing water. Repeat this process 2-3 times to clean the internal system.
 4. Discard the water from the container. Your machine is now ready for use.
-

OPERATING INSTRUCTIONS

1. Filling the Water Tank

Ensure the water tank is filled with fresh, cold drinking water before each use. The tank is located at the back of the machine and is easily removable for refilling.



Image: A side view of the Nespresso Inissia EN80.B, highlighting the transparent, removable water tank located at the rear of the machine.

2. Inserting a Capsule

1. Lift the lever at the top of the machine completely.
2. Insert a Nespresso Original capsule into the capsule slot.
3. Close the lever firmly. The capsule is now correctly positioned.



Image: A top-down view of the Nespresso Inissia EN80.B, showing the capsule insertion mechanism with a gold Nespresso capsule placed inside.

3. Brewing Coffee

1. Place a cup under the coffee outlet. For larger cups, the drip tray can be folded up or removed.
2. Press the desired button:
 - **Espresso Button:** For a short coffee (approx. 40 ml).
 - **Lungo Button:** For a longer coffee (approx. 110 ml).
3. The machine will automatically stop when the programmed volume is reached.
4. After brewing, lift the lever to eject the used capsule into the integrated capsule container.



Image: The Nespresso Inissia EN80.B actively brewing coffee into a small glass cup, demonstrating the machine in operation.

MAINTENANCE

1. Daily Cleaning

- Empty and rinse the drip tray and used capsule container daily.
- Wipe the machine's exterior with a damp cloth. Do not use abrasive cleaning agents or immerse the machine in water.
- Rinse the water tank with fresh water regularly.

2. Descaling

Descaling is crucial for maintaining your machine's performance and ensuring optimal coffee taste. The frequency depends on water hardness and usage. Nespresso recommends descaling at least once a year, or more frequently in areas with hard water.

1. Refer to the full descaling instructions provided in the separate Nespresso descaling kit or on the official Nespresso website.
2. Always use the Nespresso descaling solution.
3. Follow the steps precisely to ensure proper descaling and avoid damage to the machine.

TROUBLESHOOTING

If you encounter any issues with your Nespresso Inissia machine, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
No coffee flow or very slow flow.	Water tank empty; machine needs descaling; capsule blocked.	Fill water tank; perform descaling procedure; check capsule insertion or try a new capsule.
Coffee is not hot enough.	Machine not preheated; cold cup.	Allow machine to preheat (lights stable); preheat cup with hot water.
Water leaking from machine.	Water tank not correctly positioned; damaged water tank.	Ensure water tank is firmly seated; contact Nespresso support if tank is damaged.
Machine does not turn on.	Not plugged in; power outlet issue.	Check power cord connection; try a different power outlet.

SPECIFICATIONS

Feature	Detail
Brand	Nespresso
Model Number	Inissia EN80.B
Color	Black
Product Dimensions (L x W x H)	32 x 12 x 23 cm (12.6 x 4.7 x 9.1 inches)
Item Weight	3.17 Kilograms (6.99 lbs)
Power	1200 Watts

Feature	Detail
Voltage	2.4E+2 Volts (AC)
Material	Stainless Steel
Special Feature	Automatic cleaning function
Coffee Maker Type	Espresso Machine
Recommended Uses	Coffee and coffee-based beverage preparation for individual use or small spaces
Included Components	20 original Nespresso capsules



Image: The Nespresso Inissia EN80.B coffee machine with its key dimensions (length, width, height) clearly labeled in centimeters.

WARRANTY AND SUPPORT

Your Nespresso Inissia EN80.B coffee machine comes with a manufacturer's warranty. For detailed information regarding the warranty period, terms, and conditions, please refer to the warranty card included in your product packaging or visit the official Nespresso website.

For technical assistance, troubleshooting beyond this manual, or to order accessories and descaling kits, please contact Nespresso Customer Service. Contact details can typically be found on the Nespresso website or in your product documentation.

You can also visit the official Nespresso store for more information: [Nespresso Official Store](#)