

## RemotesReplaced B40B133T2CS

# Instruction Manual

## REMOTESREPLACED REPLACEMENT REMOTE CONTROL FOR BLAUPUNKT B40B133T2CS

### 1. SETUP AND FIRST USE

---

This RemotesReplaced remote control is designed as a direct replacement for your original BLAUPUNKT B40B133T2CS remote. No programming or setup codes are required. Simply insert the batteries, and the remote is ready for immediate use.

#### 1.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Figure 1: Back view of the remote control with the battery compartment.

After installing the batteries, the remote control is ready to operate your BLAUPUNKT B40B133T2CS television.

## 2. OPERATING INSTRUCTIONS

This remote control provides full functionality for your BLAUPUNKT B40B133T2CS TV. Point the remote directly at the TV's infrared receiver for optimal performance. The maximum operating range is approximately 10 meters (33 feet).



Figure 2: Front view of the remote control with button layout.

## 2.1 Basic Functions

- **POWER:** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV sound.
- **0-9 (Number Buttons):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels sequentially.
- **SOURCE:** Selects input sources (e.g., HDMI, AV).
- **MENU:** Accesses the TV's main menu.
- **OK (Enter):** Confirms selections in menus.
- **Navigation Arrows (Up/Down/Left/Right):** Navigate through menus and options.
- **EXIT:** Exits the current menu or screen.

## 2.2 Advanced Functions

- **TV/DTV:** Switches between TV and Digital TV modes.
- **EPG:** Displays the Electronic Program Guide.
- **INFO:** Shows information about the current program.
- **FAV:** Accesses favorite channels list.
- **BACK:** Returns to the previous menu or channel.
- **SLEEP:** Sets a sleep timer for the TV.
- **NET TV / SMART:** Accesses smart TV features or internet applications (if supported by your TV).
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or smart TV applications as indicated on screen.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

## 3. MAINTENANCE

---

### 3.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

### 3.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or inconsistent. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### 3.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

## 4. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are correctly inserted with the correct polarity.

- Replace the batteries with fresh ones.
- Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- Make sure you are within the operating range (approx. 10 meters) and pointing the remote directly at the TV.
- **Some buttons not working:**
  - This remote is specifically designed for the BLAUPUNKT B40B133T2CS. Ensure your TV model matches.
  - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.

## 5. SPECIFICATIONS

---

Feature	Specification
Brand	RemotesReplaced
Model Compatibility	BLAUPUNKT B40B133T2CS
Connectivity Technology	Infrared
Maximum Range	10 Meters (approx. 33 feet)
Power Source	2 x AAA Batteries (not included)
Item Weight	120 Grams

## 6. WARRANTY AND SUPPORT

---

### 6.1 Warranty Information

This RemotesReplaced product comes with a 1-year warranty from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

### 6.2 Recycling Information

Please dispose of batteries and the remote control responsibly according to local regulations. The product packaging includes recycling information for various materials.



Figure 3: Recycling information for packaging materials.

For further assistance or support, please contact RemotesReplaced customer service.