

## Generic FOXW-RMT-171123-2182

# User Manual for Generic Replacement Remote Control

Model: FOXW-RMT-171123-2182

## 1. INTRODUCTION

---

This manual provides essential information for the proper setup, operation, and maintenance of your new Generic replacement remote control, model FOXW-RMT-171123-2182. This remote is designed as a replacement for specific Vivax portable air conditioner models, including ACP-09CH25AERI and ACP-24CH70AERI, as well as other compatible devices such as Set Top Boxes, Televisions, Stereo Systems, DVD/Blu-ray Players, and Home Theater systems.

Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

## 2. PRODUCT OVERVIEW

---

The FOXW-RMT-171123-2182 is an ergonomic replacement remote control. It is designed to provide basic control functions for your compatible devices without requiring complex programming or setup. Please note that as a replacement, it may not support all advanced functions present on your original device's remote control.



Figure 2.1: Angled view of the Generic Replacement Remote Control, showing its ergonomic design and button layout.



Figure 2.2: Front view of the Generic Replacement Remote Control, highlighting the display screen and primary control buttons.

### 3. SETUP

---

This replacement remote control does not require any complex programming or setup procedures. Simply insert the batteries, and it will be ready for use with compatible devices.

#### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new batteries (typically AAA, not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

**Important: Always insert new batteries to ensure the remote control functions correctly.**

### 4. OPERATING INSTRUCTIONS

---

Once batteries are installed, the remote control is ready to operate your compatible devices. Point the remote directly at the infrared receiver of your device (e.g., air conditioner, TV, etc.).

#### 4.1 Basic Functions

- **Power On/Off:** Press the **ON/OFF** button to turn the device on or off.
- **Temperature Adjustment:** Use the **TEMP +** and **TEMP -** buttons to increase or decrease the temperature setting (for AC units).
- **Mode Selection:** Press the **MODE** button to cycle through available operating modes (e.g., Cool, Heat, Fan, Dry, Auto for AC units).
- **Fan Speed:** Use the **FAN SPEED** button to adjust the fan speed.
- **Swing Function:** The **SWING** button controls the louver movement (for AC units).
- **Other Buttons:** Refer to the labels on individual buttons for their specific functions, which may vary depending on the device being controlled.

**Note: This is a replacement remote. Some functions or buttons present on your original remote may not be available or fully functional with this replacement unit. Please verify compatibility with your specific device model.**

### 5. MAINTENANCE

---

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical shocks and drops, which can damage internal components.

## 6. TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote and the device's IR receiver.
  - Make sure you are within the effective operating range of the device.
- **Certain Functions Not Working:**
  - As a replacement remote, some advanced or specific functions of your original device's remote may not be supported. This is normal for universal or replacement remotes.
  - Verify that the function you are trying to use is compatible with your specific device model.

## 7. SPECIFICATIONS

Feature	Detail
Product Type	Replacement Remote Control
Model Number	FOXW-RMT-171123-2182
Brand	Generic
Special Feature	Ergonomic design
Color	Black or white (as per product variant)
Max Number of Supported Devices	2 (referring to the remote's capability, not simultaneous control)
Compatible Devices	Vivax ACP-09CH25AERI, ACP-24CH70AERI Portable Air Conditioners, Set Top Box, Television, Stereo System, DVD/Blu-ray Player, Home Theater
Power Source	Batteries (not included)
ASIN	<a href="#">B0CNJN1RM4</a>
Date First Available	November 17, 2023

## 8. WARRANTY AND SUPPORT

As a generic replacement product, specific warranty terms may vary. Please refer to the seller or retailer from whom you purchased this remote control for information regarding warranty, returns, or technical support. For any issues not covered in this manual, or for further assistance, please contact the seller directly.

---

© 2024 Generic. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.