

[manuals.plus](#) /› [Dragon Touch](#) /› [Dragon Touch KidzPad Y88X 10 Kids Tablet User Manual](#)

Dragon Touch Y88X 10

Dragon Touch KidzPad Y88X 10 Kids Tablet

User Manual

1. INTRODUCTION

Welcome to your new Dragon Touch KidzPad Y88X 10 Kids Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully to ensure proper use and to maximize your tablet's features.

Package Contents

- Kids Tablet (1)
- Kid-Proof Case (1)
- User Manual (1)
- Power Adapter (1)
- USB Cable (1)
- Stylus (1)
- Shoulder Strap (2)



Image: The Dragon Touch KidzPad Y88X 10 Kids Tablet shown with its protective case, stylus, and shoulder strap, alongside the power adapter and USB cable.

2. SETUP

2.1 Charging the Tablet

Before first use, fully charge the tablet. Connect the provided USB cable to the tablet's charging port and the power adapter. Plug the adapter into a wall outlet. The charging indicator will show the charging status.

2.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.

2.3 Initial Setup

Upon first power-on, follow the on-screen prompts to complete the initial setup. This includes selecting your language, connecting to a Wi-Fi network, and signing in with or creating a Google Account. A Google Account is required to download apps from the Google Play Store.

2.4 Inserting a MicroSD Card

The tablet supports up to 128GB of additional storage via a microSD card (not included). Locate the microSD card slot, typically under a protective flap on the side of the tablet. Gently insert the card until it clicks into place. Ensure the tablet is powered off before inserting or removing the card.

3. OPERATING THE TABLET

3.1 Basic Navigation

The tablet features a 10.1-inch IPS HD display. Use touch gestures for navigation:

- **Tap:** Select an item.
- **Swipe:** Scroll through pages or lists.
- **Pinch:** Zoom in or out on images and web pages.

3.2 Parental Controls

The tablet includes pre-installed parental control features to manage content and screen time. Utilize Family Link and KIDOZ to create separate profiles for each child, customize accessible content, and monitor activities.



Kidoz Pre-installed

Educational and entertaining content for your kids



Image: A family interacting with Dragon Touch Kids Tablets, demonstrating the parental control interface on one of the devices, showing options for screen time limits and content filtering.

3.3 KIDOZ Pre-Installed

KIDOZ provides a curated environment with age-appropriate educational and entertaining content. This platform helps ensure a safe digital experience for children.



Made For Kid

Innovative kid-proof case with a foldable stand and carrying straps

Image: A child engaged with the Dragon Touch Kids Tablet, displaying the KIDOZ interface with various colorful applications and content designed for children.

3.4 Downloading Apps

Access the Google Play Store to download a wide range of educational and entertainment applications, including YouTube Kids, Khan Academy Kids, Duolingo, ABC mouse, Hulu, Amazon Prime Video, Xfinity Stream, Netflix, and Disney Plus.

Enjoy Immersive Audio Video Experience



10.1" HD
IPS Display



2GB RAM
32GB ROM



2.4GHz+5GHz
Wi-Fi

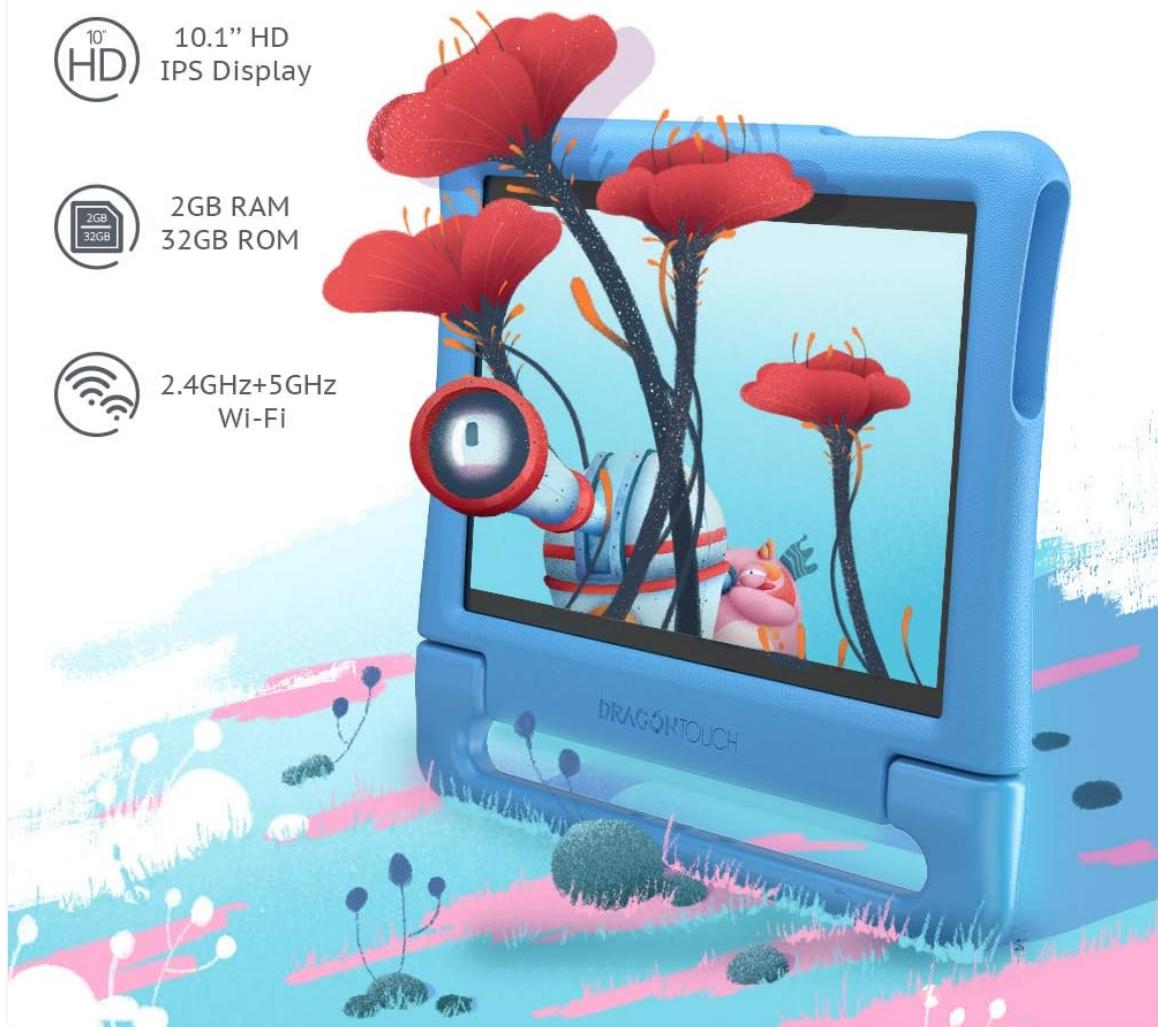


Image: The Dragon Touch Kids Tablet screen showing a selection of popular age-appropriate applications like YouTube, Google, and Netflix, indicating access to diverse content.

3.5 Wi-Fi Connectivity

The tablet supports 2.4GHz and 5GHz Wi-Fi. To connect, go to **Settings > Network & internet > Wi-Fi**, select your desired network, and enter the password if prompted.

3.6 Using the Stylus

The included stylus allows for precise interaction with the screen, ideal for drawing, writing, and navigating applications. Use it as you would your finger for touch input.

Age-appropriate Content

Access more kid-friendly apps & educational content on Google Play



Image: A child using the provided stylus to interact with the Dragon Touch Kids Tablet, demonstrating its use for creative activities like drawing.

3.7 Kid-Proof Case and Shoulder Strap

The tablet comes with a durable, environmentally-friendly kid-proof case with a foldable stand. The adjustable shoulder straps allow for easy and safe portability.



Stylus Included

Spark creativity in your little ones

Image: Multiple children are shown using Dragon Touch Kids Tablets, highlighting the protective cases and the convenience of the shoulder straps for carrying the devices.

3.8 Micro HDMI Port

Easily stream content from your tablet to a connected TV using the micro HDMI port (cable not included) for a larger viewing experience.

3.9 GPS Sensor

An integrated GPS sensor enables navigation capabilities. Download offline maps to use GPS without an internet connection.

4. MAINTENANCE

4.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, which can damage the screen or finish.

4.2 Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. Charge the tablet regularly, but avoid leaving it fully charged or fully discharged for extended periods.

4.3 Software Updates

Periodically check for software updates to ensure optimal performance and security. Go to **Settings > System > System update** to check for and install available updates.

5. TROUBLESHOOTING

Common Issues and Solutions

- **Tablet not turning on:** Ensure the tablet is charged. Connect it to the power adapter and wait a few minutes before attempting to power on again.
- **Slow performance:** Close unused applications. Clear cache from apps in **Settings > Apps & notifications > See all apps > [App Name] > Storage & cache > Clear cache**. Consider uninstalling rarely used apps or moving media to a microSD card.
- **Wi-Fi connection issues:** Restart the tablet and your Wi-Fi router. Ensure you are within range of the Wi-Fi signal and have entered the correct password.
- **Apps crashing:** Ensure the app is updated to its latest version. Clear the app's cache or reinstall the app.

Factory Reset

If persistent issues occur, a factory reset may resolve them. **Warning:** A factory reset will erase all data on the tablet. Back up important data before proceeding. Go to **Settings > System > Reset options > Erase all data (factory reset)** and follow the on-screen instructions.

6. SPECIFICATIONS

Feature	Specification
Model Name	KidzPad Y88X 10
Display Size	10.1 Inches
Screen Resolution	1024x600 (Max: 1280x800)
Processor	1.3 GHz Quad Core (MediaTek)
RAM	2GB
Internal Storage	32GB
Expandable Storage	Up to 128GB via MicroSD (not included)
Operating System	Android
Wireless Type	802.11g (2.4GHz & 5GHz Wi-Fi)
Average Battery Life	5 Hours
Rear Webcam Resolution	8 MP
Product Dimensions	9.5 x 0.4 x 6.7 inches
Item Weight	2.95 pounds
Color	Blue



Image: An illustration of the Dragon Touch Kids Tablet highlighting its core specifications including 10.1" HD IPS Display, 2GB RAM, 32GB Storage, and 2.4GHz+5GHz Wi-Fi capabilities.

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Dragon Touch website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: www.dragontouch.com/support

© 2026 Dragon Touch. All rights reserved.