

[Manuals.plus](#) /

> [OMOTON](#) /

> OMOTON Foldable Bluetooth Keyboard User Manual

OMOTON FBLK-NUM-MULTIDEV-RECH

OMOTON Foldable Bluetooth Keyboard User Manual

Model: FBLK-NUM-MULTIDEV-RECH

INTRODUCTION

Thank you for choosing the OMOTON Foldable Bluetooth Keyboard. This versatile keyboard is designed for portability and multi-device compatibility, featuring a numeric keypad and comfortable scissor-switch keys. Please read this manual carefully to ensure proper use and maintenance of your device.



Image: The OMOTON Foldable Bluetooth Keyboard, showcasing its compact, folded design and its ability to unfold into a full-sized keyboard with a numeric pad.

PACKAGE CONTENTS

- OMOTON Foldable Bluetooth Keyboard
- USB Cable
- User Manual (this document)

1. Charging the Keyboard

Before first use, fully charge the keyboard. Connect the provided USB cable to the keyboard's charging port and a power source (e.g., computer USB port, USB wall adapter). The indicator light will show charging status and turn off when fully charged.

- **Charging Time:** Approximately 2 hours for a full charge.
- **Battery Life:** Up to 40 hours of continuous typing.

Rechargeable Bluetooth Keyboard



2 Hours
Full Charge



140mAh
High-capacity



60 Hours
Uninterrupted Work



Type-C
Charging Port

Image: The keyboard connected to a USB-C charging cable, highlighting its rechargeable battery and charging port.

2. Powering On/Off

Locate the power switch on the side of the keyboard. Slide it to the "ON" position to power on the keyboard. Slide it to "OFF" to power off. The keyboard will automatically enter sleep mode after 10 minutes of inactivity to conserve battery.



Image: A detailed view of the keyboard's side, pointing out the power switch, indicator light, and charging port.

3. Bluetooth Pairing

The OMOTON keyboard supports connecting up to three devices simultaneously. Follow these steps to pair your device:

1. Unfold the keyboard to power it on.
2. Press and hold the **Fn** key and one of the Bluetooth channel keys (**BT1**, **BT2**, or **BT3**) for 3-5 seconds until the corresponding indicator light flashes rapidly. This indicates the keyboard is in pairing mode.
3. On your device (iPad, iPhone, Android, Windows Laptop, Desktop, Tablet, PC), go to Bluetooth settings and search for "OMOTON Keyboard" or a similar name.
4. Select the keyboard from the list of available devices to connect. The indicator light will stop flashing once successfully paired.
5. Repeat for up to two more devices using the other BT channels.



Allows you to connect up to 3
bluetooth devices at the same time and switch easily.

Switch Between 3 Devices

Image: The keyboard shown connected to multiple devices (phone, tablet, laptop), demonstrating its ability to switch between them.

Your browser does not support the video tag.

Video: A demonstration of the OMOTON Foldable Bluetooth Keyboard, showcasing its folding mechanism, multi-device pairing, comfortable typing, and portability.

OPERATING INSTRUCTIONS

1. Folding and Unfolding

The keyboard features a robust folding design with magnetic adsorption to keep it securely closed when not in use. Simply unfold the two side panels to reveal the full keyboard layout. Fold them back inwards to make it compact for travel.

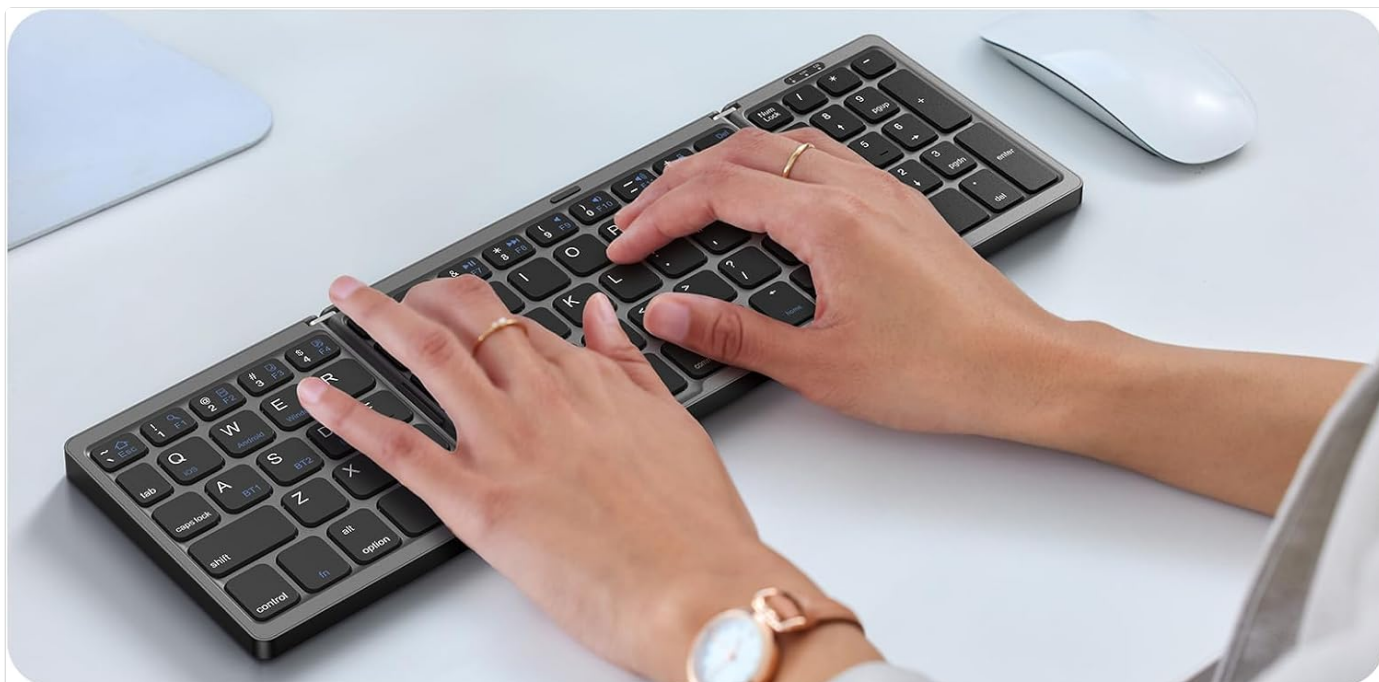


Image: A user demonstrating the folding and unfolding action of the keyboard, highlighting its portability.



Image: The compact, folded keyboard being easily stored in a bag, demonstrating its travel-friendly design.

2. Switching Between Devices

To switch between paired devices, simply press the **Fn** key along with the corresponding Bluetooth channel key (**BT1**, **BT2**, or **BT3**) for the desired device. The keyboard will quickly connect to the selected device.

3. Typing Experience and Numeric Keypad

The keyboard features scissor-switch keys for a quiet and comfortable typing experience. The integrated numeric keypad enhances efficiency for data entry and calculations.

Scissor Switch Keys

Provides you with a comfortable typing experiences.

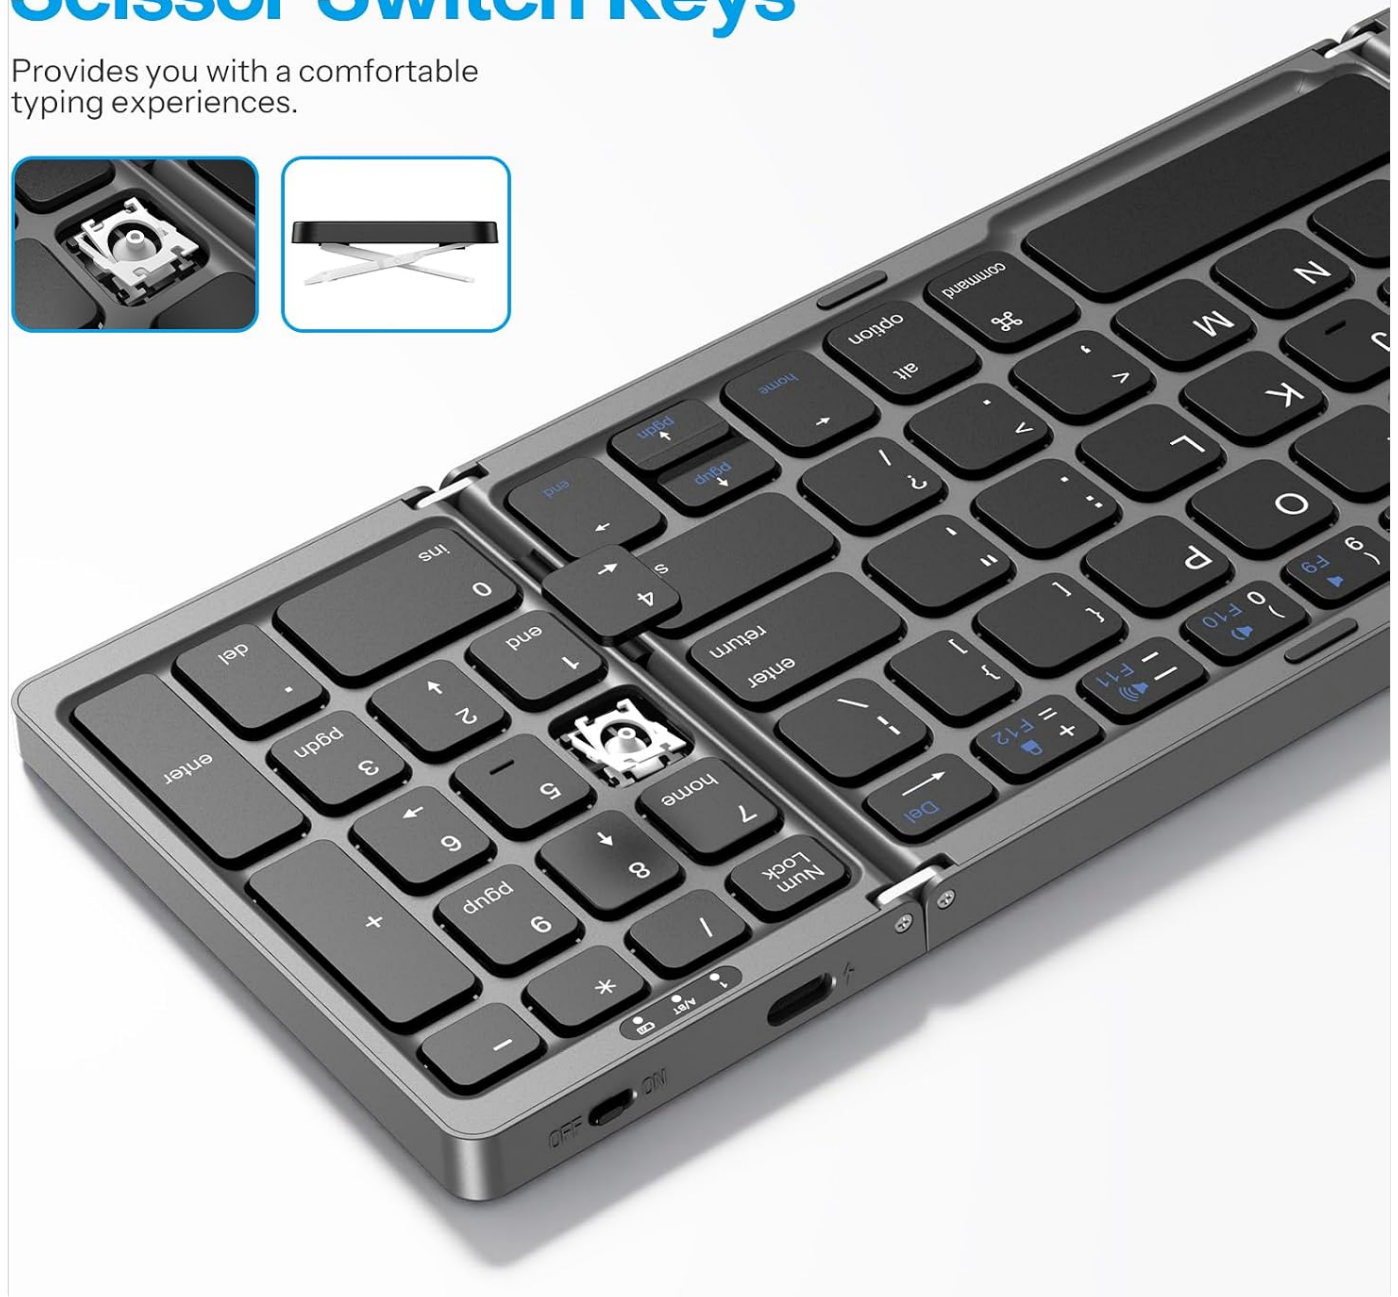


Image: A close-up view of the keyboard's scissor-switch key mechanism, illustrating the design for comfortable typing.



Image: A detailed shot of the integrated numeric keypad, highlighting its functionality for quick data input.

4. Multimedia Shortcut Keys

Utilize the multimedia shortcut keys (e.g., volume control, playback) by pressing the **Fn** key in combination with the corresponding function key (F1-F12).

MAINTENANCE

Cleaning

To clean your keyboard, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials. Ensure the keyboard is powered off before cleaning.

Storage

When not in use, fold the keyboard to protect the keys and make it compact for storage. Store it in a dry place away from extreme temperatures.

TROUBLESHOOTING

Problem	Solution
Keyboard does not power on.	Ensure the power switch is in the "ON" position. Charge the keyboard fully.
Unable to pair via Bluetooth.	Make sure the keyboard is in pairing mode (indicator light flashing). Ensure Bluetooth is enabled on your device. Forget the device from your device's Bluetooth settings and try pairing again. Restart both the keyboard and your device. Ensure the keyboard is within the 10-meter operating range.
Keys are not responding.	Check if the keyboard is connected to the correct device (use Fn + BT1/BT2/BT3). Ensure the keyboard is charged. Restart the keyboard and the connected device.
Keyboard folds easily on soft surfaces.	This keyboard is designed with a folding mechanism. For optimal stability, use it on a flat, firm surface.

SPECIFICATIONS

- **Brand:** OMOTON
- **Model:** FBLK-NUM-MULTIDEV-RECH
- **Connectivity:** Bluetooth
- **Compatible Devices:** Laptop, PC, iPad, iPhone, Android, Windows Tablets
- **Keyboard Description:** Foldable Bluetooth Keyboard with Numeric Keypad
- **Special Features:** Foldable, Lightweight, Rechargeable, Multi-Device Support, Scissor Switch Keys
- **Number of Keys:** 81
- **Power Source:** Rechargeable Lithium Ion Battery (1 included)
- **Battery Capacity:** 140mAh (High-capacity)
- **Charging Time:** Approx. 2 hours
- **Continuous Typing Time:** Up to 40 hours
- **Operating Range:** Up to 10 meters (33 feet)
- **Folding Size:** 5.94" x 3.85" x 0.78"
- **Item Weight:** 9.6 ounces

WARRANTY & SUPPORT

OMOTON products are designed and manufactured to the highest quality standards. For warranty information or technical support, please contact OMOTON customer service through the retailer's platform or the official OMOTON website. Please retain your proof of purchase for warranty claims.
For further assistance, visit the [OMOTON Store on Amazon](#).

© 2024 OMOTON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CNJZWG51>

More documents and user manuals: <https://manuals.plus/>