

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BLAUPUNKT](#) /

› [Blaupunkt AMP-1501PRO 1500W Monoblock Amplifier Instruction Manual](#)

BLAUPUNKT AMP-1501PRO

Blaupunkt AMP-1501PRO 1500W Monoblock Amplifier

INSTRUCTION MANUAL

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Blaupunkt AMP-1501PRO monoblock amplifier. Please read this manual thoroughly before attempting installation or operation to ensure proper use and to prevent damage to the unit or your vehicle's audio system. Keep this manual for future reference.

Safety Information

- Always disconnect the vehicle's negative battery terminal before starting any electrical work.
- Ensure all wiring is properly routed and secured to prevent pinching or damage.
- Use appropriate gauge wiring for power and ground connections as specified in the installation section.
- Install the amplifier in a dry, well-ventilated location, away from direct sunlight or heat sources.
- Do not expose the amplifier to moisture or extreme temperatures.
- If you are unsure about any part of the installation process, consult a qualified professional installer.

Package Contents

Verify that all items are present in the package:

- Blaupunkt AMP-1501PRO Monoblock Amplifier
- Remote Bass Level Control Knob
- Mounting Screws
- Instruction Manual



Image showing the Blaupunkt AMP-1501PRO amplifier's included accessories: a remote bass level control, the instruction manual, and a set of mounting screws.

Product Features

- **Powerful Output:** Delivers up to 1500W peak power.
- **Class D Amplification:** High-efficiency design minimizes heat generation, allowing for a compact form factor.
- **Low Pass Filter (LPF):** Adjustable from 40Hz to 180Hz for precise subwoofer integration.
- **Compact Design:** Facilitates flexible installation in various vehicle locations, including under seats or in trunks.
- **2 Ohm Stable:** Capable of driving subwoofers with 2-ohm impedance for increased power output.



Top view of the Blaupunkt AMP-1501PRO amplifier, highlighting its compact design and branding.

Setup and Installation

Mounting the Amplifier

Choose a mounting location that is dry, well-ventilated, and secure. Avoid mounting the amplifier directly on carpet or in enclosed spaces that restrict airflow. Use the provided mounting screws to secure the amplifier firmly to a solid surface in your vehicle.

Wiring Connections

Ensure all connections are tight and secure to prevent electrical shorts or poor performance.



Rear view of the amplifier, detailing the power input terminals (GND, REM, +12V), fuse holders, and speaker output terminals.

- 1. Power Connection (+12V):** Connect a direct wire from the vehicle's positive battery terminal to the +12V terminal on the amplifier. Use an appropriate gauge power wire (e.g., 8-gauge or 4-gauge depending on total system power) and install an in-line fuse holder within 18 inches of the battery.
- 2. Ground Connection (GND):** Connect a wire of the same gauge as the power wire from the GND terminal on the amplifier to a clean, unpainted metal surface on the vehicle's chassis. Ensure a good electrical connection.
- 3. Remote Turn-On (REM):** Connect a thin wire (e.g., 18-gauge) from the REM terminal on the amplifier to the remote turn-on output of your head unit. This wire turns the amplifier on and off with your car stereo.
- 4. Speaker Output:** Connect your subwoofer(s) to the SPEAKER OUTPUT terminals. Ensure correct polarity (+ to + and - to -). This amplifier is designed for monoblock operation, typically driving a single subwoofer or multiple subwoofers wired to a compatible impedance (e.g., 2 ohms).



Front view of the amplifier, displaying the RCA input jacks, GAIN, BASS BOOST, and LPF adjustment knobs, along with the remote bass knob port.

- 5. RCA Input (INPUT R/L):** Connect RCA cables from your head unit's subwoofer or full-range pre-outs

to the INPUT R and L jacks on the amplifier.

6. **Remote Bass Knob:** Connect the remote bass level control knob to the 'REMOTE' port on the amplifier using the provided cable. Mount the knob in an accessible location for easy adjustment.

Operating Instructions

Initial Power-Up

After all connections are made, reconnect the vehicle's negative battery terminal. Turn on your car stereo. The 'PWR' indicator on the amplifier should illuminate, indicating it is receiving power and operating correctly. If the 'PRT' (Protection) indicator illuminates, refer to the Troubleshooting section.

Adjusting Controls

- **GAIN:** This control matches the amplifier's input sensitivity to the output level of your head unit. Start with the GAIN set to minimum (0.1V) and slowly increase it until you hear distortion, then back off slightly. Do not use the GAIN control as a volume knob.
- **BASS BOOST:** This control provides an adjustable bass enhancement at a specific frequency. Use sparingly to avoid distortion or damage to your speakers.
- **LPF (Low Pass Filter):** This filter allows only frequencies below the set point to pass through to the subwoofer. Adjust the LPF (40Hz - 180Hz) to blend the subwoofer's output seamlessly with your main speakers. A common starting point is around 80Hz.
- **REMOTE (Bass Knob):** The remote bass knob provides convenient control over the subwoofer's output level from the driver's seat.

Maintenance

- Periodically check all wiring connections for tightness and corrosion.
- Keep the amplifier clean and free of dust and debris. Use a soft, dry cloth for cleaning.
- Ensure that the cooling fins are not obstructed to maintain proper heat dissipation.
- Do not use harsh chemicals or solvents for cleaning.

Troubleshooting

If you experience issues with your amplifier, refer to the following common problems and solutions:

- **No Power (PWR indicator off):**
 - Check the in-line fuse near the battery and the fuses on the amplifier. Replace if blown.
 - Verify +12V power, ground, and remote turn-on connections.
- **Protection Mode (PRT indicator on):**
 - This indicates a fault condition (e.g., short circuit, overheating, low voltage).
 - Check speaker wiring for shorts.
 - Ensure proper ventilation around the amplifier.
 - Verify vehicle battery voltage.
- **No Sound:**
 - Check RCA input connections from the head unit.
 - Verify speaker connections and polarity.

- Ensure head unit volume is up and source is selected correctly.

- **Distorted Sound:**

- Adjust the GAIN control to prevent clipping.
- Check speaker impedance compatibility.
- Reduce BASS BOOST if it's causing distortion.

Specifications

Feature	Specification
Model Number	AMP-1501PRO
Peak Power Output	1500W
Amplifier Class	Class D
Impedance Stability	2 Ohm Stable
Low Pass Filter (LPF)	40Hz - 180Hz
Package Dimensions (L x W x H)	11.14 x 8.39 x 2.99 inches
Item Weight	4.18 pounds

Warranty Information

The Blaupunkt AMP-1501PRO amplifier comes with a 1-year limited manufacturer's warranty. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by improper installation, accident, misuse, abuse, neglect, or unauthorized modification. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the warranty card included in your package or visit the official Blaupunkt website.

Support and Contact

For technical assistance, troubleshooting, or warranty inquiries, please visit the official Blaupunkt website or contact their customer support. Ensure you have your product model number (AMP-1501PRO) and proof of purchase available when seeking support.

Website: www.blaupunkt.com