

Boowen B0CNLCVB1R

Wireless Controller Instruction Manual

Brand: Boowen | Model: B0CNLCVB1R

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Boowen Wireless Controller. Designed for an immersive gaming experience, this controller is compatible with PS4, PS4 Pro, PS4 Slim, PC, iPad, iPhone, Steam, Android, and MacOS devices. Please read this manual carefully to ensure optimal performance and longevity of your device.

SETUP

Initial Connection and Pairing

For the first-time pairing and activation of your Boowen Wireless Controller, a USB cable connection is required. This process establishes the initial link between the controller and your device.

1. Ensure your PS4 console or compatible device is powered on.
2. Connect one end of the provided USB cable to the controller's charging port.
3. Connect the other end of the USB cable to an available USB port on your PS4 console or compatible device.
4. Press the PS button on the controller. The controller will power on and automatically pair with your device.
5. Once paired, you can disconnect the USB cable to use the controller wirelessly.

Subsequent Wireless Connection

After the initial setup, the controller will automatically connect wirelessly to the last paired device when powered on.

- Press the PS button on the controller to power it on.
- The controller will attempt to connect wirelessly. The light bar will indicate a successful connection.



Figure 1: Boowen Wireless Controller. This image displays the front view of the controller, highlighting its unique black crack design with vibrant RGB lighting effects. The controller features standard PS4 button layouts, including a central touchpad, dual analog sticks, and directional pad.

OPERATING THE CONTROLLER

Button Layout and Functions

The Boowen Wireless Controller features a standard layout for intuitive gameplay:

- **Directional Pad (D-Pad):** For precise directional input.
- **Analog Sticks:** Dual analog sticks for 360-degree movement and camera control.
- **Action Buttons (Triangle, Circle, Cross, Square):** Standard action inputs.
- **SHARE Button:** Allows for instant sharing of gameplay screenshots and videos.
- **OPTIONS Button:** Access in-game menus and options.
- **PS Button:** Powers on/off the controller, accesses the PS4 system menu.
- **L1/R1 Buttons:** Shoulder buttons.
- **L2/R2 Triggers:** Analog triggers for precise control in racing and shooting games.

Adjustable RGB Light Bar

The controller features an adjustable 7-color LED backlight. To change the lighting effects:

- Press and hold the **SHARE** button and the **OPTIONS** button simultaneously.
- Each press will cycle through different colors and lighting modes (solid, flashing, strobing).
- Release the buttons when your desired lighting effect is displayed.



Figure 2: Mini Smart Light Bar. This image shows the controller resting on a console, with its light bar illuminated, demonstrating the customizable RGB lighting feature.

Sensitive Touch Pad

The integrated sensitive touchpad provides an exciting gaming experience and interaction, allowing for unique control inputs in compatible games.

SENSITIVE TOUCH PAD

Provide an exciting gaming experience and interaction



Figure 3: Sensitive Touch Pad. This image highlights the central touchpad on the controller, indicating its interactive capabilities for enhanced gameplay.

Dual Shock Vibration and 6-Axis Motion Sensor

Experience realistic gaming sensations with the built-in dual motors and 6-axis gyroscope. The controller automatically adjusts vibration intensity based on in-game events like impacts, explosions, and turns, providing immersive feedback.



Figure 4: Double Shock & 6-Axis Motion Control. This image visually represents the controller's motion sensing capabilities with arrows indicating movement, set against a dynamic game background.

Built-in Speaker and Headset Jack

The controller features a built-in speaker for enhanced audio cues and a 3.5mm stereo headphone jack, allowing you to connect your headset directly for private gaming audio and communication.

BUILT-IN SPEAKER AND HEADSET JACK



3.5mm Audio Port

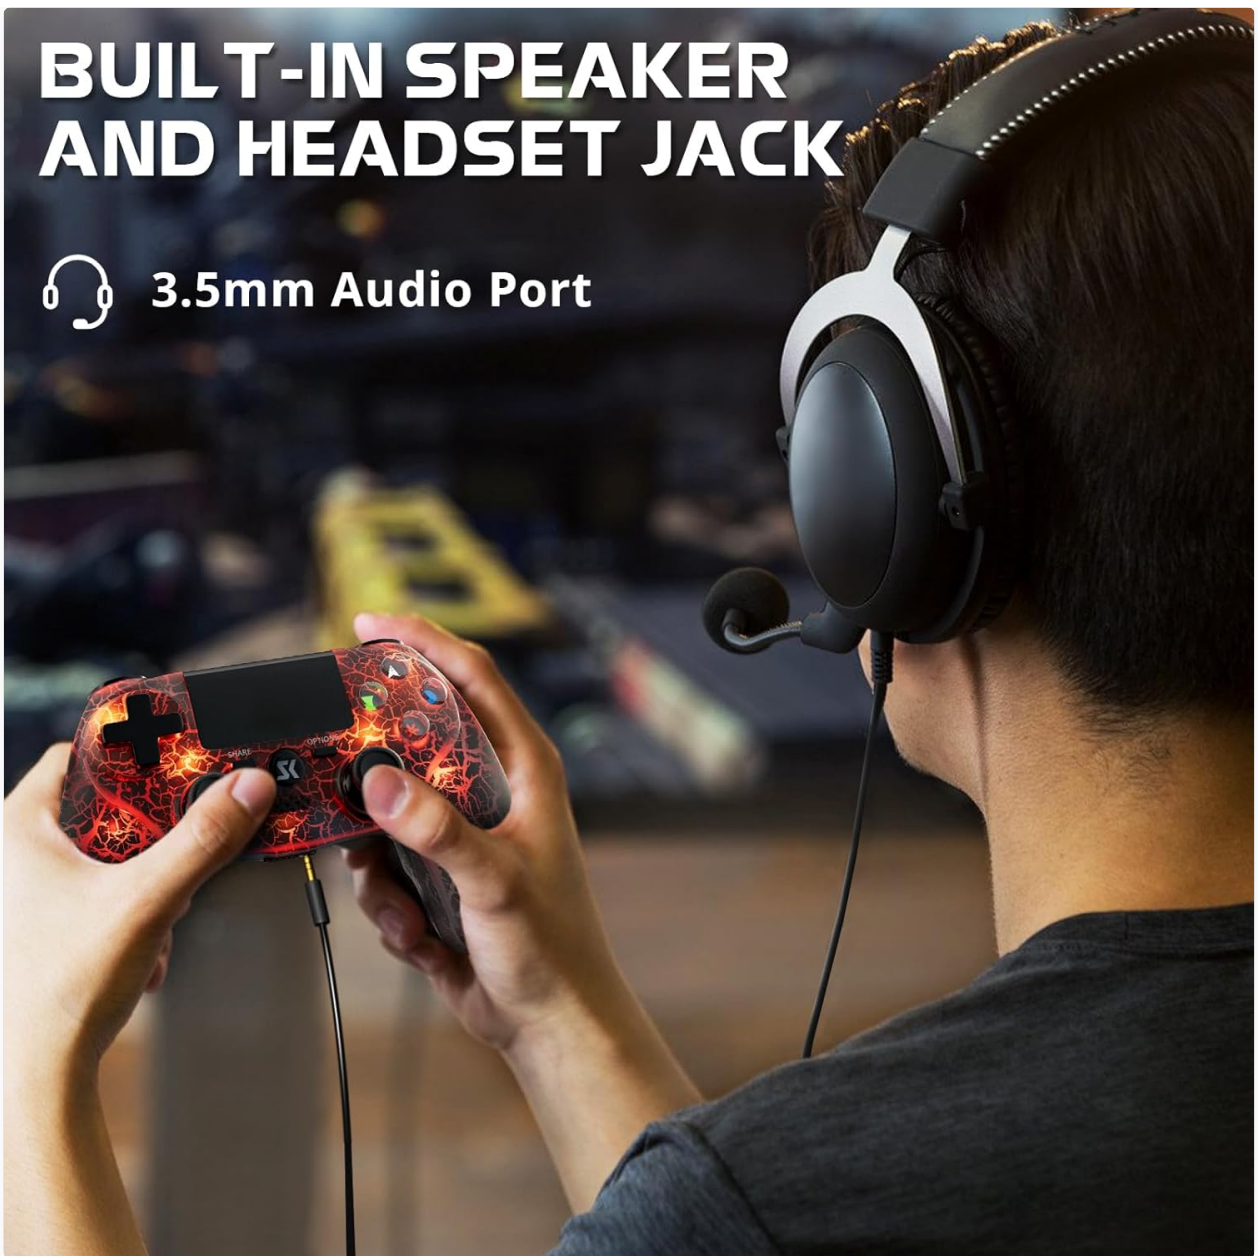


Figure 5: Built-in Speaker and Headset Jack. This image shows a user holding the controller with a headset connected, illustrating the audio features.

MAINTENANCE

- **Charging:** Connect the controller to your PS4 or a USB power source using the provided USB cable. The light bar will indicate charging status. A full charge provides 8-10 hours of gameplay.
- **Cleaning:** Use a soft, dry cloth to clean the controller's surface. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

BUILT-IN 1000MAH RECHARGEABLE BATTERY



Figure 6: Built-in 1000mAh Rechargeable Battery. This image visually represents the controller's long battery life, showing a battery icon and text indicating 8-12 hours of working time and 10m/33ft wireless distance.

TROUBLESHOOTING

- **Controller Not Connecting:**

- Ensure the controller is charged.
- For first-time connection, use the USB cable to activate the device.
- If issues persist, try resetting the controller by inserting a small pin into the reset hole on the back of the controller for 5 seconds. Then, reconnect via USB.

- **Input Lag or Disconnections:**

- Ensure there are no strong electromagnetic interferences nearby.
- Move closer to the console/device to reduce wireless distance.
- Check for any system software updates for your PS4 or compatible device.

- **Buttons or Joysticks Unresponsive:**

- Clean around the buttons and joysticks to remove any debris.
- Perform a controller reset as described above.

SPECIFICATIONS

Feature	Detail
Model Number	B0CNLCVB1R
Compatibility	PS4, PS4 Pro, PS4 Slim, PC, iPad, iPhone, Steam, Android, MacOS
Battery Type	1000mAh Lithium Polymer (Included)
Battery Life	8-10 hours (approx.)
Wireless Distance	Up to 10m / 33ft
Vibration	Dual Motors (Double Shock)
Motion Sensor	6-Axis Gyroscope
Audio Port	3.5mm Stereo Headphone Jack
Dimensions (Package)	6.69 x 4.65 x 2.64 inches
Item Weight	10.2 ounces
Manufacturer	Boowen

WARRANTY AND SUPPORT

Boowen stands behind the quality of its products. This controller comes with a standard manufacturer's warranty against defects in materials and workmanship. For detailed warranty information, technical support, or service inquiries, please refer to the contact information provided on the product packaging or visit the official Boowen website.

Please retain your proof of purchase for warranty claims.