

## Boowen B0CNLGFM5Q

# Boowen Wireless Controller for PS4 User Manual

Model: B0CNLGFM5Q

## INTRODUCTION

---

Thank you for choosing the Boowen Wireless Controller for PS4. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new controllers. These controllers are designed to enhance your gaming experience across multiple platforms, including PS4, PS4 Pro, PS4 Slim, PC, iPad, iPhone, Steam, Android, and MacOS.

## PACKAGE CONTENTS

---

- 2 x Boowen Wireless Controllers (Black + White)
- 2 x USB Charging Cables
- 1 x User Manual (this document)

## SETUP AND CONNECTION

---

To ensure optimal performance, please follow these steps for initial setup and connection:

### Initial Pairing (PS4/PS4 Pro/PS4 Slim)

1. Ensure your PS4 console is powered on.
2. Connect one end of the provided USB charging cable to the controller and the other end to a USB port on your PS4 console.
3. Press the PS button on the controller. The light bar will flash, indicating it is attempting to pair.
4. Once the light bar turns solid, the controller is successfully paired and ready for use.
5. You can then disconnect the USB cable for wireless play. For subsequent connections, simply press the PS button to connect wirelessly.

## Multi-Platform Compatibility

These controllers are compatible with various platforms. For PC, iPad, iPhone, Steam, Android, and MacOS, please refer to the specific device's Bluetooth pairing instructions. The controller will appear as a discoverable Bluetooth device.



Image: The Boowen wireless controller is compatible with PS4, PS4 Pro, and PS4 Slim models, offering versatile gaming options.

## CONTROLLER FEATURES AND FUNCTIONS

The Boowen wireless controller is equipped with several features to enhance your gaming experience:

- **Touchpad:** The sensitive touchpad provides an additional layer of interaction for supported games.
- **Built-in Speaker:** Delivers audio effects directly from the controller, adding to immersion.
- **3.5mm Audio Jack:** Allows connection of a headset for private audio and voice chat.
- **Light Bar:** The integrated light bar changes color to indicate player number, health status, or other in-game information.
- **Share Button:** Quickly capture and share your gameplay moments with friends.

- **Dual Motors & 6-Axis Gyroscope:** Provides realistic vibration feedback and precise motion sensing for an immersive gaming experience.

# SENSITIVE TOUCH PAD

Provide an exciting gaming experience and interaction



Image: The controller features a sensitive touchpad for enhanced interaction in games.

## DOUBLE SHOCK & 6-AXIS MOTION CONTROL



Image: Experience immersive gameplay with built-in dual motors for vibration feedback and a 6-axis gyroscope for motion control.

# BUILT-IN SPEAKER AND HEADSET JACK



**3.5mm Audio Port**

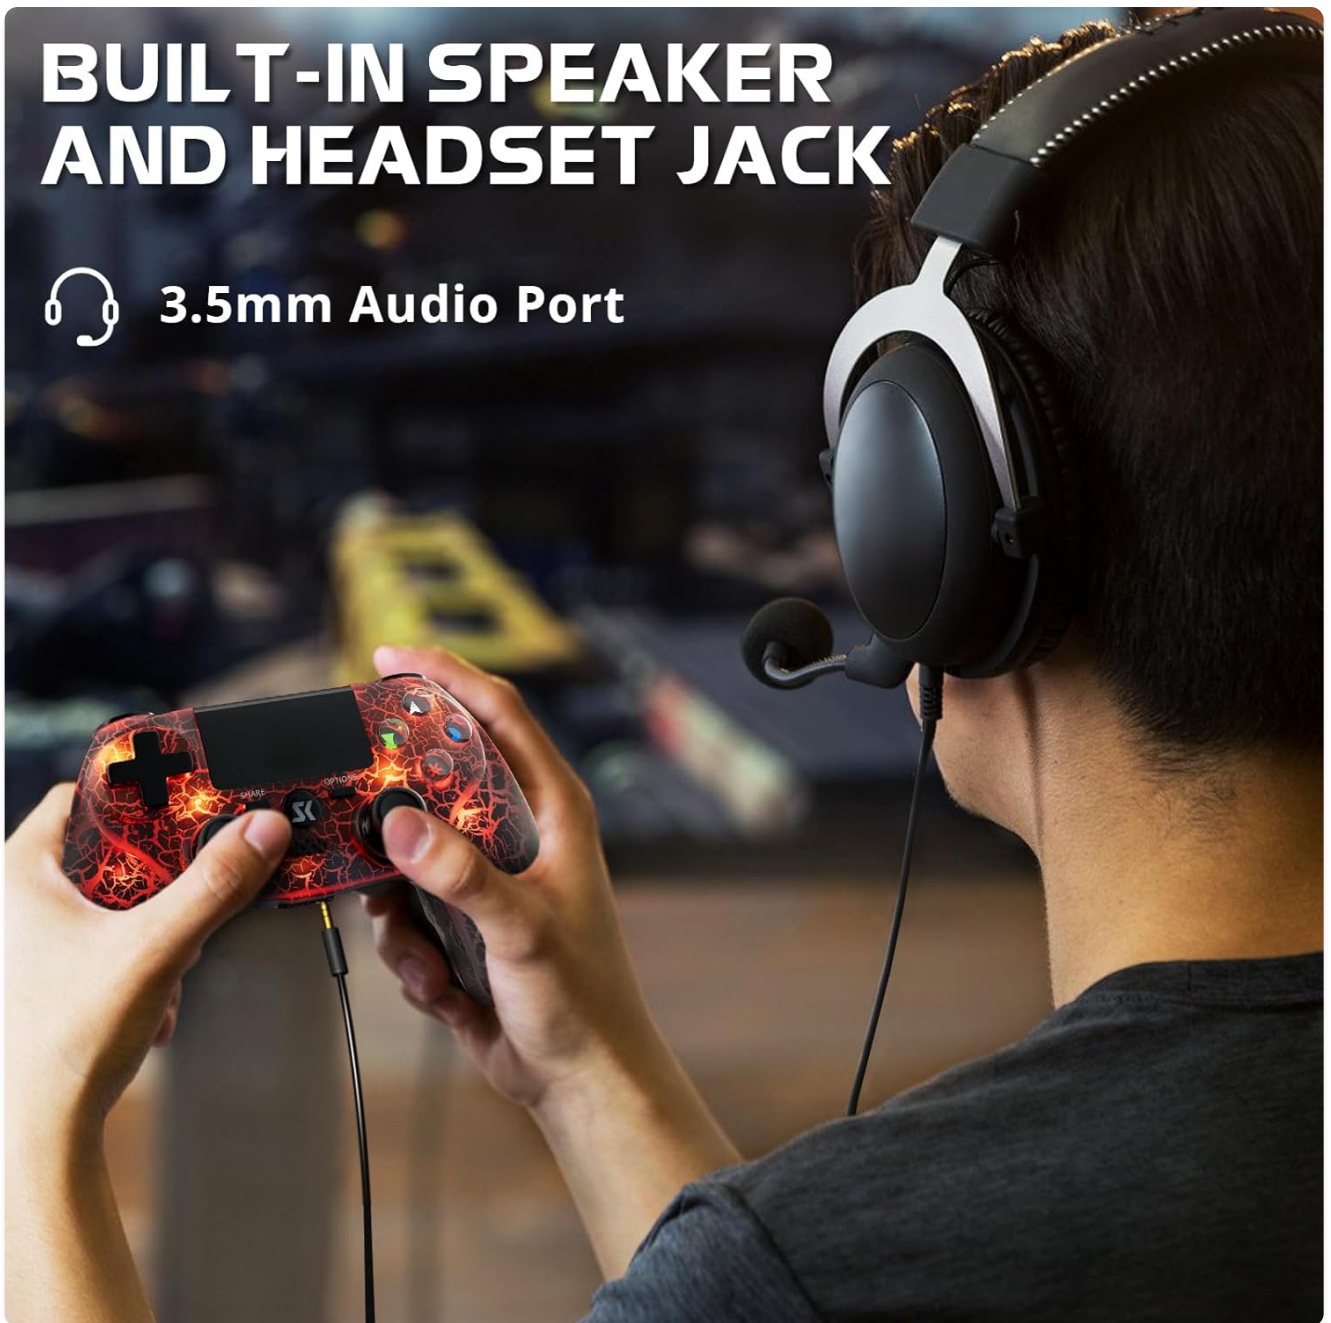


Image: The controller includes a built-in speaker and a 3.5mm audio jack for connecting headphones or a headset.

## CHARGING AND BATTERY LIFE

---

The controller is equipped with a 1000mAh rechargeable battery, providing extended gameplay sessions.

### Charging Instructions:

- Connect the provided USB charging cable to the controller's charging port and to a USB power source (e.g., PS4 console, USB wall adapter, computer USB port).
- The light bar will indicate charging status. It typically takes approximately 2-3 hours for a full charge.
- A full charge provides approximately 8-10 hours of gameplay, depending on usage and feature activation (e.g., vibration, light bar intensity).

# BUILT-IN 1000MAH RECHARGEABLE BATTERY



**8-12 HOURS**

Working Time



**10M/33FT**

Wireless Distance

Image: The controller features a built-in 1000mAh rechargeable battery, offering 8-12 hours of working time.



## MINI SMART LIGHT BAR

Image: The controller's mini smart light bar indicates charging status and other information.

### ADJUSTING RGB BACKLIGHT

---

The controller features an adjustable 7-color LED backlight. Specific instructions for changing the light pattern or color are typically found in the controller's quick start guide or by pressing a combination of buttons. Common combinations include pressing the SHARE and OPTIONS buttons simultaneously to cycle through modes, or a dedicated button if present.



Image: The Boowen wireless controllers feature a unique glacial crack design with adjustable RGB backlighting.

## CARE AND MAINTENANCE

---

Proper care will extend the life of your Boowen wireless controllers:

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the controller regularly, even if not in use for extended periods, to maintain battery health.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components.

## TROUBLESHOOTING

---

If you encounter issues with your controller, please refer to the following common solutions:

Problem	Possible Solution
Controller does not connect/pair.	Ensure the controller is charged. Connect it to the console with a USB cable and press the PS button to activate. If issues persist, try resetting the controller (a small reset button is usually located on the back, requiring a pin to press).
Input lag or unresponsive buttons.	Ensure the controller is fully charged. Move closer to the console to reduce wireless interference. Try re-pairing the controller.
Vibration not working.	Check in-game settings to ensure vibration is enabled. Some games allow disabling vibration.
Controller not charging.	Try a different USB cable or a different USB power source. Ensure the charging port on the controller is clean and free of debris.

## TECHNICAL SPECIFICATIONS

---

- **Model:** B0CNLGM5Q
- **Compatibility:** PS4, PS4 Pro, PS4 Slim, PC, iPad, iPhone, Steam, Android, MacOS
- **Battery:** 1000mAh Rechargeable (1 x 12V battery included)
- **Working Time:** 8-10 hours (approx.)
- **Wireless Distance:** Up to 10 meters / 33 feet (approx.)
- **Features:** Touchpad, Built-in Speaker, 3.5mm Audio Jack, Light Bar, Dual Motors, 6-Axis Gyroscope, Adjustable RGB Backlight
- **Item Weight:** 1.43 pounds
- **Package Dimensions:** 7.44 x 5.16 x 4.8 inches

## WARRANTY AND SUPPORT INFORMATION

---

For any product inquiries, technical support, or warranty claims, please contact Boowen customer service through the retailer where the product was purchased. Please retain your proof of purchase for warranty purposes.