

[manuals.plus](#) /

› [DYONDER](#) /

› [DYONDER Wireless Controller for PS4/PC/Mobile Devices User Manual](#)

DYONDER B0CNLJDTR8

DYONDER Wireless Controller User Manual

Model: B0CNLJDTR8

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your DYONDER Wireless Controller. This controller is designed for use with PlayStation 4 (PS4, PS4 Pro, PS4 Slim), PC (Windows 7/8/10), iPhone, iPad, iOS, and Android devices. Please read this manual thoroughly before using the product to ensure proper functionality and to prevent damage.



Image 1.1: Front view of the DYONDER Wireless Controller, showcasing its compact design and button layout.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- DYONDER Wireless Controller (Model: B0CNLJDTR8)
- USB Charging Cable
- User Manual (this document)

3. PRODUCT FEATURES

- **Wide Compatibility:** Supports PS4, PS4 Pro, PS4 Slim, PC (Windows 7/8/10), iPhone, iPad, iOS, and Android devices.
- **Ergonomic Design:** Enhanced analog sticks and trigger buttons for precise control. Comfortable grip for extended

use.

- **Realistic Vibration:** Built-in dual motion motors provide varied intensity feedback.
- **6-Axis Motion Sensor:** Features the latest 6-axis motion sensing technology for immersive gaming.
- **Integrated Touch Pad:** Offers new interaction possibilities with games.
- **Audio Port:** Built-in 3.5mm audio port.
- **Share Button:** Facilitates easy sharing of gaming moments.
- **Long Battery Life:** Built-in 600mAh lithium polymer battery provides 7-10 hours of playtime on a 3-hour charge.



Image 3.1: Diagram illustrating the various components and buttons of the DYONDER Wireless Controller, including the D-Pad, action buttons, analog sticks, share button, options button, multi-touch pad, LED indicator, R1/R2/L1/L2 triggers, and charging port.

4. SETUP AND CONNECTION

4.1 Charging the Controller

Before first use, fully charge the controller. Connect the supplied USB charging cable to the controller's charging port and

to a USB power source (e.g., PS4 console, PC, or USB wall adapter). The LED indicator will show charging status and turn off when fully charged. A full charge typically takes approximately 3 hours.



Image 4.1: The controller connected to a charging cable, illustrating the charging process.

4.2 Connecting to PlayStation 4 (PS4/Pro/Slim)

1. Ensure your PS4 console is powered off.
2. Connect the controller to the PS4 console using the supplied USB charging cable.
3. Turn on the PS4 console using the power button on the console itself.
4. Press the **Home** button on the controller. The controller will pair with the console.
5. Once paired, you can unplug the USB cable for wireless gameplay.

Note: If the controller does not connect immediately, you may need to press the Home button a few times.

Built-In 600mAh Battery



**2.0 Hours
Charged**



600 mAh



**10-12 Hours
Playing Time**

Image 4.2: The controller wirelessly connected and in use with a PlayStation 4 console, demonstrating its compatibility.

4.3 Connecting to PC (Windows 7/8/10)

Connect the controller to your PC using the USB charging cable. The PC should automatically detect and install the necessary drivers. The controller will function as a wired gamepad. For wireless connection, Bluetooth functionality may be required on your PC, and pairing steps may vary depending on your operating system.

4.4 Connecting to Mobile Devices (iPhone/iPad/iOS/Android)

The controller supports wireless connection to compatible mobile devices. Specific pairing instructions may vary by device and operating system version. Generally, enable Bluetooth on your mobile device, put the controller into pairing mode (refer to the controller's LED indicator for pairing status), and select the controller from the list of available Bluetooth devices.

5. OPERATING THE CONTROLLER

5.1 Basic Controls

- **D-Pad:** Directional input.
- **Left/Right Analog Sticks:** For precise movement and camera control.
- **Action Buttons (Triangle, Circle, Cross, Square):** Game-specific actions.
- **L1/L2/R1/R2 Buttons:** Shoulder and trigger buttons for various in-game functions.
- **Share Button:** Access sharing features (e.g., screenshots, video clips) on PS4.
- **Options Button:** Access in-game menus or system options.
- **Home Button:** Return to the system menu or power on/off the controller.
- **Multi-touch Pad:** Interactive input surface.

5.2 Motion Sensing and Vibration

The controller features a 6-axis motion sensor that responds to your movements, enhancing gameplay in supported titles. Dual vibration motors provide haptic feedback for in-game events, such as impacts or explosions.



Image 5.1: The controller being used with a game, highlighting the 6-axis motion sensor functionality with directional arrows.

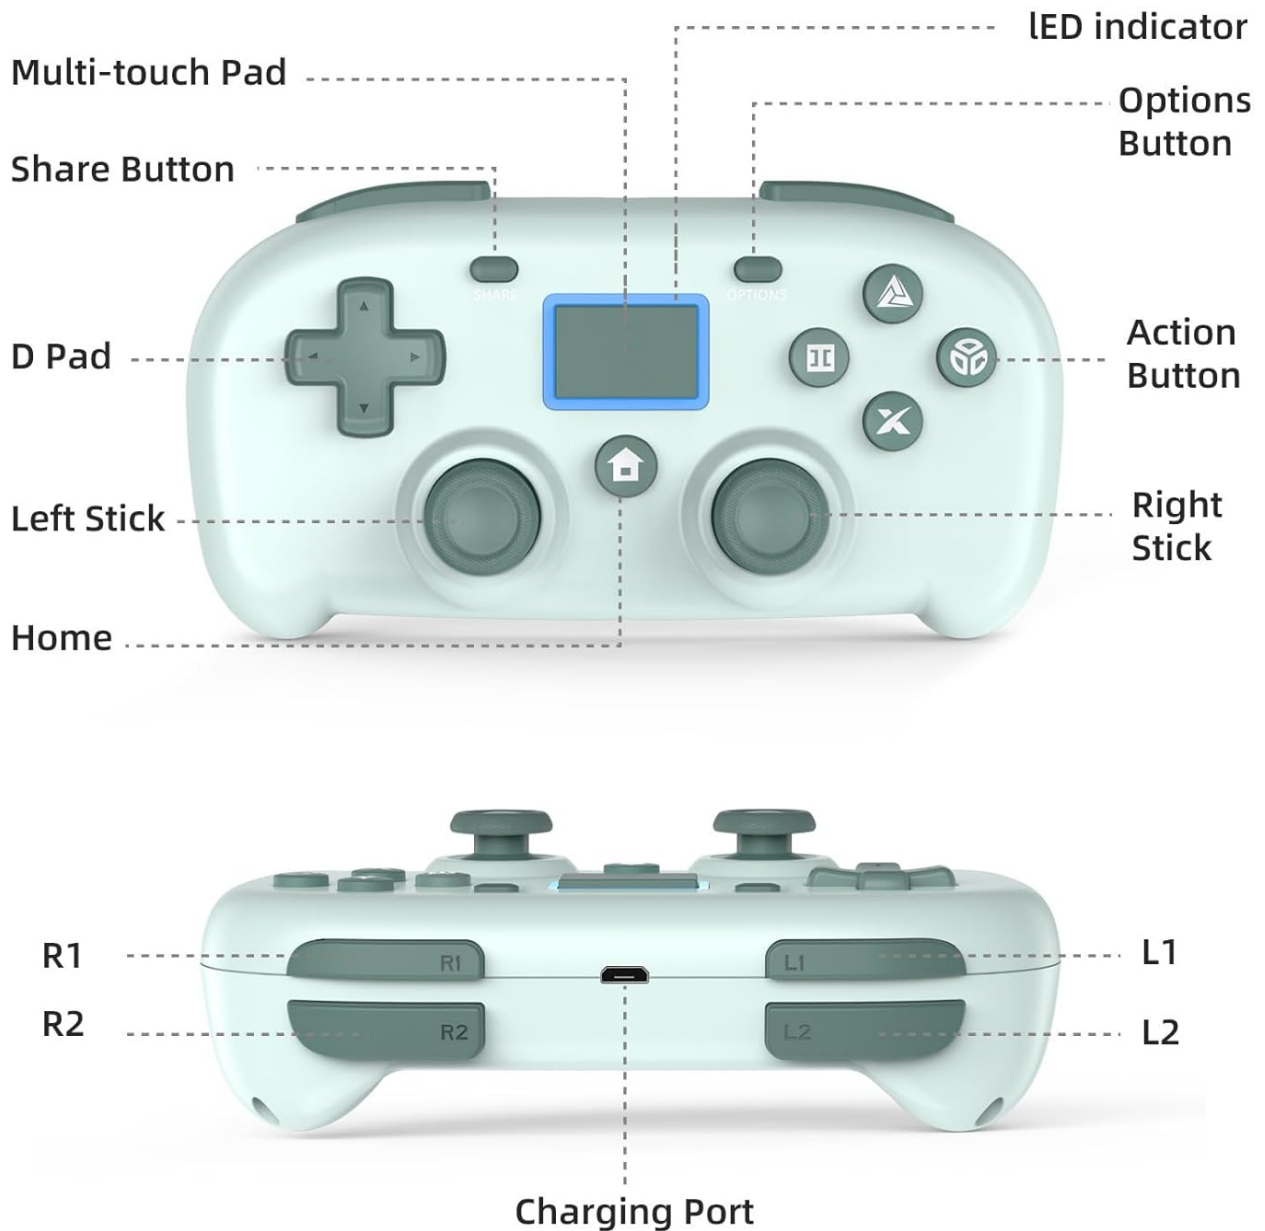


Image 5.2: The controller illustrating the dual vibration feature, with visual cues of vibration emanating from the grips.

6. MAINTENANCE AND CARE

- Keep the controller dry. Avoid exposure to moisture or liquids.
- Clean the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the controller to strong impacts.
- Do not attempt to disassemble or modify the controller, as this will void the warranty.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Controller does not turn on.	Low battery.	Charge the controller fully using the supplied USB cable.
Controller does not connect to PS4.	Incorrect pairing procedure or console interference.	Ensure PS4 is off, connect via USB, turn PS4 on, then press the Home button on the controller. Try pressing the Home button multiple times.
Buttons or analog sticks are unresponsive.	Software glitch or physical obstruction.	Restart the controller and the connected device. Ensure no debris is obstructing buttons. If issues persist, contact support.
Vibration function is not working.	Game does not support vibration or feature is disabled.	Check game settings to ensure vibration is enabled. Verify the game supports vibration feedback.

8. SPECIFICATIONS

- **Model:** B0CNLJDTR8
- **Brand:** DYONDER
- **Connectivity:** Wireless (Bluetooth), Wired (USB)
- **Battery:** 600mAh Lithium Polymer (included)
- **Charging Time:** Approximately 3 hours
- **Playtime:** 7-10 hours
- **Dimensions:** 145mm (Length) x 75mm (Width) x 45mm (Height) (approx. 5.7 x 3 x 1.8 inches)
- **Weight:** Approximately 7 ounces (198g)
- **Compatibility:** PS4, PS4 Pro, PS4 Slim, PC (Windows 7/8/10), iPhone, iPad, iOS, Android
- **Features:** Dual Vibration, 6-Axis Motion Sensor, Multi-touch Pad, 3.5mm Audio Port

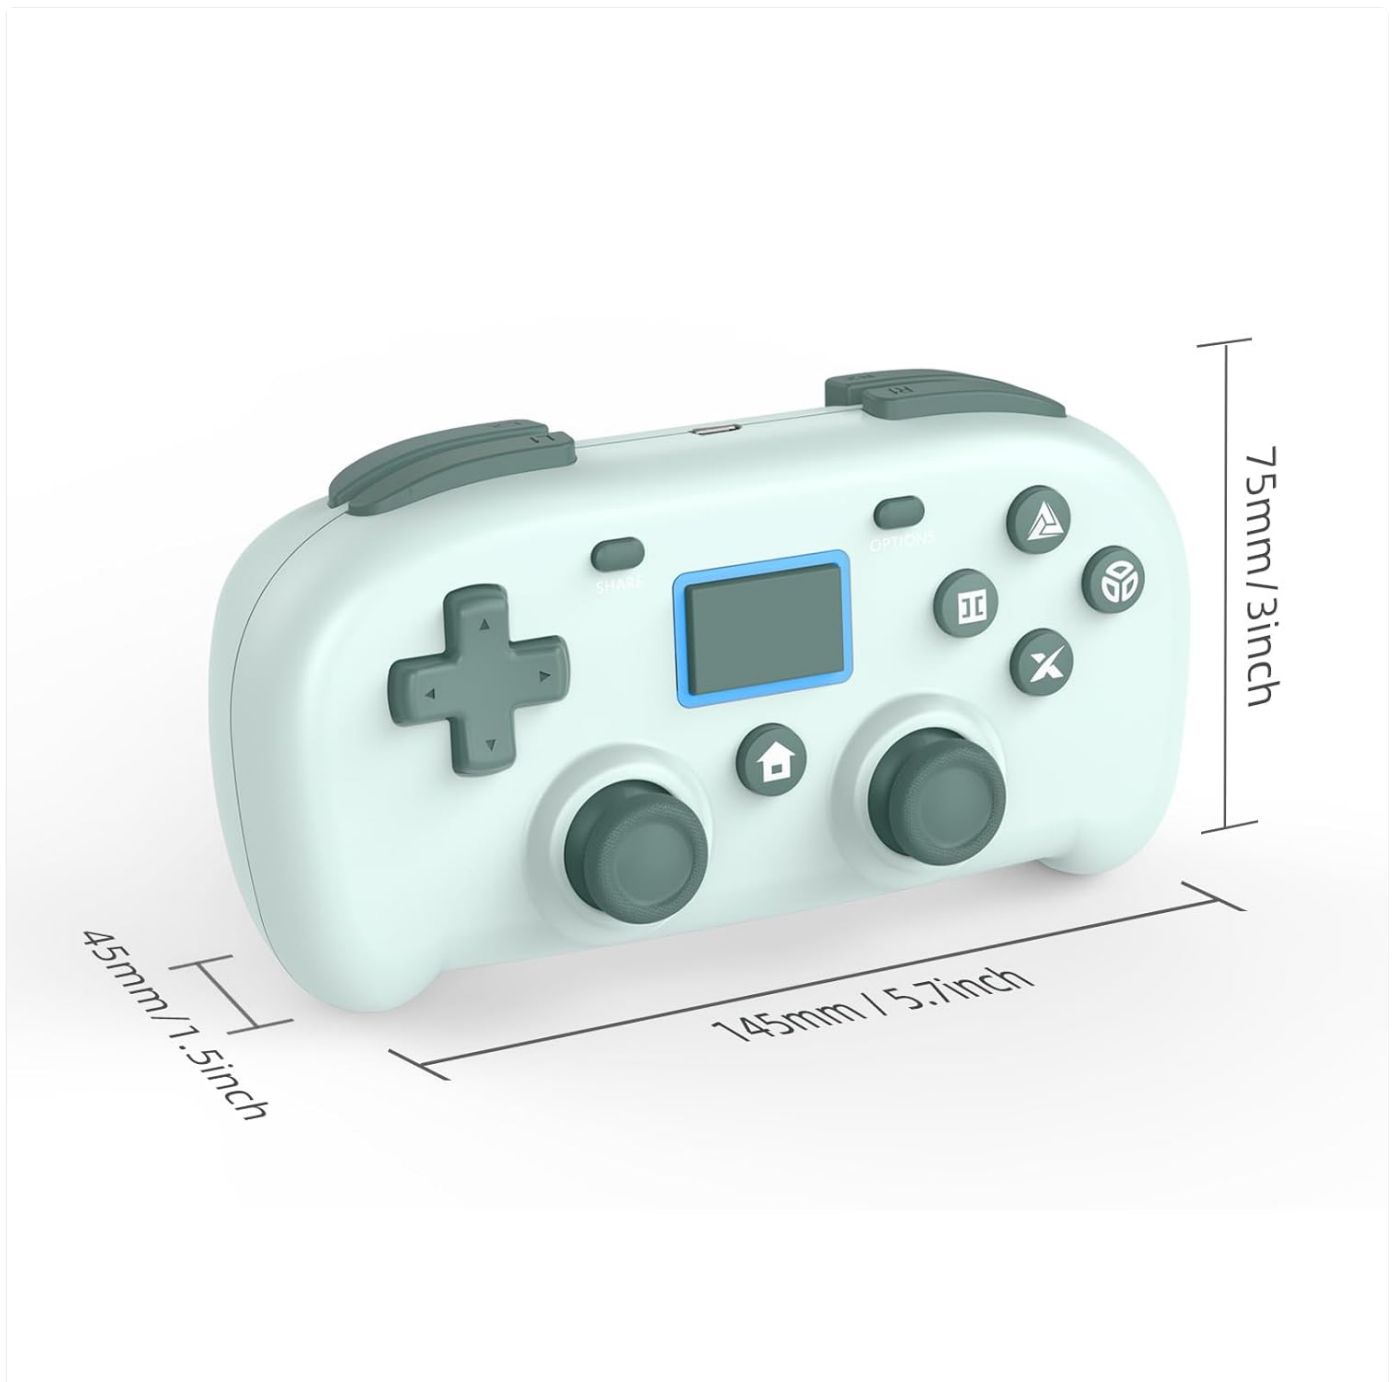


Image 8.1: Diagram showing the dimensions of the DYONDER Wireless Controller: 145mm (5.7 inches) in length, 75mm (3 inches) in width, and 45mm (1.5 inches) in height.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official DYONDER website. Keep your proof of purchase for warranty claims.

Note: Not supported on PS5.

10. PRODUCT VIDEOS

10.1 Mini Style Wireless Controller Overview

Your browser does not support the video tag.

Video 10.1: An overview of the DYONDER Mini Style Wireless Controller, demonstrating its compact size and various color options. This video highlights the physical design and aesthetic appeal of the controller.

10.2 Wireless Controller for PS4 Demonstration

Your browser does not support the video tag.

Video 10.2: A demonstration of the DYONDER Wireless Controller's functionality, focusing on its use with a PS4. This video showcases button responsiveness and overall performance during gameplay.

