

AGARO HS1719

AGARO 4-in-1 Hair Styler HS1719 User Manual

Model: HS1719

1. INTRODUCTION AND OVERVIEW

The AGARO 4-in-1 Hair Styler HS1719 is a versatile hair styling tool designed to provide multiple styling options including straightening, crimping, curling, and creating wavy hair. It features Keratin-infused ceramic coated plates for a smooth finish and operates at temperatures up to 200 degrees Celsius. This manual provides detailed instructions for safe and effective use of your new hair styler.

Your browser does not support the video tag.

Video: AGARO 4-in-1 Hair Styler HS1719 Product Overview. This video provides a general overview of the product's features and basic operation.

2. KEY FEATURES

- **4-in-1 Hair Styler:** Offers Straightener Plates, Crimper Plates, Hair Curler, and Wavy Hair functions.
- **Keratin Infused Ceramic Coated Plates:** Designed for a silky smooth finish and to prevent frizz.
- **Temperature Control:** Heats up to 200 Degrees Celsius.
- **Styling Settings Button:** Allows selection of desired styling mode.
- **Hanging Loop:** For convenient storage.
- **360° Swivel Power Cord:** Prevents tangling during use.
- **Cool Touch Tip:** Provides a safe area to hold the styler during use.
- **Power:** 220-240V/~ 50Hz, 65W.

3. PRODUCT COMPONENTS

Familiarize yourself with the different parts of your AGARO 4-in-1 Hair Styler:

Know Your 4-in-1 Hair Straightener

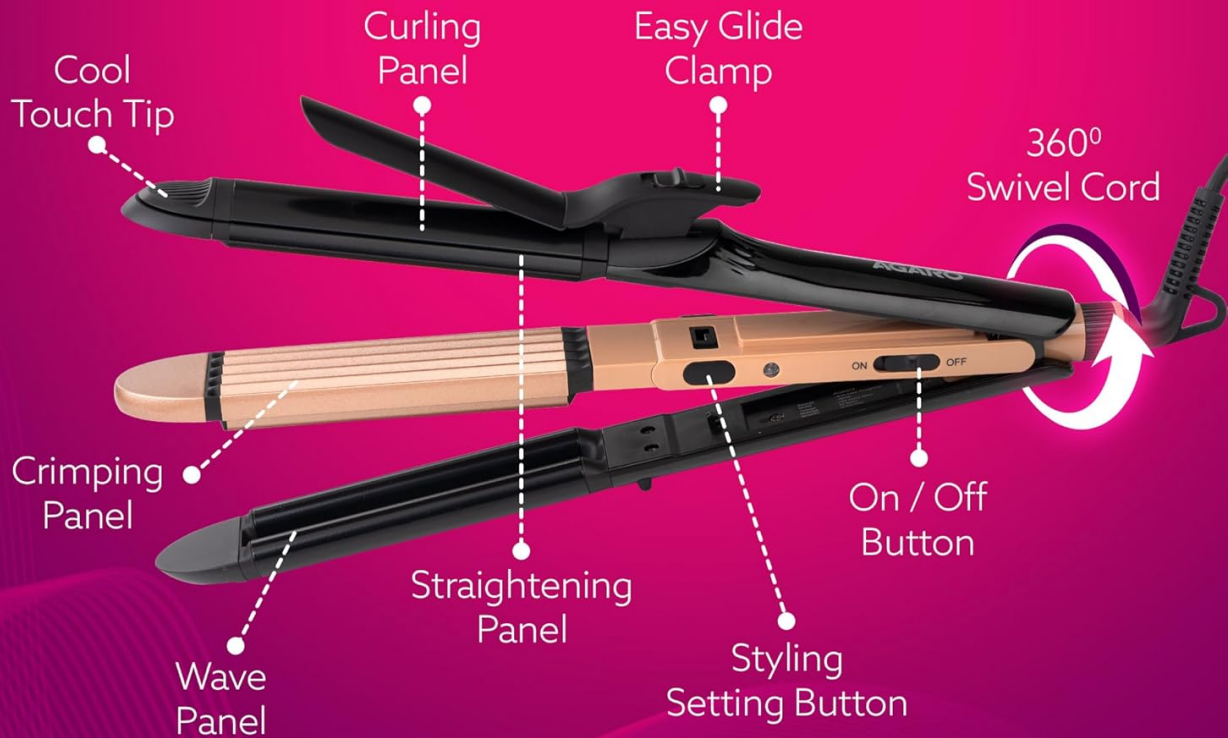


Image: Detailed diagram of the AGARO 4-in-1 Hair Styler, highlighting its various components such as the cool touch tip, curling panel, easy glide clamp, 360° swivel cord, crimping panel, straightening panel, wave panel, on/off button, and styling setting button.

- **Cool Touch Tip:** The end of the styler that remains cool for safe handling.
- **Curling Panel:** The rounded barrel used for creating curls.
- **Easy Glide Clamp:** Used to secure hair sections during curling.
- **360° Swivel Cord:** Power cord that rotates to prevent tangles.
- **Crimping Panel:** Textured plates for creating crimped hair.
- **Straightening Panel:** Flat plates for straightening hair.
- **Wave Panel:** Wavy plates for creating soft waves.
- **On/Off Button:** To power the device on or off.
- **Styling Setting Button:** To switch between different styling plate configurations.

4. SETUP

1. Unpack the AGARO 4-in-1 Hair Styler and ensure all components are present and undamaged.
2. Place the styler on a heat-resistant surface.

3. Plug the power cord into a suitable electrical outlet (220-240V/~ 50Hz).
4. Press the On/Off button to turn on the device. The indicator light will illuminate.
5. Allow the styler to heat up to the desired temperature (up to 200°C).

5. OPERATING INSTRUCTIONS

The AGARO 4-in-1 Hair Styler allows you to switch between different styling modes using the styling settings button. Ensure your hair is clean, dry, and detangled before styling.

Your browser does not support the video tag.

Video: Detailed demonstration of crimping, wavy hair, straightening, and curling techniques using the AGARO 4-in-1 Hair Styler.

5.1. Switching Between Styling Modes

- **To open Wavy Plates:** Hold all plates together and push the styling settings button all the way to the left.
- **To close plates for Curling Wand:** Keep the styling settings button in the center. All plates will close, forming a 32mm curling wand.
- **To open Crimping Plates:** Push the styling settings button to the right side.
- **To open Straightening Plates:** Push the button provided on the clamp.

5.2. Straightening Hair

1. Ensure the straightening plates are open.
2. Take a small section of dry hair.
3. Place the hair section between the straightening plates, close to the roots.
4. Hold the cool touch tip firmly and glide the styler slowly down the hair section from roots to ends.
5. Repeat for all sections until desired straightness is achieved.

5.3. Crimping Hair

1. Ensure the crimping plates are open.
2. Take a small section of dry hair.
3. Place the hair section between the crimping plates, close to the roots.
4. Hold for approximately 4-5 seconds.
5. Release and move the crimper down to the next section of hair, overlapping slightly with the previously crimped area.
6. Repeat this process slowly down the entire hair section.

5.4. Creating Wavy Hair

1. Ensure the wavy plates are open.
2. Take a small section of dry hair.
3. Place the hair section between the wavy plates, close to the roots.
4. Hold for approximately 2-3 seconds.
5. Release and move the styler down to the next section of hair, overlapping slightly.
6. Repeat this process slowly down the entire hair section to create continuous waves.

5.5. Curling Hair

1. Ensure the styler is in curling wand mode (plates closed).
2. Take a small section of dry hair.

3. Open the clamp and place the end of the hair section under the clamp.
4. Slowly wrap the hair around the curling barrel, moving upwards towards the roots.
5. Hold the hair in place for at least 30 seconds.
6. Release the clamp and gently slide the styler out, allowing the curl to form.
7. Repeat for all sections until desired curls are achieved.

6. MAINTENANCE

6.1. Cleaning

- Always unplug the styler and allow it to cool completely before cleaning.
- Wipe the plates and exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Ensure no moisture enters the internal components.

6.2. Storage

- Store the styler in a cool, dry place, away from direct sunlight and moisture.
- Utilize the hanging loop for convenient storage.
- Do not wrap the power cord tightly around the appliance, as this can damage the cord.

6.3. Safety Precautions

- Do not leave the styler running unattended.
- Keep hair stylers out of reach of children while waiting for the plates to cool down.
- Store them in a safe place immediately after the plates have cooled down.
- If possible, place them in a special heat-resistant pouch.

7. TROUBLESHOOTING

If you encounter any issues with your AGARO 4-in-1 Hair Styler, please refer to the following common solutions:

- **Device not turning on:** Ensure the power cord is securely plugged into a working electrical outlet and the On/Off button is pressed. Check the power supply.
- **Not heating up:** Verify the device is powered on. If it still doesn't heat, there might be an internal issue.
- **Hair getting snagged:** Ensure your hair is completely dry and detangled before use. Use small, manageable sections of hair.
- **Styling results are not as expected:** Adjust the section size of your hair and the speed at which you glide the styler. Ensure the correct styling plates are engaged for the desired effect.

For persistent issues, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Product Dimensions	35 x 6 x 6 cm
Item Weight	437 g

Feature	Specification
Item Model Number	34135 (HS1719)
Power Source	Corded Electric
Power Consumption	65W
Voltage	220-240V/~ 50Hz
Max Temperature Setting	200 Degrees Celsius
Heater Surface Material	Ceramic (Keratin Infused)
Color	Black & Rose Gold
Included Components	Hair Straightener
Country of Origin	China

9. WARRANTY AND SUPPORT

The AGARO 4-in-1 Hair Styler HS1719 comes with a **2 Year Warranty**. This warranty covers manufacturing defects of the product during the warranty period.

For any queries or concerns, you can connect with customer support through:

- **Email:** info@uclindia.com
- **Customer Support:** 9821486487
- **Timings:** 10:00 AM to 6:00 PM (IST) Monday-Saturday (Excluding Holidays)

Manufacturer: Universal Corporation Limited, Zhejiang, China