

A6S 5.2

A6S Air Pro 6 TWS Wireless Headphones

USER MANUAL

Introduction

Thank you for choosing the Generic A6S Air Pro 6 TWS Wireless Headphones. This manual provides detailed instructions on how to set up, operate, and maintain your new earphones. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

Safety Information

- Do not disassemble or modify the product. This may cause malfunction or damage and will void the warranty.
- Keep the earphones and charging case away from water, moisture, and extreme temperatures.
- Avoid prolonged exposure to high volume levels to prevent hearing damage.
- Clean the earphones with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Dispose of the product responsibly according to local regulations. Do not dispose of with household waste.

Package Contents

Please check the package for the following items:

- A6S Air Pro 6 TWS Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual (this document)

Product Overview



Individual Earbuds: This image displays the two individual A6S Air Pro 6 TWS wireless earbuds. One earbud shows its smooth, white outer surface with a small indicator light, while the other reveals the inner earpiece designed to fit into the ear canal, along with two small gold charging contacts.



Earbuds in Charging Case: This image shows the white A6S Air Pro 6 TWS charging case opened, with both earbuds securely placed inside. Four small indicator lights are visible on the case, indicating battery status. To the left, four circular icons represent key features: a chip icon (processor), a signal icon (connectivity), a chain link icon (pairing), and a speaker icon (audio).

Setup

1. Charging the Earbuds and Case

- Initial Charge:** Before first use, fully charge the charging case and earbuds. Place both earbuds into the charging case.
- Charging the Case:** Connect the provided USB charging cable to the charging port on the case and the other end to a USB power adapter (not included) or a computer's USB port. The indicator lights on the case will illuminate to show charging status. A full charge takes approximately 3 hours for the case.
- Charging the Earbuds:** When placed in the charged case, the earbuds will automatically begin charging. The indicator lights on the earbuds (if present) or case will show their charging status.

2. Pairing with Your Device

- Enable Bluetooth:** Ensure Bluetooth is enabled on your smartphone, tablet, or other Bluetooth-enabled device.
- Power On Earbuds:** Open the charging case. The earbuds will automatically power on and enter pairing mode. You may see a flashing indicator light on one or both earbuds.
- Search for Device:** On your device, go to the Bluetooth settings and search for available devices.
- Select "A6S":** From the list of found devices, select "A6S" (or similar name like "A6S 5.2").
- Confirm Pairing:** Once connected, the earbud indicator lights will typically stop flashing or turn off. You will hear an audible confirmation.
- Reconnect:** After initial pairing, the earbuds will automatically reconnect to the last paired device when taken out of the case, provided Bluetooth is enabled on the device.

Operating Instructions

The A6S Air Pro 6 TWS headphones feature touch controls for easy operation. The specific functions may vary slightly based on the exact model and firmware version.

Action	Function
Single Tap (Left/Right)	Play/Pause music, Answer/End call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap (Left/Right)	Activate Voice Assistant (Siri, Google Assistant)
Long Press (2 seconds)	Reject incoming call
Long Press (5 seconds)	Power On/Off (if not in case)

Note: Ensure earbuds are properly seated in your ears for optimal touch control response.

Maintenance

- Cleaning:** Regularly clean the earbuds, especially the ear tips and charging contacts, with a soft, dry, lint-free cloth. Do not use liquids or sprays directly on the earbuds.
- Storage:** When not in use, always store the earbuds in their charging case to protect them and keep them

charged. Store the case in a cool, dry place away from direct sunlight.

- **Battery Care:** To prolong battery life, avoid fully discharging the earbuds and charging case frequently. Charge them regularly, even if not in constant use.

Troubleshooting

Problem	Solution
Earbuds not pairing with device.	◦ Ensure earbuds are charged and out of the case. ◦ Turn off and on Bluetooth on your device. ◦ Forget "A6S" from your device's Bluetooth list and try pairing again. ◦ Ensure no other devices are connected to the earbuds.
Only one earbud is working.	◦ Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out again. ◦ Ensure both earbuds are charged. ◦ Try resetting the earbuds (refer to product-specific reset instructions if available, usually involves long-pressing touch areas while in case or out).
Low volume or poor sound quality.	◦ Adjust volume on both your device and the earbuds. ◦ Ensure earbuds are clean and free of debris. ◦ Check for interference from other wireless devices. ◦ Ensure earbuds are properly seated in your ears.
Earbuds not charging.	◦ Ensure the charging cable is securely connected to both the case and the power source. ◦ Check if the charging case itself has power. ◦ Clean the charging contacts on both the earbuds and inside the case. ◦ Try a different USB cable or power adapter.

Specifications

Feature	Detail
Model Name	A6S 5.2
Bluetooth Version	5.2
Bluetooth Mode	HFP/HSP/A2DP/AVRCP
Bluetooth Distance	10 meters (approx. 33 feet)
Running Time (Music Playback)	Approx. 3 hours
Talk Time	Approx. 3.5 hours
Charging Time	Approx. 3 hours (for case)

Feature	Detail
Frequency Range	20 Hz - 20,000 Hz
Water Resistance Level	Water Resistant
Material	Acrylonitrile Butadiene Styrene (ABS)
Control Method	Voice / Touch

Note: Battery life and performance may vary based on usage, device settings, and environmental factors.

Warranty and Support

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for warranty claims. For technical support, warranty inquiries, or further assistance, please contact the retailer or the manufacturer directly through their official support channels. Contact information is usually provided on the product packaging or the retailer's website. For more information, you may visit the product page on Amazon:[Amazon Product Page](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question